



User Guide

MiFi® 6620L
90026966 - R1

4GLTE

©2014 Novatel Wireless, Inc. All rights reserved. The information contained in this document is subject to change without notice and should not be construed as a commitment by Novatel Wireless, Inc.

Patents and Licenses

For a complete list of all Novatel Wireless patents, visit www.novatelwireless.com/about/contact-us.

Software License

Proprietary Rights Provisions:

The software drivers provided with this product are copyrighted by Novatel Wireless and/or Novatel Wireless' suppliers. Although copyrighted, the software drivers are unpublished and embody valuable trade secrets proprietary to Novatel Wireless and/or Novatel Wireless' suppliers. The disassembly, decompilation, and/or Reverse Engineering of the software drivers for any purpose is strictly prohibited by international law. The copying of the software drivers, except for a reasonable number of back-up copies is strictly prohibited by international law. It is forbidden by international law to provide access to the software drivers to any person for any purpose other than processing the internal data for the intended use of the software drivers.

U.S. Government Restricted Rights Clause:

The software drivers are classified as "Commercial Computing device Software" and the U.S. Government is acquiring only "Restricted Rights" in the software drivers and their Documentation.

U.S. Government Export Administration Act Compliance Clause:

It is forbidden by US law to export, license or otherwise transfer the software drivers or Derivative Works to any country where such transfer is prohibited by the United States Export Administration Act, or any successor legislation, or in violation of the laws of any other country.

Trademarks and Service Marks

Novatel Wireless is a trademark of Novatel Wireless, Inc., and the other trademarks, logos, and service marks (collectively the "Trademarks") used in this user manual are the property of Novatel Wireless or their respective owners. Nothing contained in this user manual should be construed as granting by implication, estoppel, or otherwise, a license or right of use of Novatel Wireless or any other Trademark displayed in this user manual without the written permission of Novatel Wireless or its respective owners.

- Novatel Wireless, and the Novatel Wireless logo are all trademarks of Novatel Wireless, Inc.
- MiFi® and the MiFi logo are registered trademarks of Novatel Wireless, Inc.
- Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Apple®, Mac®, and Mac OS® are trademarks of Apple, Inc., registered in the U.S. and other countries.
- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

The names of actual companies and products mentioned in this user manual may be the trademarks of their respective owners.

Novatel Wireless Revision History

Part Number	Revision	Description	Date
90026966	R1	Initial release	25 Sep 2014

FCC ID: PKRNVWMIFI6620

PN: 90026966_R1_MASTER_UG_MiFi6620L_VZW_25 Sep 2014

Please visit www.novatelwireless.com for the latest information about your device.

Contents

Getting Started	1
Overview	2
Features	2
Package Contents	3
System Requirements	3
Components	4
Status Indicators	5
Power Management	7
Caring for Your Jetpack	8
Using Your Jetpack	9
Accessing the Network	10
4G LTE	10
Using Your Jetpack for the First Time	11
Charging the Battery	12
Replacing the Battery	12
Replacing the 4G LTE SIM Card	14
Universal Charging	15
Battery Tips	16
Power the Jetpack On and Off	17
Power On	17
Power Off	17
Connecting to Your Jetpack	18
Using Your Jetpack After Setup is Complete	20
Using the Jetpack User Interface	23
Jetpack Settings	25
Managing Your Jetpack	26
On the Jetpack Display	26
On the Jetpack Admin Website	27
Sign In	28
Sign In to the Jetpack Admin website	28
Menu Panel	29
My Jetpack Home	30
On the Jetpack Display	30
On the Jetpack Admin Website	31
Manage My Jetpack	32
My Account & Tools	38
Help & Support	44

Data Usage	47
On the Jetpack Display	47
On the Jetpack Admin Website	48
Connected Devices	49
On the Jetpack Admin Website	50
Connected Devices	50
Blocked Devices	53
Jetpack Settings	55
On the Jetpack Display	55
Wi-Fi	55
Screen Timeout	55
Audio On/Off	56
Audio Alerts	56
Network Technology	57
On the Jetpack Admin Website	58
Wi-Fi	59
Jetpack	61
Advanced	70
Firewall	76
Universal Charging	83
On the Jetpack Display	83
On the Jetpack Admin Website	83
Wi-Fi Protected Setup (WPS)	84
On the Jetpack Display	84
On the Jetpack Admin Website	85
Software Update	86
On the Jetpack Display	86
On the Jetpack Admin Website	86
Messages	87
On the Jetpack Display	87
On the Jetpack Admin Website	88
Parental Controls	90
Summary	90
Site List	90
Device List	93
About Jetpack	94
On the Jetpack Display	94
On the Jetpack Admin website	95
Internet Status	95
Jetpack Info	97
Diagnostics	98
Logs	103
Help	106
On the Jetpack Display	106

Troubleshooting 107
Overview. 108
Common Problems and Solutions. 109
Technical Support 113
 Technical Support 113

Product Specifications and Regulatory Information 114
Product Specifications 115
 General 115
 Technology/Bands. 115
 Environmental. 116
Regulatory Statements 117
Wireless Communications. 119
Limited Warranty and Liability 119
Safety Hazards. 120
Proper Battery Use and Disposal 122

Glossary. 123

1

Getting Started

Overview
Power Management
Caring for Your MiFi 6620L

Overview

Congratulations on your purchase of the Verizon Mobile Hotspot - MiFi® 6620L for 4G LTE™ and Wi-Fi!

With the Jetpack you can access 4G LTE networks for faster apps, uploads and downloads. Connect up to 15 Wi-Fi enabled devices to the Internet at once - laptops, tablets, e-readers, gaming consoles and more* - and experience download speeds up to 10 times faster than with Verizon's 3G*.

The Jetpack is backwards compatible to 3G networks, ensuring reliable connectivity when you need it most.

Features

- **Global Connectivity for up to 15 Wi-Fi Enabled Devices to High-Speed Wireless Data**
 - Connect to 4G LTE and numerous Global Bands.
- **Universal Charging**
 - The built-in Universal Charger provides a spare charge for tablets, smartphones and other devices running low on battery power.
- **Up to 20 Hours of Battery Life on a Single Charge**
- **Manage Wireless Network Activity**
 - **MiFi Settings** is an easy-to-use web-based interface that allows you to manage, monitor, and customize your Wi-Fi and 4G LTE connection.
- **Advanced Embedded Antenna Design**
- **VPN Capability**
- **Auto Connectivity Options**
- **Parental Controls**

* Average download speeds of 5-12 Mbps/average upload speeds of 2-5 Mbps. Actual throughput speed and coverage may vary.

Package Contents

The Verizon Wireless MiFi 6620L package includes:

- MiFi 6620L
- 4000mAh Standard Lithium Ion Battery
- Pre-installed 4G LTE SIM Card
- Wall Charger
- USB Cable
- Verizon Wireless Brochures


System Requirements

- Compatible with all major operating systems
- Works with the latest versions of browsers, including Android™, Google Chrome®, Firefox®, Internet Explorer®, Safari™ and Mobile Safari™.

To use Wi-Fi mode, your computer or other device needs Wi-Fi capability and Internet browser software. If your computer does not have Wi-Fi capability you can use Ethernet over USB tethering.

Your Jetpack must have proper data service to function. (See [Using Your Jetpack for the First Time](#) on page 11.)

Components

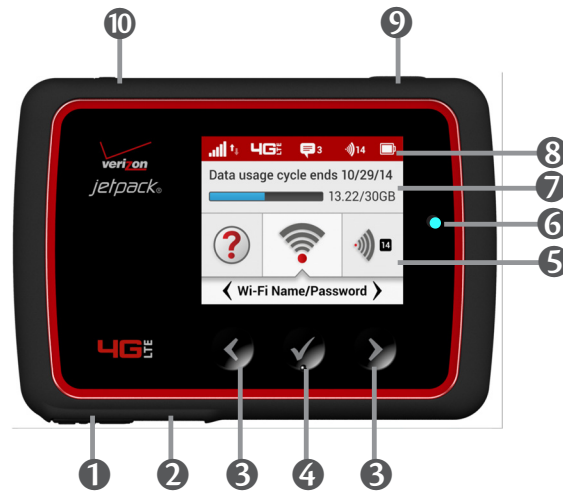











- ① **Universal Charging Port** — Use to charge one additional wireless device.
- ② **Jetpack Charging Port** — Use to connect the wall charger or to tether a device.
- ③ **Navigation Buttons** — Scrolls left/up or right/down through available menu options.
- ④ **Select Button** — Use to select a menu option.
- ⑤ **Home Screen** — Displays the status bar, data usage meter, and menu options.
- ⑥ **LED Indicator** — When the display is off and the Jetpack is turned on, the LED indicator blinks.
- ⑦ **Real-time Data Usage Meter** — Displays current data usage in GB and cycle end date.
- ⑧ **Status Bar** — Provides connection and battery status, network signal strength, roaming status, number of unread messages, and the number of users connected with Wi-Fi.
- ⑨ **Power Button** — Powers the Jetpack on and off, and turns display back on when device is in power-saving mode.
- ⑩ **Test port** — Use for testing and diagnostics.
















- ① **SIM Card Slot** — The SIM card is pre-installed here.
- ② **Battery Removal Divot** — Insert a fingernail here and lift to remove the battery.
- ③ **Battery Compartment** — The battery contacts connect here.
- ④ **Master Reset Button** — Insert a paperclip in the small hole to reset the Jetpack to factory settings. (See [How do I reset the Jetpack back to factory settings?](#) on page 109.)


Status Indicators

DISPLAY ICON		DESCRIPTION
No icons		The Jetpack is powered off or not receiving power, or the screen is in power-saving mode.
Network Signal Strength		More bars indicate more signal strength.
Activity Indicator		If this icon is displayed, data is being transferred between your Jetpack and connected device(s).
Network Indicator		Displays the type of network to which your Jetpack is connected.
Roaming		If this icon is displayed, your Jetpack is connected to a network outside the home network area.
International Roaming		If this icon is displayed, your Jetpack is connected to a network outside the United States.
Messages		If this icon is displayed, you have unread Verizon system messages.
Connected Devices		If this icon is displayed, it shows the number of devices connected to your Jetpack.
Battery Charge Indicator		Displays remaining battery power
Battery AC Charging Indicator		Displays when the Jetpack is connected to the AC charger.
Battery USB Charging Indicator		Displays when another device is connected to the Jetpack and charging via a USB cable.

CAROUSEL ICON

Wi-Fi		Scroll and select the icon to display the Wi-Fi name, password and URL.
SIM		If this icon is displayed, there is no SIM card installed.
		If this icon is displayed, your SIM is locked. Real-time data usage meter will not display.
		If this icon is displayed, there is a SIM error. Check to be sure your SIM card is properly installed.
Connected Devices		Scroll and select the icon to display the number and IP address of connected and blocked devices .
Data Usage		Scroll and select the icon to view the amount of data used as of the current date and the usage billing cycle.
Settings		Scroll and select the icon to display settings options, including Wi-Fi, screen timeout, audio on/off, audio alerts, and network technology.
Universal Charging		Scroll and select icon to display Universal Charging status. Options include Available, Charging, or Not available.
WPS		Scroll and select icon to set WPS.
Software Update		Scroll and select the icon to display the current SW version, and to download and install an update.
Message Center		Scroll and select the icon to display unread messages, and to save or delete read messages.
About Jetpack		Scroll and select the icon to display Internet connection status and Jetpack information, including model, SW version, wireless number, IMEI, and battery level.
Help		Scroll and select the icon to display Jetpack Admin website connection instructions, Advanced Features, WPS, Unlock SIM, and Tips.

FRONT PANEL

Power Indicator		When the display is off and the Jetpack is turned on, the Power indicator blinks.
-----------------	---	---

Power Management

Your Jetpack will work from its charged battery alone, or when the device with the installed battery is plugged into a power source.

- **Battery** — Charge the battery by plugging in the wall charger. While the battery is charging the battery charging icon displays. When the battery is fully charged, the battery icon is solid.
- **USB wall charger** — You can use the Jetpack when the battery is installed and the charger is plugged into a wall socket. Please ensure the wall socket is located near the equipment and is easily accessible. The MiFi battery charges while it is plugged into the charger.
- **Universal charging** — You can use the Jetpack to charge external devices such as smartphones and tablets, to help keep you powered and connected longer.

Before using the Jetpack, read the battery safety information in the "Safety Hazards" section of this guide. (See [Proper Battery Use and Disposal](#) on page 122.)

Caring for Your Jetpack

Like any electronic device, the Jetpack must be handled with care to ensure reliable operation. Novatel Wireless recommends the following guidelines:

- Protect the Jetpack from liquids, dust, and excessive temperatures.
- Do not apply adhesive labels to the Jetpack; they might cause the Jetpack to potentially overheat and they might alter the performance of the antenna.
- Store the Jetpack in a safe place when not in use.

Using Your Jetpack

Accessing the Network
Using Your Jetpack for the First Time
Connecting to Your Jetpack
Using Your Jetpack After Setup is Complete

Accessing the Network

4G LTE

With LTE bandwidth you can get the broadband speed you require to work efficiently outside the home or office. You can connect to the Internet, access your corporate intranet, check your email and download attachments at speeds that are up to 10 times faster than 3G*.

4G Mobile Broadband with LTE*

- Download: typical download speeds of 5-12 Mbps.
- Upload: typical upload speeds of 2-5 Mbps.

3G Mobile Broadband with EVDO Rev. A

- Download: typical download speeds of 600 kbps–1.4 Mbps with bursts up to 3.1 Mbps.
- Upload: typical upload speeds of 500-800 kbps with bursts up to 1.8 Mbps.

Wi-Fi 802.11a/b/g/n

- 802.11a uses the 5.0 GHz frequency with a bandwidth up to 12 Mbps.
- 802.11b uses the 2.4 GHz frequency with a bandwidth up to 12 Mbps.

* Actual throughput speed and coverage may vary. Speed claims not applicable when roaming.

Using Your Jetpack for the First Time

Your SIM Card and battery are pre-installed. To get started:

- ① Confirm your computer meets the minimum system requirements. (See [System Requirements](#) on page 3).
- ② Fully charge the battery. (See [Charging the Battery](#) on page 12).
- ③ Power on the Jetpack. (See [Power the Jetpack On and Off](#) on page 17).
- ④ Connect the Jetpack to your computer using Wi-Fi. (See [Connecting to Your Jetpack](#) on page 18.)

Charging the Battery

IMPORTANT Before you use your Jetpack, be sure to charge the battery for at least three hours to ensure a full initial charge. When fully charged, the battery has up to 20 hours of life.

To charge the battery:

- 1 Connect the micro USB end of the charger into the charging port of the Jetpack.
- 2 Plug the other end of the wall charger into the appropriate electrical outlet.

CAUTION! Use only batteries and chargers with your Jetpack that have been approved by Novatel Wireless for optimal performance and safe operation.

Replacing the Battery

To remove and replace the battery:

- 1 Press your finger against the battery door removal tab, then lift and remove the battery cover. Set the cover aside.



- 2 Insert your finger into the battery removal divot and lift the battery out of the battery compartment.



- 3 Align the gold-colored contacts on the new battery with the gold-colored contacts on the MiFi 6620L and gently slide the battery into place.



- ④ Replace the cover by setting it on the Jetpack where the notches align, then press on the cover until it clicks into place and is flat across the entire bottom surface.



Replacing the 4G LTE SIM Card

Your SIM (Subscriber Identity Module) card is a small rectangular plastic card that stores your phone number and important information about your wireless service. Your Jetpack comes with the SIM card and battery already installed.

To remove the 4G LTE SIM card:

- 1 Remove the battery cover located on the underside of the Jetpack.
- 2 Remove the battery from the back of the Jetpack by inserting your fingernail into the battery removal divot and lifting the battery out of the battery compartment.



- 3 Locate the SIM Card protector and lift to open.
- 4 Push the SIM Card toward the SIM Card slot to release, then carefully slide the card backwards to remove.



NOTE Should your 4G SIM card be lost or damaged, contact your network operator.

To install a new 4G LTE SIM card:

- 1 Remove the battery cover located on the underside of the Jetpack.
- 2 If necessary, remove the SIM card from the outer card, being careful not to touch the gold-colored contacts.
- 3 Hold the card with the gold-colored contact points facing down.
- 4 Insert the SIM card into the slot. The SIM card **MUST** remain in the SIM card slot when in use.



CAUTION! Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

Universal Charging

The universal charging port allows you to charge an additional device using your Jetpack.

To charge an additional device:

- 1 Slide the port shield to expose the USB universal charging port.
- 2 Connect the USB cable to the device to be charged.
- 3 Connect the other end of the USB cable to the Universal Charging port on the Jetpack.



Battery Tips

WARNING! Always use only approved batteries and chargers with your Jetpack. The warranty does not cover damage caused by non-approved batteries and/or chargers.


- It normally takes at least three hours to fully charge the battery with the wall charger.
- Do not use sharp objects or use excessive force to remove the battery or to access the battery well, this may damage the Jetpack and the battery.
- The battery discharges more rapidly as additional devices access your Jetpack.
- Battery life depends on the network, signal strength, temperature, features, and accessories you use.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -20°C (4°F) or above 60°C (140°F).
- Never leave the Jetpack in an unattended vehicle due to uncontrollable temperatures that may be outside the desired temperature for this Jetpack.
- Some batteries perform best after several full charge/discharge cycles.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

IMPORTANT Whenever you remove or insert either the battery or the SIM card, ensure your Jetpack is not connected to any device or power source. Never use tools, knives, keys, pens or any type of object to force the door open or to remove the battery. Using any of these types of objects could result in puncturing the battery.

Power the Jetpack On and Off

Power On

- Press the Power Button until the Jetpack display lights up. After the initial startup screens display, the Home screen and menu options are available.

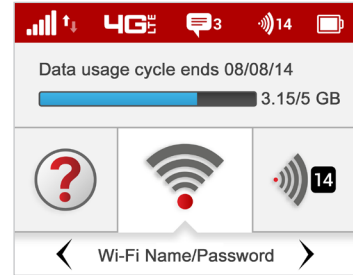

Power Off

- Press and hold the Power Button until the display shows **MiFi**. The Jetpack will continue its shutdown process for several seconds and then automatically turn off the display.




Connecting to Your Jetpack

Now you can connect your Wi-Fi enabled device to your Jetpack using Wi-Fi. Your computer, tablet, or other Wi-Fi enabled devices need Wi-Fi capability and Internet browser software. Your Jetpack is compatible with all major operating systems, and works with the latest version of browsers, including Android™, Chrome™, Firefox®, Internet Explorer®, Safari™ and Mobile Safari™.

Welcome Tutorial

The Jetpack Welcome Tutorial displays upon initial power up.

- 1 Power on your Jetpack for the first time to display the Welcome Tutorial screen.
- 2 Press the select button to navigate through the tutorial screens.

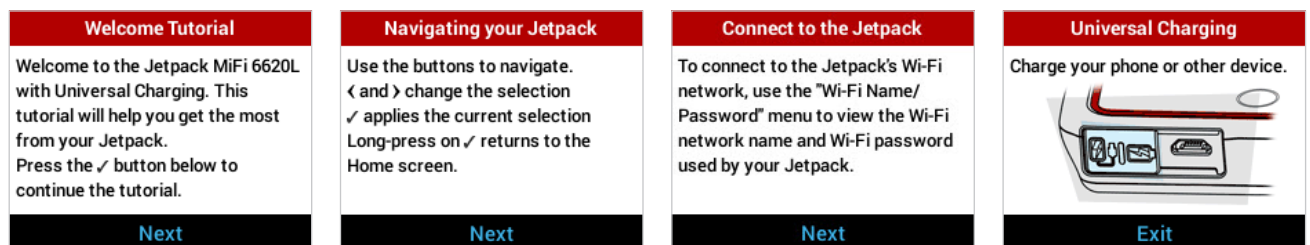

Welcome Tutorial


Navigating Your Jetpack

Connect to the Jetpack


Universal Charging

To access your Wi-Fi Name (SSID) and Wi-Fi Password after the initial power up or a device reset:


- 1 Power on your Jetpack.
- 2 Select **Wi-Fi Name/Password** to display the Wi-Fi Name/Password page.
- 3 Select **More** to display the Wi-Fi Settings page and display your Admin Password. Press the select button to exit and return to the Home screen and menu options.

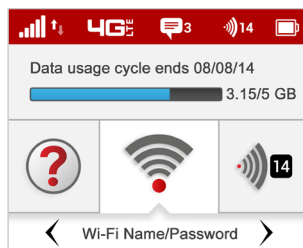

Wi-Fi Name/Password Option

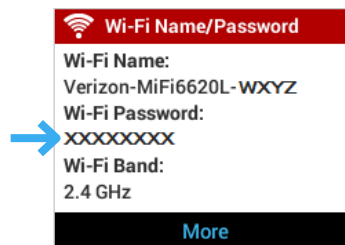

Display Wi-Fi Name/Password

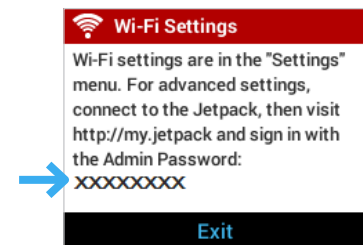

Display Wi-Fi Settings Directions

To connect to your Jetpack:

- 1 Turn on your Wi-Fi enabled device and turn on your Jetpack using the power button. The Jetpack display will light up. The Jetpack broadcasts its own wireless network and name.
- 2 Open the Wi-Fi application or controls on the computer or Wi-Fi enabled device that you want to connect to your Jetpack and find the Wi-Fi name (SSID).

Tip!

The steps to connect to a Wi-Fi network vary depending on your operating system and whether you use the native application or third-party software. Generally, you click an icon in the Windows notification area where you can select **View Available Wireless Networks**, or click the Airport icon in the menu bar on a Mac. If you are unfamiliar with wireless networking on your computer, consult the computer help system.

- 3 When prompted, enter your Wi-Fi Network password. The Jetpack Home screen should now show an additional connected device. Your Wi-Fi enabled device is now connected to the Internet.
- 4 You can view or change Jetpack settings by connecting to the Jetpack Admin website at <http://my.jetpack> or <http://192.168.1.1>.


IMPORTANT Charge the battery completely before you connect your computer to your Jetpack. (See [Charging the Battery](#) on page 12).

Using Your Jetpack After Setup is Complete

You can use the Jetpack as a wireless mobile hotspot to connect your computer and up to a total of 15 Wi-Fi enabled devices to the mobile broadband network. The Jetpack is powered on as soon as you press and hold the power button and the display turns on.

To find the name of the Wi-Fi Network (SSID) and Wi-Fi Password on the Jetpack display:


- 1 Select **Wi-Fi Name/Password** to display the Wi-Fi Name/Password page.
- 3 Select **More** to display the Wi-Fi Settings page for directions to access advanced settings. Press the select button to exit and return to the Home screen and menu options.

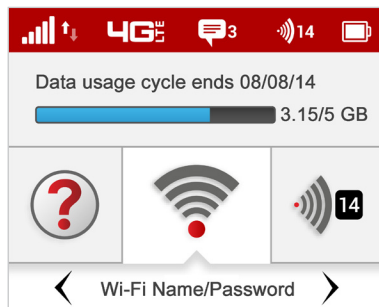

Wi-Fi Name/Password Option




Display Wi-Fi Name/Password

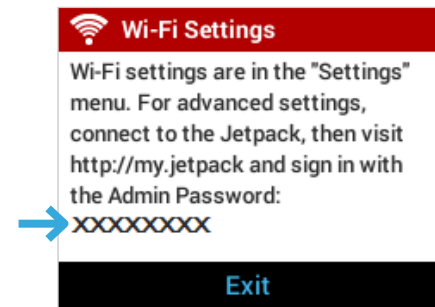


Display Wi-Fi Settings Directions

The Jetpack comes from the factory with security enabled. You can change the security settings using the Jetpack Admin website. To change your Jetpack security settings:


- 1 Open the web browser of a device connected to the Jetpack and enter **http://my.jetpack** or **http://192.168.1.1**.
- 2 Login with the Jetpack Admin Password which can be found on the Jetpack display by selecting **Help > Jetpack Admin website**. The default Admin Password is **admin**. Press and hold the select button to return to the Home screen.

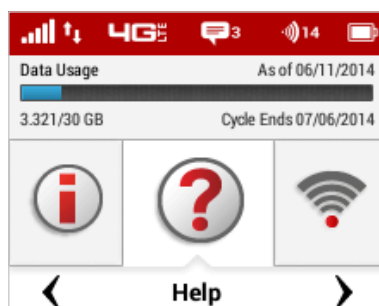

Help Option

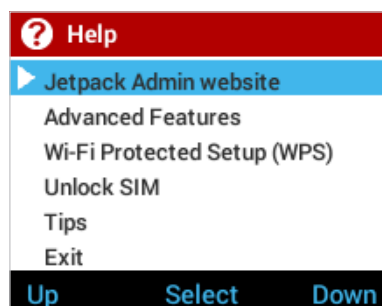

Select Jetpack Admin Website

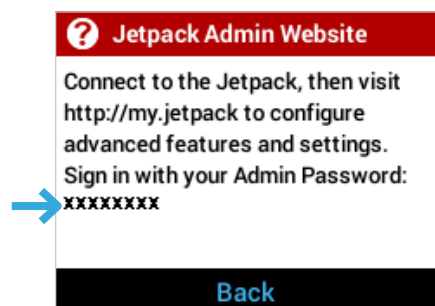

Admin Password

- 3 To change your Wi-Fi Name/Password, from My Jetpack Home select **Manage My MiFi > Customize my Wi-Fi Settings**.
- 4 Enter the new Wi-Fi Name in the Wi-Fi name field and the new Wi-Fi Password in the Wi-Fi Password field.

- 5 Click **Save Changes**.

The screenshot shows the Verizon Jetpack Settings interface. The top navigation bar includes the Verizon logo, signal strength, Verizon 4G LTE, battery level, and a 'Sign Out' button. The left sidebar contains menu items: My Jetpack Home, Data Usage, Connected Devices (with a notification badge), Jetpack Settings (highlighted), Messages, Parental Controls, and About Jetpack. The main content area is titled 'Jetpack Settings' and has three tabs: 'Wi-Fi', 'Jetpack', and 'Advanced'. A warning message states: 'Changes made to these Wi-Fi settings may require you to reconnect your Wi-Fi devices to this Jetpack using the new settings.' The 'Wi-Fi' section has a toggle switch set to 'ON'. Below this, there are several configuration fields: 'Wi-Fi name (SSID):' with the value 'Verizon-MiFi0620L-WXYZ' (indicated by a blue arrow), 'Security:' with a dropdown menu set to 'WPA2 Personal PSK (AES)', 'Wi-Fi password (Key):' with the value '00X00Y00Z' (indicated by a blue arrow), 'Max Wi-Fi connections:' with a dropdown set to '15', and 'Band:' with a dropdown set to '2.4 GHz'. There are also links for '2.4 GHz Band Settings', '5 GHz Band Settings', and 'Wi-Fi Options'. A warning icon and text at the bottom of the settings area state: 'Devices connected to this Jetpack use data from your data plan. Performance may vary with the number of devices.' A red 'Save Changes' button is located at the bottom right, with a blue arrow pointing to it.

Change Wi-Fi Name/Password

- 6 To change your Admin Password from My Jetpack Home, select **Manage My MiFi > Change my Jetpack Admin Password**.
- 7 Enter your current Admin Password in the Enter current password field.
- 8 Enter your new password in the Enter new password field, and re-enter to confirm in the Confirm new password field.

9 Click **Save Changes**.

verizon wireless

Verizon 4G LTE

Sign Out

My Jetpack Home

Data Usage

Connected Devices 1

Jetpack Settings

Messages

Parental Controls

About Jetpack

Jetpack Settings

Wi-Fi Jetpack **Advanced**

Jetpack Admin Password Preferences Software Update Backup and Restore GPS

The Jetpack Admin Password is used to sign in to this web-based management system.

Display the Jetpack Admin Password

If on, the Jetpack Admin Password can be read on the LCD display. Otherwise ***** is displayed. **ON**

Change Jetpack Admin Password

Enter and confirm the new Admin Password, and set or change the security question used for verification if you forget the Admin password.

Current Jetpack Admin password: [password field]

New Admin password: [password field] Password must be at least 6 characters.

Confirm new Admin password: [password field]

Select security question: [dropdown menu: What is your date of birth? (mm/dd/yyyy), What is your mother's maiden name?, What is the name of the street you grew up on?]

Answer security question: [text field]

Save Changes

NOVATEL WIRELESS

MiFi[®] Powered








Copyright ©2014. Novatel Wireless, Inc. All rights reserved. Novatel Wireless, MiFi 6820L and MiFi are either trademarks or registered trademarks of Novatel Wireless, Inc.

Change Jetpack Admin Password

Using the Jetpack User Interface


From the Jetpack display you can check your Jetpack status, view your current data usage, and access an icon-based menu by using the Navigation and Select buttons. (See [Status Indicators](#) on page 5).

To view the current status of your Jetpack:

- 1 Press the power button to turn on the Jetpack and display the Home screen. The status bar is at the top of the screen.
- 2 Check the status indicators for network signal strength , data traffic activity , unread Verizon system messages , active roaming  /international roaming , connected devices , and battery strength .

To view your current data usage:

- 1 Use the real-time data usage meter on the Home screen to check your data usage and billing cycle schedule.

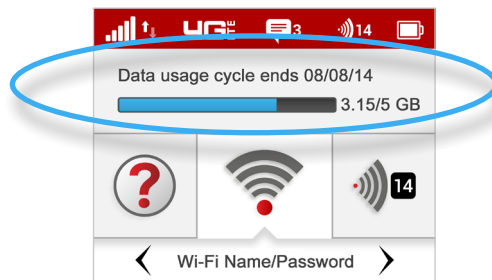

Jetpack Display Home


- 2 If SIM Lock is turned on, or if another device is connected to the Universal Charging port and being charged, the Data Usage meter will not display. Scroll to the Data Usage icon and press the select button to view your current data usage details.



SIM Lock Turned On



Retrieve Data Usage

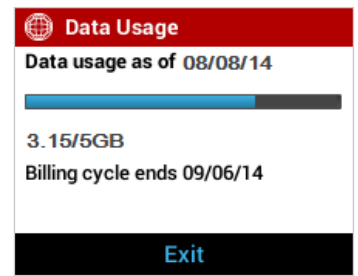

Data Usage Display

To access the icon-based menu options:

- From the Home screen, use the navigation buttons to move left or right to highlight the desired Menu option, then press the select button to open the highlighted option. Continue to press the select button to move through any additional screens.



Press Select to Open Option Menu




Scroll Up/Down to Desired Option



Press Select to View Desired Option



Press Select to go Back to Option Menu

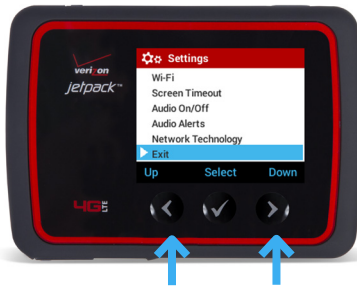

Scroll down to the Exit Option



Press/Hold Select to Return Home

Jetpack Settings

Managing Your Jetpack
My Jetpack Home
Data Usage
Connected Devices
Jetpack Settings
Universal Charging
WPS
Messages
Parental Controls
About Jetpack

Managing Your Jetpack

Manage, monitor, and customize your Jetpack settings directly on the Jetpack, or by using the Jetpack Admin website.

On the Jetpack Display

- 1 Power on your Jetpack by pressing and holding the power button until the display lights and the Home screen displays.
- 2 Use the status bar to monitor network signal strength, data activity, roaming, messages, connected devices, universal charging, and battery life .
- 3 Use the Real-time Data Usage meter to monitor current data usage and billing cycle schedule.
- 4 Use the navigation buttons to scroll to the desired Menu option.
- 5 Press the select button to open the selected Menu screen.
- 6 To return to the Home screen from any other screen, press and hold the select button until the Home screen displays.



Jetpack Status



Real-time Data Usage




Scroll & Select

On the Jetpack Admin Website

To connect to the Jetpack Admin website and customize your Jetpack settings:

- 1 Connect your computer or Wi-Fi enabled device to your Jetpack to access the Internet. (See [Connecting to Your Jetpack](#) on page 18.)
- 2 Open your connected device's web browser and type <http://my.jetpack/> or <http://192.168.1.1> into the address bar. Press **Enter**. The My Jetpack Home page opens. (See [Sign In](#) on page 28.)

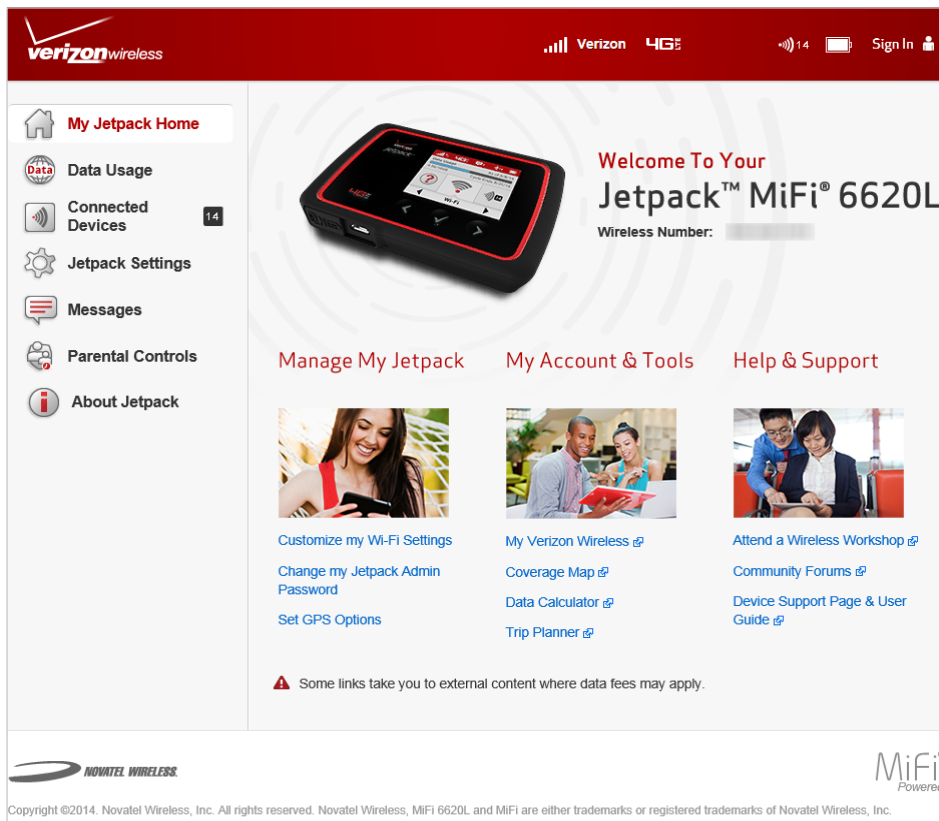


My Jetpack Home

- 3 Click **Sign In** in the upper right corner of the window and type your Jetpack Admin password in the **Admin password** field and click **Sign In** to display the My Jetpack Home page. (See [My Jetpack Home](#) on page 30.)

You are now able to customize your Jetpack settings configuration.

Sign In

The Sign In page is the first page you see after connecting and prior to signing in. You can access more information after you sign in.

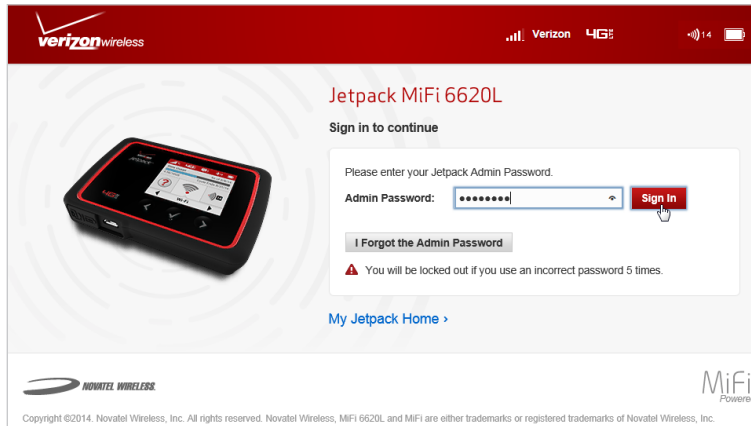


Jetpack Sign In

Sign In to the Jetpack Admin website

Type the Jetpack Admin Password (the default password is found on the Jetpack by selecting **Help > Jetpack Admin website**) in the **Sign In** field at the top right corner of the window. Click **Sign In**.


If you forget your Admin Password, click **I Forgot the Admin Password** and a reminder will appear telling you where to find your password. Click **OK**.

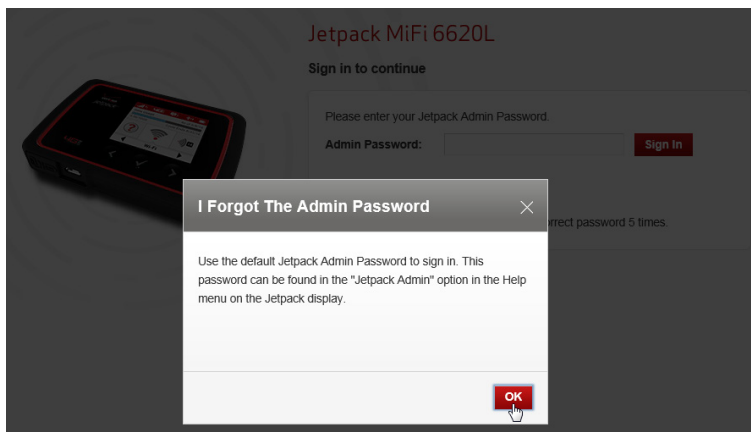

Jetpack Admin Password Reminder

Menu Panel

The Menu Panel is the primary navigation for MiFi Settings. You can access each feature under the appropriate menu.

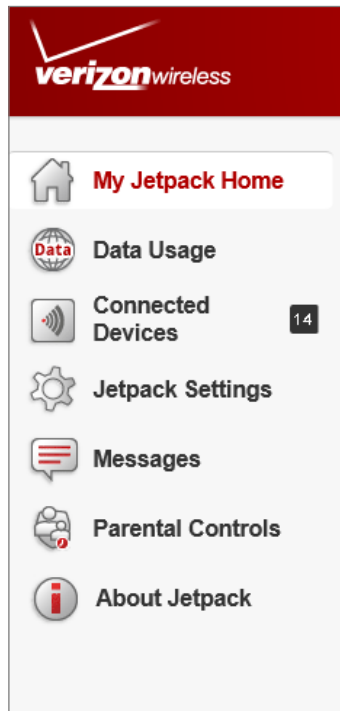


My Jetpack Home - Menu Panel

My Jetpack Home


My Jetpack Home is your gateway to configuring and managing your Jetpack.

On the Jetpack Display


- 1 Power on your Jetpack by pressing and holding the power button until the display lights and the Home screen displays.
- 2 Use the navigation buttons to scroll to the desired Menu option.
- 3 Press the select button to open the selected Menu screen.
- 4 To return to the Home screen, press/hold the select button to exit the selected Menu screen.

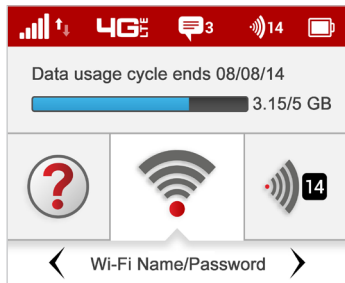

Home Screen Displays

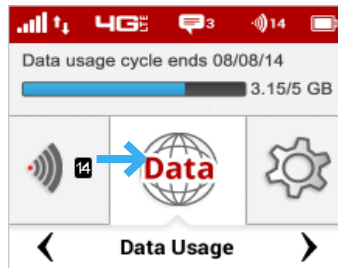

Scroll to Desired Menu Option

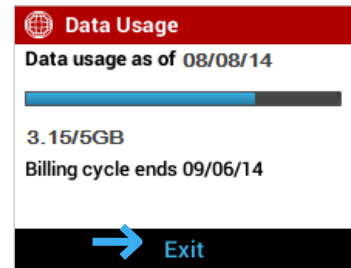

Press Select Button to Exit

On the Jetpack Admin Website

My Jetpack Home allows you to quickly access commonly used links and all available menu options for your Jetpack. My Jetpack Home contains the following quick link menu options:

- **Manage My Jetpack** (See [Manage My Jetpack](#) on page 32.)
- **My Account & Tools** (See [My Account & Tools](#) on page 38.)
- **Help & Support** (See [Help & Support](#) on page 44.)

The screenshot shows the Verizon Jetpack Admin Website's "My Jetpack Home" page. At the top, there is a red header with the Verizon Wireless logo on the left and status icons (signal strength, Verizon 4G, battery, and a "Sign In" button) on the right. Below the header is a navigation sidebar on the left with icons and text for: My Jetpack Home (highlighted), Data Usage, Connected Devices (with a "14" badge), Jetpack Settings, Messages, Parental Controls, and About Jetpack. The main content area features a large image of a Jetpack MiFi 6620L device with the text "Welcome To Your Jetpack™ MiFi® 6620L" and a "Wireless Number:" field. Below this are three columns of quick links: "Manage My Jetpack" (with a photo of a woman on a phone), "My Account & Tools" (with a photo of a couple), and "Help & Support" (with a photo of two people at a workshop). Each column lists several links with external icons. At the bottom of the main area, a warning icon and text state: "Some links take you to external content where data fees may apply." The footer contains the Novatel Wireless logo, the MiFi Powered logo, and a copyright notice: "Copyright ©2014, Novatel Wireless, Inc. All rights reserved. Novatel Wireless, MiFi 6620L and MiFi are either trademarks or registered trademarks of Novatel Wireless, Inc."

My Jetpack Home

Manage My Jetpack

The **Manage My Jetpack** menu contains the following options:

- **Customize my Wi-Fi Settings** (See [Customize my Wi-Fi Settings](#) on page 33.)
- **Change my Jetpack Admin Password** (See [Change my Jetpack Admin Password](#) on page 34.)
- **Set GPS Options** (See [Set GPS Options](#) on page 36.)



Welcome To Your
Jetpack™ MiFi® 6620L
Wireless Number: [redacted]

Manage My Jetpack My Account & Tools Help & Support

Manage My Jetpack
Customize my Wi-Fi Settings
Change my Jetpack Admin Password
Set GPS Options

My Account & Tools
My Verizon Wireless
Coverage Map
Data Calculator
Trip Planner

Help & Support
Attend a Wireless Workshop
Community Forums
Device Support Page & User Guide

⚠ Some links take you to external content where data fees may apply.

My Jetpack Home - Manage My Jetpack

NOTE

The next time you sign in to Jetpack Settings, you will need to use the new password.

Customize my Wi-Fi Settings

Clicking on **Customize my Wi-Fi Settings** takes you to the Jetpack Settings page Wi-Fi menu where you can customize Wi-Fi profiles and view details about the devices connected to your Jetpack. (See [Wi-Fi](#) on page 59.)

The screenshot shows the Verizon Jetpack Settings interface. At the top, there's a red header with the Verizon logo and status icons for signal strength, Verizon 4G, battery, and a 'Sign Out' button. A left sidebar contains navigation options: My Jetpack Home, Data Usage, Connected Devices (with a notification badge), Jetpack Settings (highlighted), Messages, Parental Controls, and About Jetpack. The main content area is titled 'Jetpack Settings' and has three tabs: 'Wi-Fi', 'Jetpack', and 'Advanced'. A warning message states: 'Changes made to these Wi-Fi settings may require you to reconnect your Wi-Fi devices to this Jetpack using the new settings.' The 'Wi-Fi' section has a toggle switch set to 'ON'. Below this, several settings are listed: 'Wi-Fi name (SSID): Verizon-MiFi0620L-WXYZ' (with a note 'This is the name of the Wi-Fi network.'), 'Security: WPA2 Personal PSK (AES)', 'Wi-Fi password (Key): 00X00Y00Z' (with a note '8 ~ 83 ASCII characters' and 'For greater security, use a mixture of digits, upper case, lower case and other symbols.'), 'Max Wi-Fi connections: 15', and 'Band: 2.4 GHz' (with a note 'Ensure your Wi-Fi devices support the selected band.'). There are links for '2.4 GHz Band Settings', '5 GHz Band Settings', and 'Wi-Fi Options'. A warning icon and text at the bottom of the settings area says: 'Devices connected to this Jetpack use data from your data plan. Performance may vary with the number of devices.' A red 'Save Changes' button is at the bottom right. The footer includes the Novatel Wireless logo, copyright information for 2014, and the MiFi Powered logo.


Jetpack Settings - Wi-Fi Network Settings

Change my Jetpack Admin Password

Clicking on **Change Admin Password** takes you to the Jetpack Admin Password section of the Settings page, where you can change the Admin Password. (See [Jetpack Admin Password](#) on page 62.) The default Admin password is **admin**. This is the password you use to Sign In to Settings.


To change the Admin Password used to Sign In to your Jetpack:

- 1 Enter your current Admin password in the **Enter current password** box, then click **Continue**.

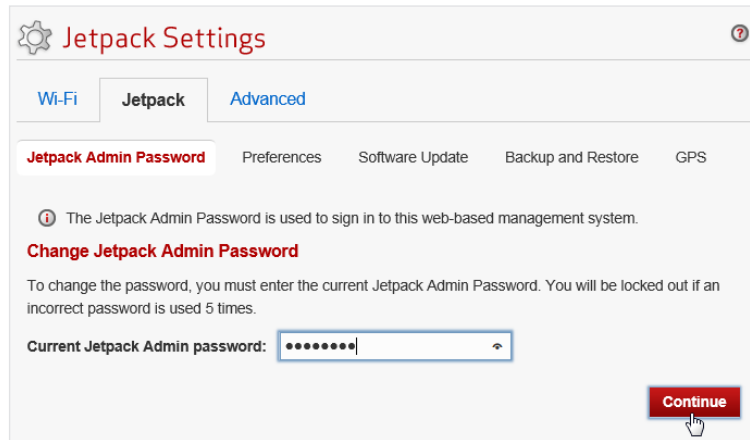

Jetpack Settings - Change Jetpack Admin Password

- 2 Enter your new password in the **Enter new password** box.
- 3 Re-enter your new password in the **Confirm new password** box.
- 4 Select a security question from the drop down menu.

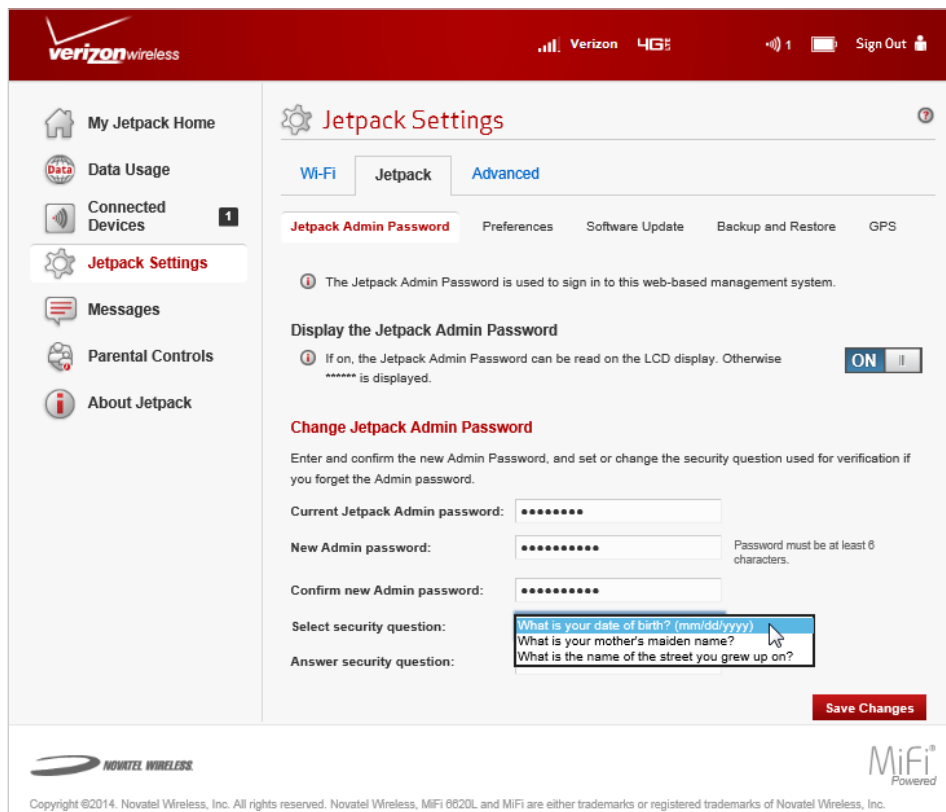

Jetpack Settings - Select Jetpack Security Question

- 5 Enter the answer to the selected security question in the **Answer Security Question** field.

Change Jetpack Admin Password

Enter and confirm the new Admin Password, and set or change the security question used for verification if you forget the Admin password.

New Admin password: Password must be at least 6 characters.

Confirm new Admin password:

Select security question: What is your date of birth?... ▾

Answer security question:

Save Changes

Jetpack Settings - Answer Security Question

- 6 Click **Save Changes**.
- 7 A message displays confirming that your password has been changed.


NOTE The next time you sign in to Jetpack Settings, you will need to use the new password.

Set GPS Options

Clicking on **Set GPS Options** will take you to the Jetpack Settings page where you can configure the GPS settings for your Jetpack.


To configure your Jetpack GPS settings:

- 1 Slide the ON/OFF button to ON to activate the Jetpack location services and display the GPS Agreement.

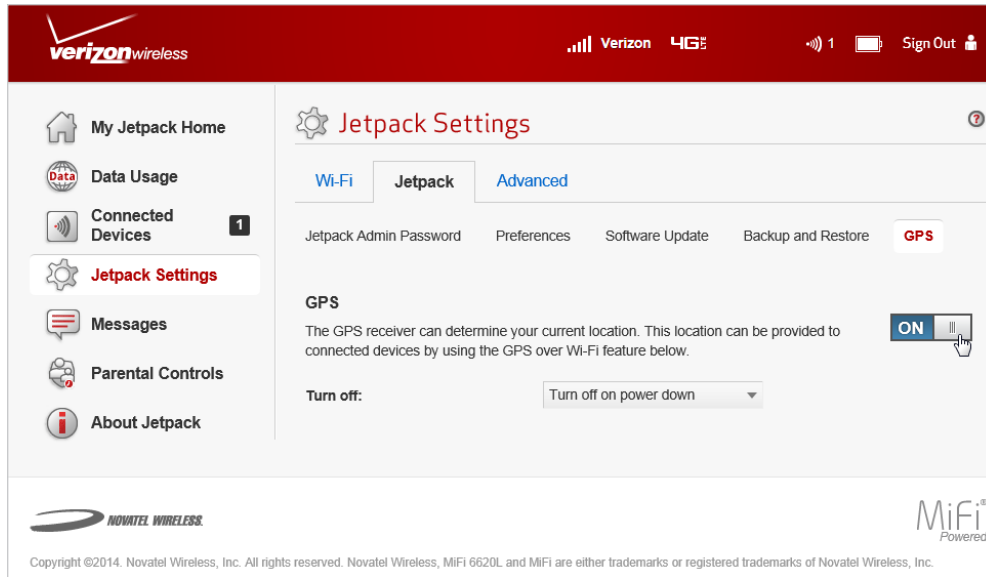


Jetpack Settings - GPS

- 2 To proceed, click **Confirmed** after reading and agreeing to the GPS Agreement.

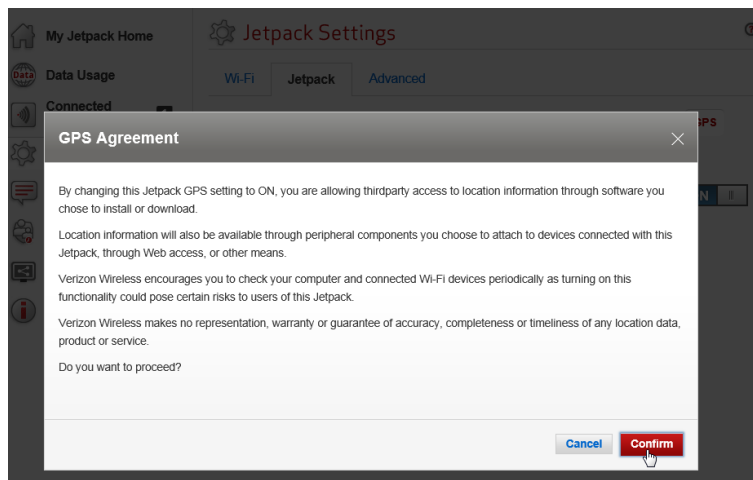


Jetpack Settings - GPS Agreement

- 3 Select the desired option from the **Turn off** drop down menu. The choices are **Always on** or **Turn off on power down**.

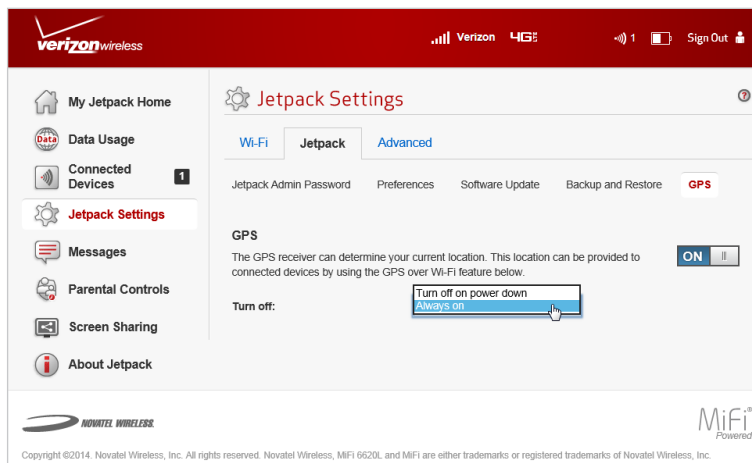

GPS - Turn Off Options

- 4 NMEA is a standard method of providing a GPS data stream in Windows and other computing platforms. If this check box is selected, when connected via a USB cable, a NMEA (serial) port is available to applications that can use a NMEA stream. To use GPS over Wi-Fi (NMEA), click **Download GPS Over Wi-Fi Drivers** at the bottom of page to download and install the drivers.

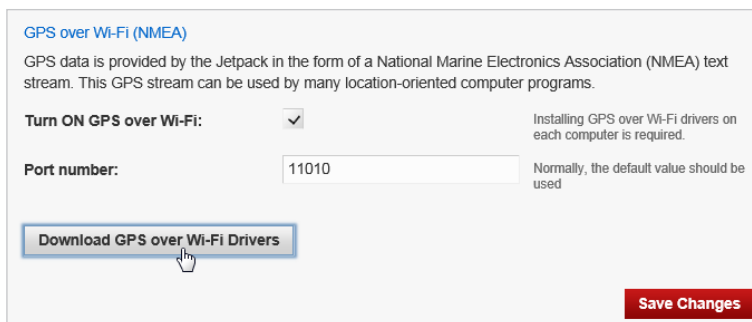

GPS - Download GPS Over Wi-Fi Drivers

- 5 Click **Save Changes**.

My Account & Tools

The **My Account & Tools** menu contains the following options:

- **My Verizon Wireless** (See [My Verizon Wireless](#) on page 38.)
- **Coverage Map** (See [Coverage Map](#) on page 39.)
- **Data Calculator** (See [Data Calculator](#) on page 41.)
- **Trip Planner** (See [Trip Planner](#) on page 42.)



Welcome To Your
Jetpack™ MiFi® 6620L
Wireless Number: [redacted]

Manage My Jetpack **My Account & Tools** **Help & Support**

Manage My Jetpack
Customize my Wi-Fi Settings
Change my Jetpack Admin Password
Set GPS Options

My Account & Tools
My Verizon Wireless
Coverage Map
Data Calculator
Trip Planner

Help & Support
Attend a Wireless Workshop
Community Forums
Device Support Page & User Guide

⚠ Some links take you to external content where data fees may apply.


My Jetpack Home - My Account & Tools

My Verizon Wireless

Clicking on **My Verizon Wireless** takes you to the Verizon Wireless website where you can manage your wireless service. Sign in to your account or watch videos to learn more about your Jetpack.

To sign in to your My Verizon account and access your account options:

- 1 Type your User ID or Mobile Number in the **User ID or Mobile Number** field.
- 2 Select the desired option from the **Take Me To** drop down menu.

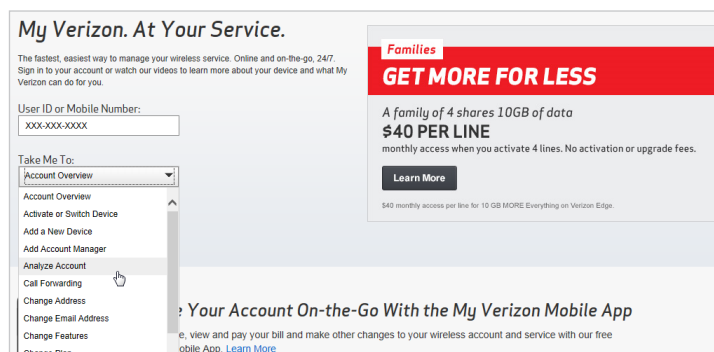

My Verizon. At Your Service.
The fastest, easiest way to manage your wireless service. Online and on-the-go, 24/7. Sign in to your account or watch our videos to learn more about your device and what My Verizon can do for you.

User ID or Mobile Number:
xxx-xxx-xxxx

Take Me To:
Account Overview
Account Overview
Activate or Switch Device
Add a New Device
Add Account Manager
Analyze Account
Call Forwarding
Change Address
Change Email Address
Change Features
Change Plan

Families
GET MORE FOR LESS
A family of 4 shares 10GB of data
\$40 PER LINE
monthly access when you activate 4 lines. No activation or upgrade fees.
[Learn More](#)
\$40 monthly access per line for 10 GB MORE Everything on Verizon Edge.

Your Account On-the-Go With the My Verizon Mobile App
e, view and pay your bill and make other changes to your wireless account and service with our free mobile App. [Learn More](#)

My Verizon Wireless

Coverage Map

Clicking on **Coverage Map** takes you to the Coverage Locator on the Verizon Wireless website where you can view a detailed coverage map, including Data, Push to Talk, 4G LTE Data, Prepaid, and Voice & Messaging.

To display detailed information about Verizon Wireless coverage in your area (U.S.):


- 1 Type your Street Address, City and State, or Zip code in the appropriate field, then click **Search**.
- 2 To limit the coverage areas by service type, click the button by each service type desired, then click **Refresh Map**.
- 3 Use the map navigation tools to adjust the size and location of the area displayed.

The screenshot shows the Verizon Coverage Locator interface. At the top, there are three small maps of the United States: AT&T 4G LTE Coverage (orange), Sprint 4G LTE Coverage (green), and T-Mobile 4G LTE Coverage (pink). Below these is a link: "FIND A DETAILED COVERAGE MAP OF YOUR AREA". The main section is titled "Coverage Locator" and includes a search bar with fields for "Street Address", "City, State", and "Zip", along with a "Search" button. There are several service type filters: "Data Coverage", "4G LTE Data Coverage" (selected), "Voice & Messaging", "Push to Talk", and "Prepaid". A "Refresh Map" button is also present. The central map shows the United States with a red overlay indicating Verizon 4G LTE coverage. A "Map Legend" below the map identifies the colors: Verizon 4G LTE (dark red), Verizon 3G (red), Extended 3G (brown), Canada/Mexico 3G (orange), and No Service (white). At the bottom, there is a disclaimer: "These Coverage Locator depictions apply to the following calling plans: Share Everything, Nationwide Calling Plans, Mobile Broadband and Prepaid." followed by fine print regarding network access and accuracy.

Verizon Coverage Locator


To display detailed information about Verizon Wireless international coverage:

- 1 Type your Street Address, City and State, or Zip code in the appropriate field, then click the magnifying glass icon.
- 2 To limit the coverage areas by service type, click the button by the service type desired.

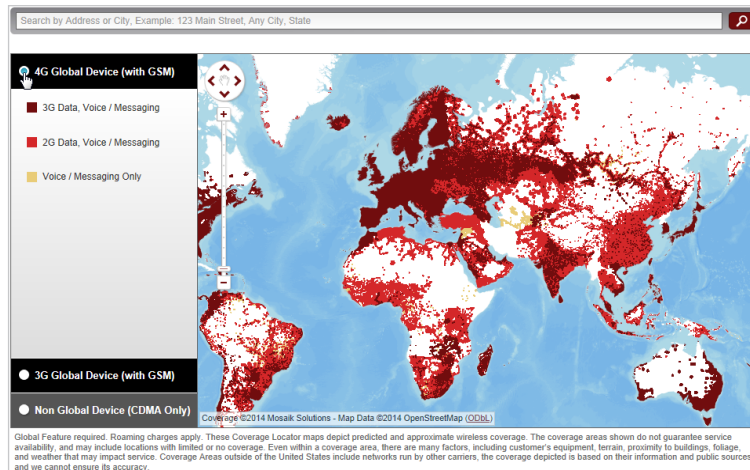

Verizon International Coverage Map

- 3 Use the map navigation tools to adjust the size and location of the area displayed.

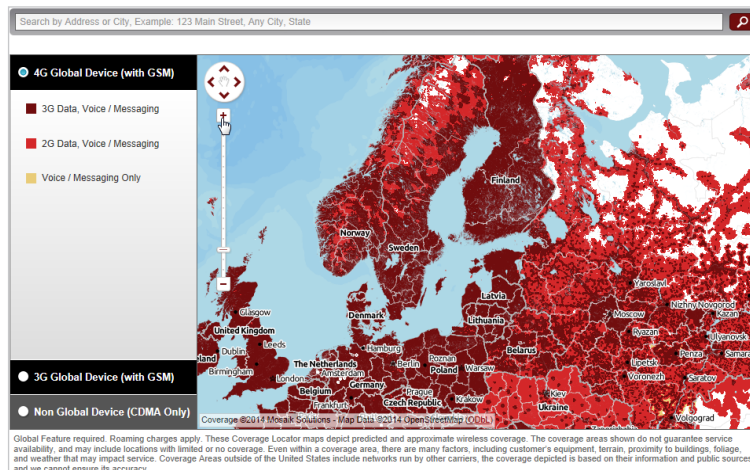


Verizon International Coverage Map - Adjust Size

Data Calculator

Clicking on **Data Calculator** takes you to the Data Usage Calculator on the Verizon Wireless website where you can calculate your Jetpack usage to determine which plan will best meet your needs.

To use the Data Calculator to select the best Verizon plan to meet your needs:

- 1 Select your device type at the top of the page. Your choices are 3G and 4G Smartphones, 3G Mobile Broadband, and 4G Mobile Broadband.
- 2 Select the correct usage amounts from each category, including email, web access, streaming music and video, uploading and downloading photos, 4G VoIP (if applicable), video calling and online gaming.

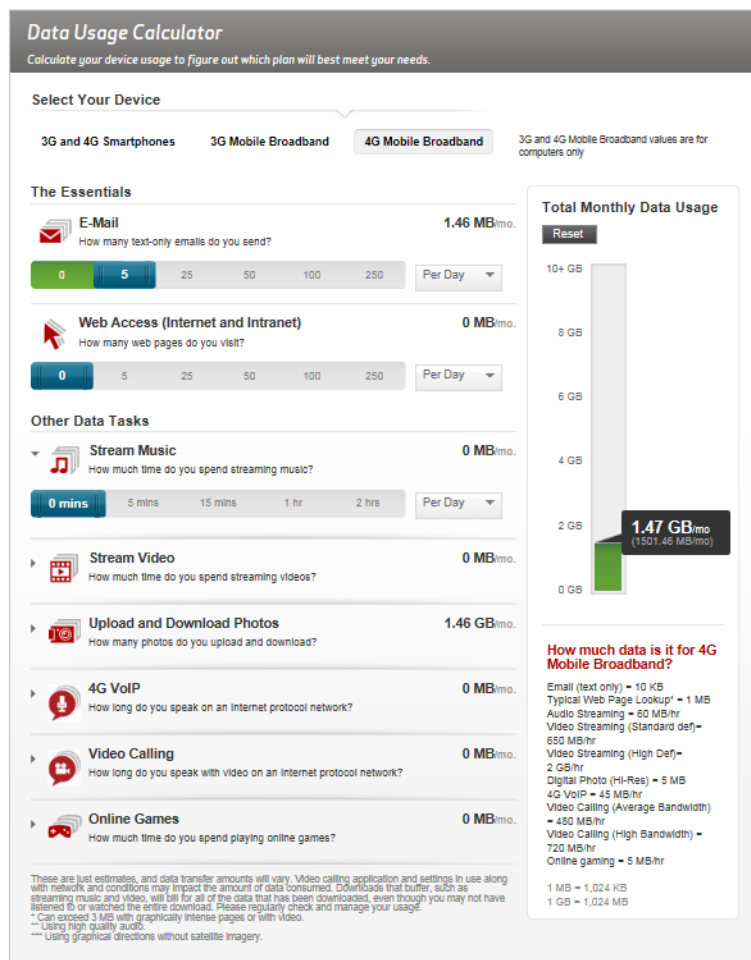

Verizon Data Calculator

Trip Planner

Clicking on **Trip Planner** takes you to the interactive Trip Planner on the Verizon Wireless website where you can determine the global services you need when you travel and see if your device is covered.

To use the interactive Trip Planner:

- 1 Select where you are going in the Location panel. Your choices are Country and Cruise Ship.
- 2 Type in country or cruise ship and select from the drop down tab.
- 3 Click **Add to List**.
- 4 Repeat for additional locations, then click **Next**.

The screenshot shows the Verizon Trip Planner interface. At the top, there are navigation links for RESIDENTIAL, BUSINESS, and WIRELESS, along with language and account options. The main heading is 'Trip Planner' with a sub-heading: 'Use our interactive Trip Planner to help you determine the global services you'll need and to see if your device is covered.' Below this, there are three panels: 'Location', 'Communication', and 'Devices'. The 'Location' panel is active and contains the question 'Where are you going?' with radio buttons for 'Country' (selected) and 'Cruise Ship'. Below this is a search input field with a dropdown menu showing 'Spain', 'Italy', 'France', and 'Spain'. An 'Add To List' button is next to the dropdown. A 'Next' button is at the bottom of the panel. A 'Show me what I need' button is at the bottom right of the entire form.


Verizon Trip Planner - Enter Location

- 5 Select how you want to keep in touch in the Communication panel. Choose any combination from Voice/Messaging, Smartphone, Wireless Internet, and Tether/Hotspot.
- 6 Click **Next**.


The screenshot shows the Verizon Trip Planner interface at the 'Enter Communication Type' step. The 'Location' panel now shows a list of selected locations: 'Italy', 'France', and 'Spain'. The 'Communication' panel is active and contains the question 'How do you want to keep in touch?' with checkboxes for 'Voice/Messaging' (checked), 'Smartphone', 'Wireless Internet', and 'Tether/Hotspot'. A 'Next' button is at the bottom of the panel. A 'Show me what I need' button is at the bottom right of the entire form.

Verizon Trip Planner - Enter Communication Type

- 7 Select what device you will take with you from the **Devices** panel. Select the brand from the **Select Brand** drop down menu, and the model from the **Select Model** drop down menu.
- 8 Click **Show me what I need** to display an overview of your trip information.

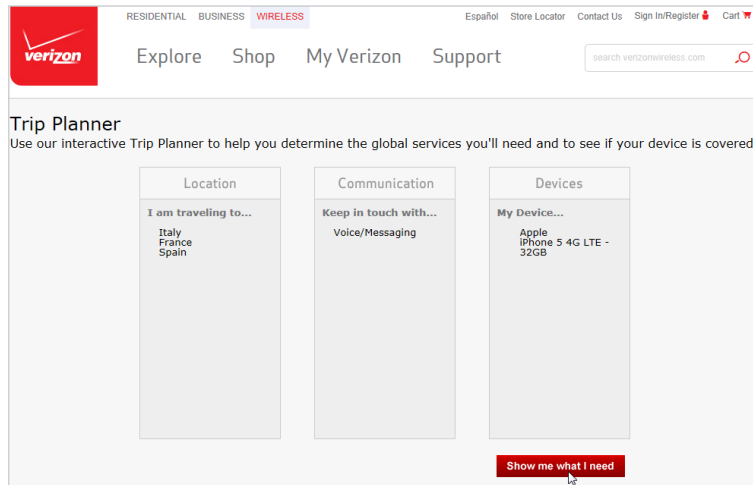

Verizon Trip Planner - Show me what I need

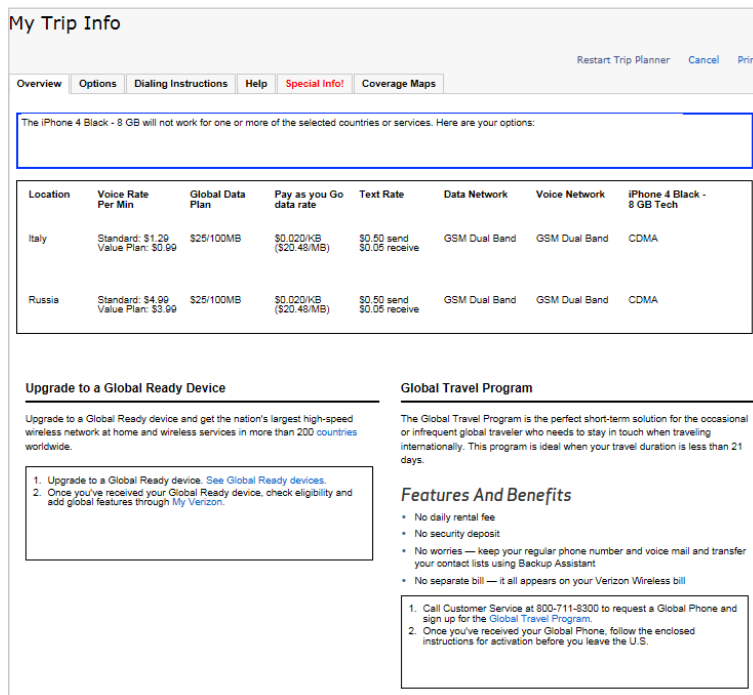

Verizon Trip Planner - Options

Help & Support

The **Help & Support** menu contains the following options:

- **Attend a Wireless Workshop** (See [Attend a Wireless Workshop](#) on page 45.)
- **Community Forum** (See [Community Forums](#) on page 46.)
- **Device Support Page & User Guide** (See [Device Support Page & User Guide](#) on page 46.)



Welcome To Your
Jetpack™ MiFi® 6620L
Wireless Number: _____

Manage My Jetpack My Account & Tools **Help & Support**

 [Customize my Wi-Fi Settings](#)
[Change my Jetpack Admin Password](#)
[Set GPS Options](#)

 [My Verizon Wireless](#)
[Coverage Map](#)
[Data Calculator](#)
[Trip Planner](#)

 [Attend a Wireless Workshop](#)
[Community Forums](#)
[Device Support Page & User Guide](#)

 Some links take you to external content where data fees may apply.

My Jetpack Home - Help & Support

Attend a Wireless Workshop

Clicking on **Attend a Wireless Workshop** takes you to the Verizon Wireless website where you can sign up for classes taught by Verizon experts to learn everything you need to know about your Jetpack.

To attend a Wireless Workshop:

- 1 Select **Help & Support > Attend a Wireless Workshop** on the My Jetpack Home page to display the **Wireless Workshops** page.
- 2 Enter your Zip Code into the Enter Zip Code field, or select a State and City from the dropdown menu.
- 3 Click **View Workshops** to display a list and description of available in-store workshops in your selected location.
- 4 To register, choose a location and time from the available options, then click **Register**.
- 5 Enter the required information on the Registration form, then click **Register**.

RESIDENTIAL BUSINESS **WIRELESS** Set Location Español Store Locator Contact Us Sign In/Register

Explore Shop **My Verizon** Support search verizonwireless.com

Wireless Workshops

Attend a free Wireless Workshop in a store to learn everything you need to know about your device.

Our classes are taught by Verizon experts. Discover powerful new features. Access email on the go. Experience useful apps. Learn all of this and a whole lot more.

In-Store Workshops

Come on in to a Verizon store near you and get personalized hands-on training. We offer both basic and advanced classes, so there's something for everyone.

Or

Select State Select City

View Workshops

Manage Existing Workshops

Manage Existing Workshops


Verizon Wireless Workshops

Community Forums

Clicking on **Community Forums** takes you to Community Forums on the Verizon Wireless website where you can select the type of device you are interested in learning about and read questions and answers from other device users.

To access the Jetpack 4G LTE Mobile Hotspot Forum and ask a question or read questions and answers from other device users:

- 1 Select **Verizon Jetpack** from the carousel of devices at the top of the page.
- 2 Enter your question into the **Type your question** field, then click **Ask it**.

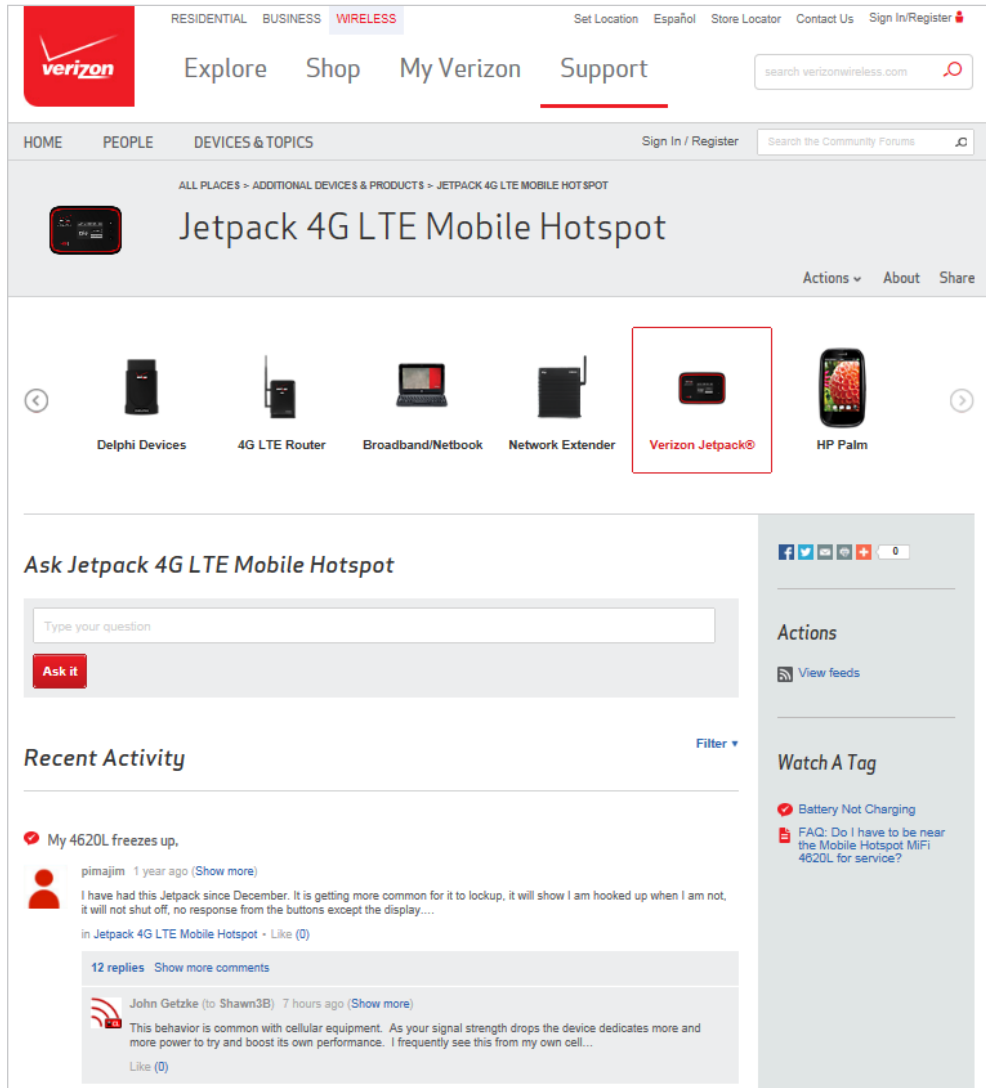

The screenshot shows the Verizon Wireless website's Community Forums section. At the top, there are navigation links for 'RESIDENTIAL', 'BUSINESS', and 'WIRELESS' (which is highlighted). Below this are 'Explore', 'Shop', 'My Verizon', and 'Support' (which is underlined). A search bar is located to the right of these links. Below the navigation is a secondary navigation bar with 'HOME', 'PEOPLE', and 'DEVICES & TOPICS'. The main content area is titled 'Jetpack 4G LTE Mobile Hotspot' and features a carousel of device categories: 'Delphi Devices', '4G LTE Router', 'Broadband/Netbook', 'Network Extender', 'Verizon Jetpack®' (highlighted with a red box), and 'HP Palm'. Below the carousel is a section titled 'Ask Jetpack 4G LTE Mobile Hotspot' with a text input field labeled 'Type your question' and a red 'Ask it' button. To the right of the input field are social media sharing icons. Below the 'Ask' section is a 'Recent Activity' section with a 'Filter' dropdown. The first activity is a post by 'pimajim' from 1 year ago, titled 'My 4620L freezes up.' It includes a user profile picture, a timestamp, and a 'Show more' link. The post content reads: 'I have had this Jetpack since December. It is getting more common for it to lockup, it will show I am hooked up when I am not, it will not shut off, no response from the buttons except the display....' Below the post is a '12 replies' section with a 'Show more comments' link. The first reply is from 'John Getzke (to Shawn3B)' from 7 hours ago, with a 'Show more' link. The reply content reads: 'This behavior is common with cellular equipment. As your signal strength drops the device dedicates more and more power to try and boost its own performance. I frequently see this from my own cell...'. To the right of the 'Recent Activity' section is a sidebar with 'Actions' (including 'View feeds') and 'Watch A Tag' (including 'Battery Not Charging' and 'FAQ: Do I have to be near the Mobile Hotspot MIFI 4620L for service?').

Verizon Support - Community Forums

Device Support Page & User Guide


Clicking on **Device Support Page & User Guide** takes you to Wireless Support section on the Verizon Wireless website where you can access Top Device Questions, Articles, Community Advice, and Features & Apps.

Data Usage

Data Usage allows you to quickly check your data usage and billing cycle directly on the Jetpack display, or on the Jetpack Admin website.

On the Jetpack Display


- 1 Use the real-time data usage meter on the Home screen to check your data usage and billing cycle schedule.

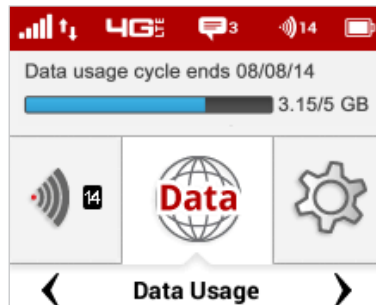

Real-time Data Usage

- 2 For an expanded view of your data usage information, or if Data Usage information is not available on the Home screen, use the navigate button to scroll to the Data Usage icon and press the select button to display current data usage date, data usage meter, amount of data used/total available in GB, and the billing cycle end date. Press/hold the select button to exit and return to the Home screen.


NOTE The real-time data usage meter will not display when SIM lock is turned on or when another device is connected to the Jetpack via the Universal Charging port.

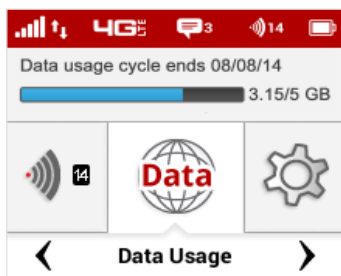

Data Usage Option



Getting Usage Data

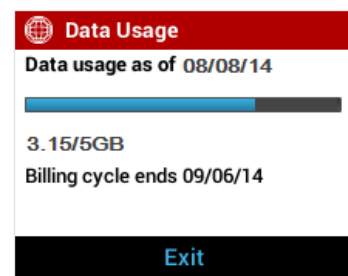

Data Usage & Billing Cycle

On the Jetpack Admin Website

The Data Usage page allows you to obtain your current estimated data usage, and to access My Account & Tools. Click **Data Usage** on the Menu panel to display the Data Usage page and access information specific to your particular plan.

The screenshot shows the Verizon Jetpack Admin Website interface. At the top, there is a red header with the Verizon logo and 'verizon wireless' text. To the right of the header, there are status icons for signal strength, Verizon 4G LTE, battery level, and a 'Sign Out' button. Below the header is a navigation menu on the left with icons and labels for 'My Jetpack Home', 'Data Usage' (highlighted in red), 'Connected Devices' (with a '14' badge), 'Jetpack Settings', 'Messages', 'Parental Controls', and 'About Jetpack'. The main content area is titled 'Data Usage' and shows 'Estimated Data Usage as of 01/01/1970'. It displays '30 GB Shared Data Plan' and '8.674 GB of 30 GB' with a progress bar. Below the bar, it shows '0.024 GB used on this device' and 'Billing cycle ends 07/06/2014'. There is a 'Refresh' button. Underneath, there is a section for 'My Account & Tools' with links for 'My Verizon', 'Data Calculator', and 'Trip Planner'. A section titled 'About My Usage Estimate' contains a disclaimer: 'Roaming charges or roaming minutes may not be included in your estimate. Credits and adjustments to your account may not appear until your next billing statement, and may not be reflected in your current balance. Payments are applied to your account on the same day they are made.' At the bottom of the page, there is a footer with the Novatel Wireless logo and 'MiFi Powered' text, along with a copyright notice: 'Copyright ©2014. Novatel Wireless, Inc. All rights reserved. Novatel Wireless, MiFi 6620L and MiFi are either trademarks or registered trademarks of Novatel Wireless, Inc.'

Jetpack Data Usage

NOTE

Roaming charges or roaming minutes may not be included in your estimate. Credits and adjustments to your account may not appear until your next billing statement, and may not be reflected in your current balance. Payments are applied to your account on the same day they are made.

Connected Devices

Connected Devices allows you to view and edit Wi-Fi enabled devices currently connected to your Jetpack network, as well as any devices currently blocked.


NOTE An audio alert automatically sounds whenever a device connects to your Jetpack Wi-Fi network.

On the Jetpack Display

- 1 To display Wi-Fi enabled devices currently connected to or blocked from your Jetpack, use the navigation button to scroll to the Devices icon and press the select button.
- 2 Select the Wi-Fi Devices option to display the type, name, DNS and MAC details for each device connected to the Jetpack Network, and to block or unblock each device.
- 3 Select the Blocked Devices option to display the type, name, DNS and MAC details for each blocked device, and to unblock any of the blocked devices.
- 4 Select the USB Tethering option to display the type, name, DNS and MAC details for a tethered device, and to block or unblock this device.
- 5 Press/hold the select button to close the Connected Devices screen and return to the Home screen.




Connected Devices Option

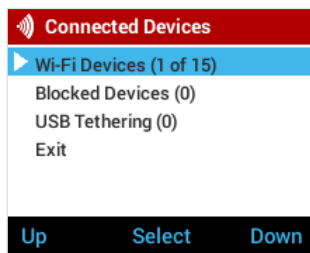

Select Wi-Fi Devices Option



Connected Device Detail

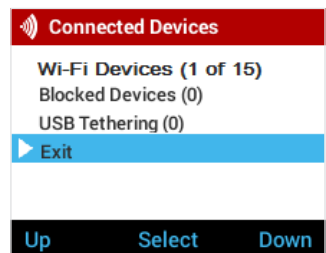


Exit Connected Devices

On the Jetpack Admin Website

The Connected Devices page allows you to view and edit devices that are currently connected to your Jetpack. You can also view and unblock any blocked devices. The Connected Devices page contains the following:

- **Connected Devices** — Displays the IP Address, MAC Address and Link Local of up to 15 connected devices.
- **Blocked Devices** — Displays any blocked devices.

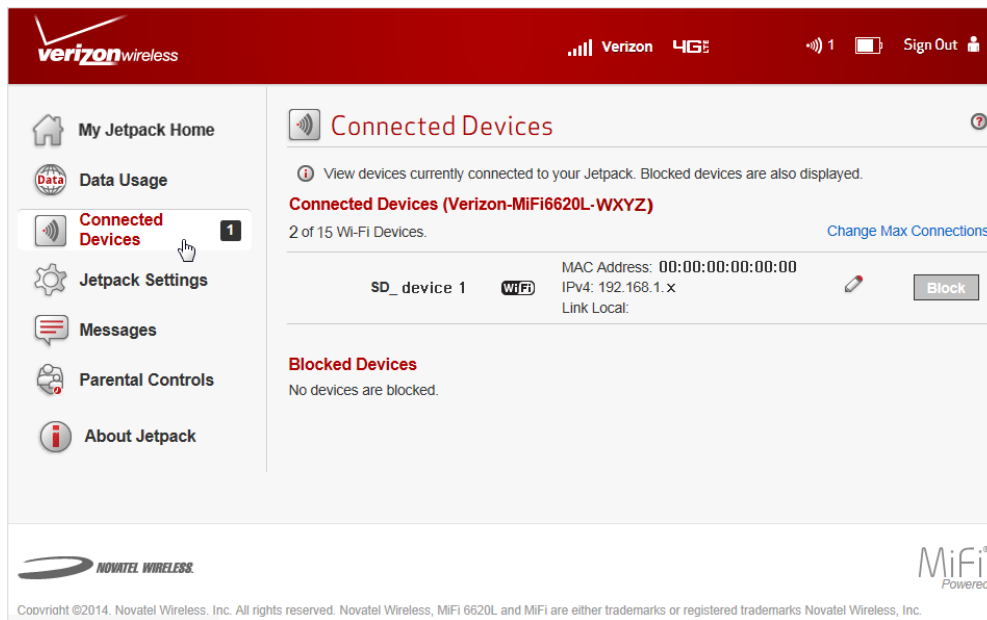

Jetpack Connected Devices

Connected Devices

The Connected Devices menu contains the following options:

- **Name** — Normally, this is the hostname of the connected device, as set on the connected device. If you have used this interface to assign a name to a connected device, the assigned name displays in place of the hostname. In rare cases, the hostname may be unavailable. You can use the **Edit** option to change the name of any connected device.
- **Type** — The first column indicates the type of connected device. You can use the **Edit** option to set or change the type. If the type has not been set, no icon is displayed. Once you set the device type, an appropriate icon is displayed.
- **IP Address** — The IP address of the connected device.
- **MAC Address** — The MAC Address is a unique network identifier for this connected device.
- **Link-Local** — If the connected device supports IPv6, the Link-Local IPv6 address is displayed.
- **Edit** — Allows you to edit a connected device type or name.
- **Block** — Allows you to prevent a specific device from connecting to the Jetpack.

Edit a Connected Device

To edit a connected device:

- 1 Click the pencil tool. A page opens allowing you to edit a connected device.




Jetpack Connected Devices - Edit

- 2 Select the appropriate change from the **Connected Devices** dropdown menu.



Jetpack Connected Devices - Select Device Type

- 3 Click **Save** to finish editing the device.

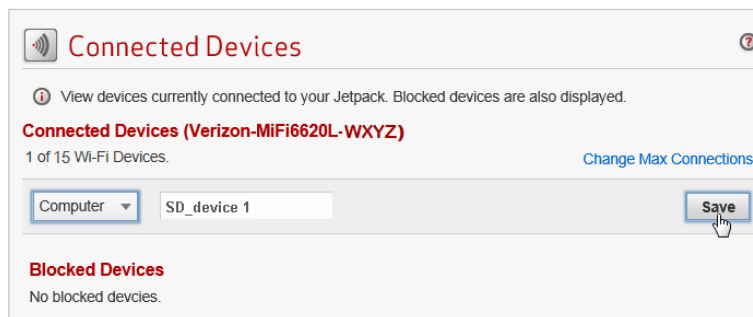

Jetpack Connected Devices - Accept Changes

Change the Maximum Number of Connected Devices


To change the maximum number of connected devices:

- 1 Click **Change Max Connections** on the **Connected Devices** page.



Change Maximum Number of Connected Devices

- 2 The Jetpack Settings Wi-Fi page opens. Select the number of devices from the **Maximum Wi-Fi connected devices** dropdown menu.

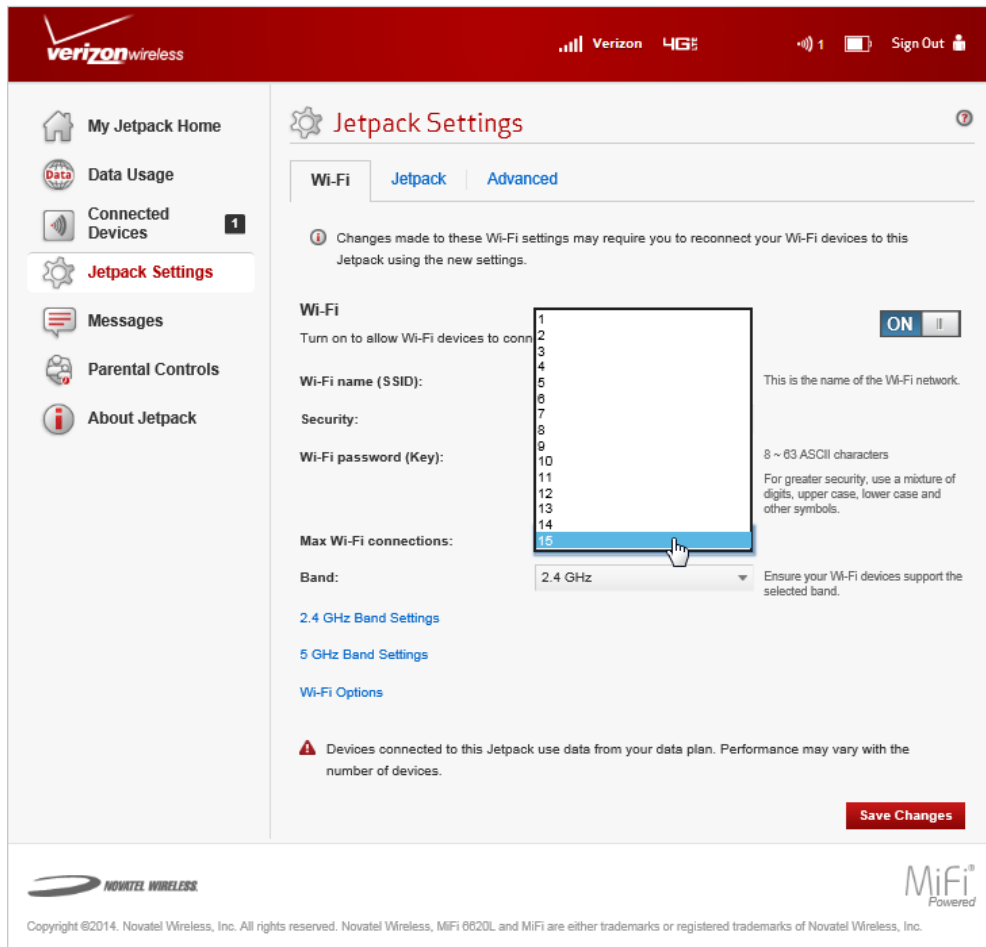


Change Maximum Number of Connected Devices

- 3 Click **Save Changes**.

Blocked Devices

The Blocked Devices menu contains the following menu options:

- **Block Button** — Click **Block** to disconnect a connected device and prevent it from reconnecting. The blocked device then appears in the **Blocked List**. This option is available for use with each connected device, except for your own device, and any device connected via USB.

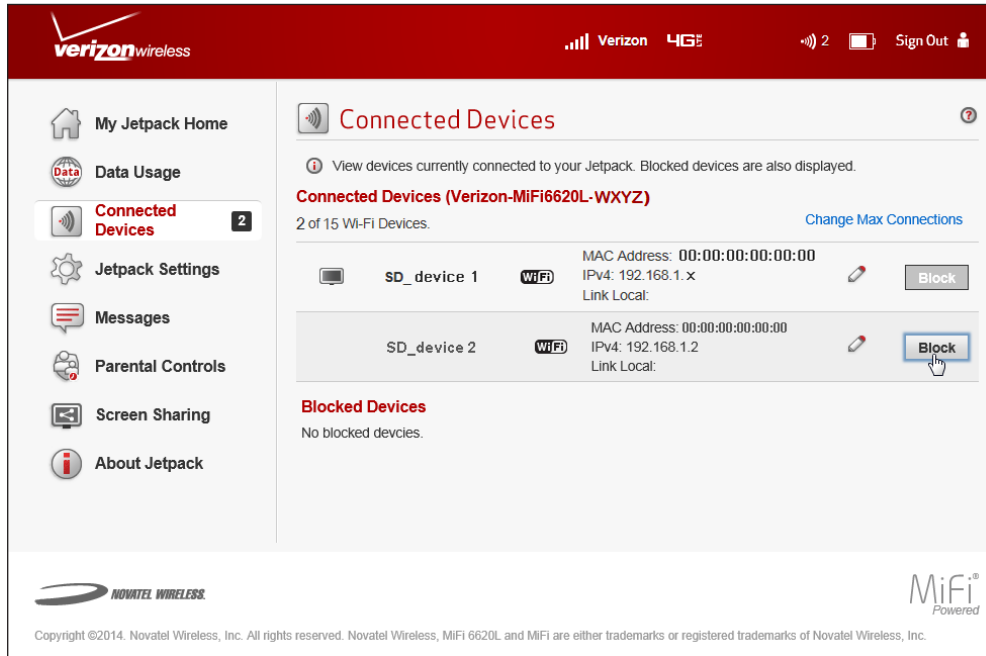

Jetpack Connected Devices - Block

- **Blocked List** — This lists any devices you have blocked. Note that since these devices are not currently connected, and are blocked from connecting, they do not have an IP address. Instead, they are identified by their name and MAC address.



Jetpack Connected Devices - Blocked List

- **Unblock Button** — Click **Unblock** to unblock a previously blocked device, freeing it to connect again. The unblocked device is deleted from the **Blocked List**, and will reappear in the **Connected Devices** list when it connects.



Jetpack Connected Devices - Unblock


Jetpack Settings

Jetpack Settings allow you to make device changes such as screen brightness and audio ON/OFF, and to select mobile network options for your Jetpack.


On the Jetpack Display

Wi-Fi


- 1 On the Home screen, navigate to the Settings icon and press the select button to open the Settings select screen and display Settings options.
- 2 Navigate to the Wi-Fi option and press the select button to display the Wi-Fi settings options. The settings options include: Wi-Fi Turn On/Turn Off, and Band 2.4 GHz/5GHz.
- 3 Select the desired Wi-Fi setting, and press select to save the setting and return to the Settings select screen.
- 4 Navigate to the Exit option, or press/hold the select button to return to the Home screen.

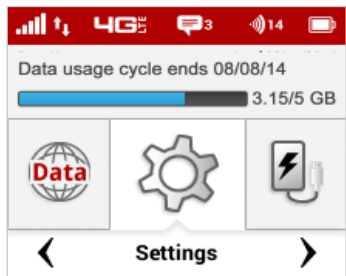

Settings Option

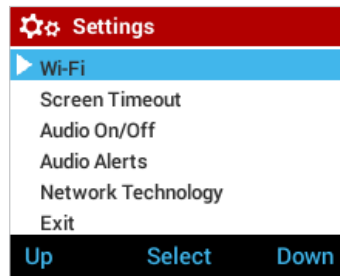

Wi-Fi Settings

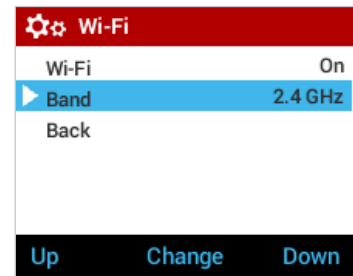


Change Wi-Fi Band


Screen Timeout

- 1 On the Home screen, navigate to the Settings icon and press the select button to open the Settings select screen and display Settings options.
- 2 Navigate to the Screen Timeout option and press the select button to display the Screen Timeout settings options. The settings options include: after 30 seconds, after 1 minute, after 2 minutes, after 5 minutes, after 10 minutes, and never. The current setting will be selected when the screen is displayed.
- 3 Select the desired Screen Timeout setting, and press select to save the setting and return to the Settings select screen.


- 4 Navigate to the Exit option, or press/hold the select button to return to the Home screen.

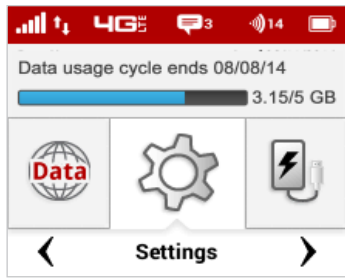

Settings Option

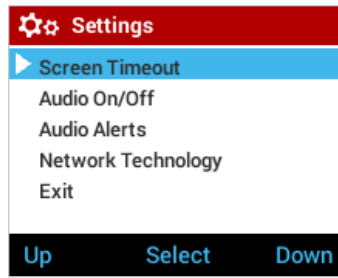


Select Screen Timeout

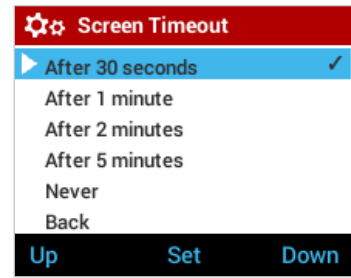


Set Screen Timeout

Audio On/Off


- 1 On the Home screen, navigate to the Settings icon and press the select button to open the Settings select screen and display Settings options.
- 2 Navigate to the Audio On/Off option and press the select button to display the Audio On/Off settings options. The settings options are Turn On and Turn Off. Setting Turn Off will disable all audio on the Jetpack.
- 3 Select the desired Audio On/Off setting, and navigate down to Back, then press the select button to save the setting and return to the Settings select screen.
- 4 Navigate to the Exit option, or press/hold the select button to return to the Home screen.

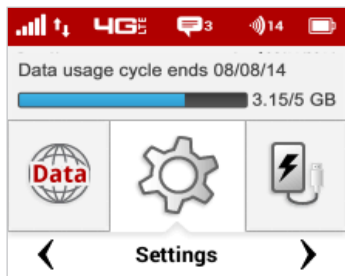

Settings Option

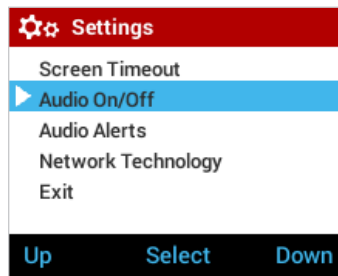

Select Audio On/Off

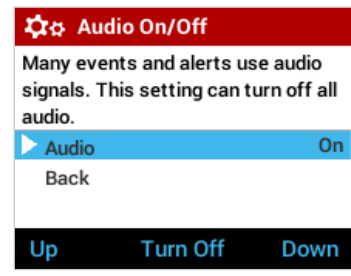


Set Audio On/Off


Audio Alerts

- 1 On the Home screen, navigate to the Settings icon and press the select button to open the Settings Select screen and display Settings options.
- 2 Navigate to the Audio Alerts option and press the select button to display the Audio Alerts settings options. Alert settings include Alert Information, Startup/Shutdown, Low battery, Critical low battery, Charging Jetpack, Charging complete, External charging, USB mode, SIM errors, New message, Software Update, Roaming, Wi-Fi turned off, Network selection, and Back. The current settings are displayed for each alert.
- 3 Select the desired setting for each alert, and press the Turn On/Turn Off to save the setting.


- 4 Navigate to the Back option to return to the Settings options, or press/hold the select button to return to the Home screen.

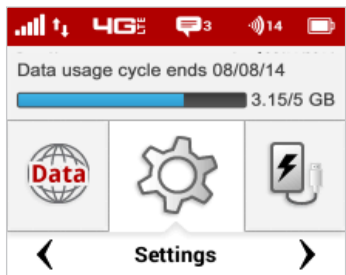

Settings Option

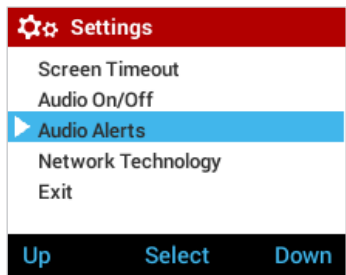


Select Audio Alerts

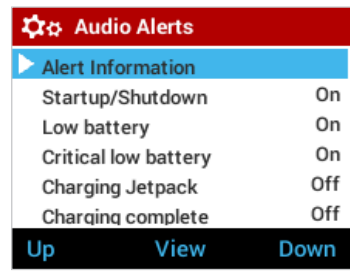


Set Audio Alerts

Network Technology


- 1 On the Home screen, navigate to the Settings icon and press the select button to open the Settings Select screen and display Settings options.
- 2 Navigate to the Network Technology option and press the select button to display the Network Technology screen with the available technology options.
- 3 Navigate to the desired technology option and press the select button.
- 4 Navigate to the Back option and press the select button to return to the Settings options, or press/hold the select button to return to the Home screen.

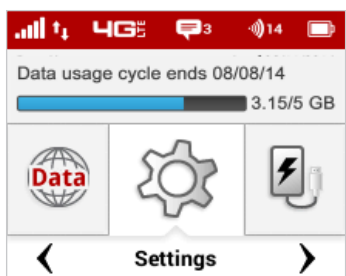

Settings Option

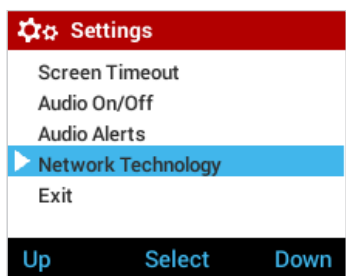

Select Network Technology

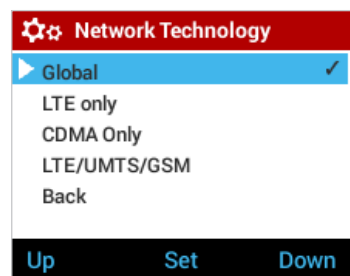

Set Network Technology

On the Jetpack Admin Website

The Jetpack Settings page allows you to make administration password and preference changes; obtain software update information; backup and restore files to your Jetpack; and set GPS preferences. The Jetpack Settings page contains the following sections:

- **Wi-Fi** (See [Wi-Fi](#) on page 59.)
- **Jetpack** (See [Jetpack](#) on page 61.)
- **Advanced** (See [Advanced](#) on page 70.)

The screenshot shows the Verizon Jetpack Admin website interface. At the top, there is a red header with the Verizon logo and 'verizon wireless' text. On the right side of the header, there are status indicators for signal strength, Verizon 4G LTE, a battery icon, and a 'Sign Out' button. A left-hand navigation menu contains icons and labels for 'My Jetpack Home', 'Data Usage', 'Connected Devices' (with a notification badge), 'Jetpack Settings' (highlighted in red), 'Messages', 'Parental Controls', and 'About Jetpack'. The main content area is titled 'Jetpack Settings' and has three tabs: 'Wi-Fi', 'Jetpack', and 'Advanced'. A warning message states: 'Changes made to these Wi-Fi settings may require you to reconnect your Wi-Fi devices to this Jetpack using the new settings.' Below this, the 'Wi-Fi' section is active, showing a toggle switch set to 'ON'. The configuration fields include: 'Wi-Fi name (SSID): Verizon-MiFi0620L-WXYZ' (with a note 'This is the name of the Wi-Fi network.'), 'Security: WPA2 Personal PSK (AES)' (with a dropdown arrow), 'Wi-Fi password (Key): 00X00Y00Z' (with a note '8 ~ 63 ASCII characters' and 'For greater security, use a mixture of digits, upper case, lower case and other symbols.'), 'Max Wi-Fi connections: 15' (with a dropdown arrow), and 'Band: 2.4 GHz' (with a dropdown arrow and a note 'Ensure your Wi-Fi devices support the selected band.'). There are also links for '2.4 GHz Band Settings', '5 GHz Band Settings', and 'Wi-Fi Options'. A warning icon and text at the bottom of the settings area reads: 'Devices connected to this Jetpack use data from your data plan. Performance may vary with the number of devices.' A red 'Save Changes' button is located at the bottom right of the settings area. The footer of the page features the Novatel Wireless logo on the left, the MiFi Powered logo on the right, and a copyright notice: 'Copyright ©2014. Novatel Wireless, Inc. All rights reserved. Novatel Wireless, MiFi 0620L and MiFi are either trademarks or registered trademarks of Novatel Wireless, Inc.'

Jetpack Wi-Fi Settings

Wi-Fi

The Wi-Fi section allows you to enable Wi-Fi devices to connect to the Jetpack Wi-Fi network, to change the Basic Wi-Fi Settings including Wi-Fi Name/Password, to select 2.4 GHz and 5 GHz Band Settings, and to turn ON/OFF Wi-Fi Options.

verizon wireless

Verizon 4G LTE

1 Sign Out

My Jetpack Home

Data Usage

Connected Devices 1

Jetpack Settings

Messages

Parental Controls

About Jetpack

Jetpack Settings

Wi-Fi Jetpack Advanced

Changes made to these Wi-Fi settings may require you to reconnect your Wi-Fi devices to this Jetpack using the new settings.

Wi-Fi ON

Turn on to allow Wi-Fi devices to connect to this Jetpack.

Wi-Fi name (SSID): Verizon-MiFi6620L-WXYZ This is the name of the Wi-Fi network.

Security: WPA2 Personal PSK (AES)

Wi-Fi password (Key): 00X00Y00Z 8 ~ 63 ASCII characters
For greater security, use a mixture of digits, upper case, lower case and other symbols.

Max Wi-Fi connections: 15

Band: 2.4 GHz Ensure your Wi-Fi devices support the selected band.

[2.4 GHz Band Settings](#)

802.11 Mode: 802.11g + 802.11n

Channel: Automatic

[5 GHz Band Settings](#)

Bandwidth: 20/40 MHz

802.11 Mode: 802.11a + 802.11n Note: When using 802.11n, legacy security methods are not available.

Channel: Automatic

[Wi-Fi Options](#)

WPS: WPS is accessible through the display. Use WPS with compatible devices to easily connect to the Wi-Fi network.

Display the Wi-Fi name on Jetpack screen: Show the Wi-Fi name on the Jetpack's LCD display.

Display the Wi-Fi password on Jetpack screen: Show the Wi-Fi password on the Jetpack's LCD display.

Broadcast Wi-Fi name (SSID): Broadcast must be turned on to use WPS.

Wi-Fi Multimedia (WMM): WMM provides higher priority for multimedia and is mandatory if using 802.11n.

Wi-Fi privacy separation: If turned on, connected devices cannot communicate with each other.

⚠ Devices connected to this Jetpack use data from your data plan. Performance may vary with the number of devices.

Save Changes

NOVATEL WIRELESS

MiFi[®] Powered

Copyright ©2014. Novatel Wireless, Inc. All rights reserved. Novatel Wireless, MiFi 6620L and MiFi are either trademarks or registered trademarks of Novatel Wireless, Inc.

Change Wi-Fi Name and Password

To change the **Band Settings**:

- 1 Select the desired Band Setting from the drop down menu. The choices are Dual band (2.4 GHz/5 GHz), 2.4 GHz only, and 5 GHz only.
- 2 Select the Bandwidth, 802.11 Mode, and Channel from the drop down menus

Bands: 2.4GHz only Dual-band is not available while the Guest network is turned on.

[2.4GHz Band Settings](#)

802.11 Mode: 802.11g + 802.11n

Channel: Automatic

[5GHz Band Settings](#)

Bandwidth: 20/40 MHz

802.11 Mode: 802.11a + 802.11n Note: When using 802.11n, legacy security methods are not available.

Channel: Automatic

Change Band Settings

To turn ON/OFF **Wi-Fi Options**:

- 1 To turn on an option, click the option checkbox to display the check mark. To turn off an option, click the option checkbox to remove the check mark.
- 2 Click **Save Changes** to finalize and accept the new settings.

Wi-Fi Options

WPS: WPS is accessible through the display. Use WPS with compatible devices to easily connect to the Wi-Fi network.

Display the Wi-Fi name on Jetpack screen: Show the Wi-Fi name on the Jetpack's LCD display.

Display the Wi-Fi password on Jetpack screen: Show the Wi-Fi password on the Jetpack's LCD display.

Broadcast Wi-Fi name (SSID): Broadcast must be turned on to use WPS.

Wi-Fi Multimedia (WMM): WMM provides higher priority for multimedia and is mandatory if using 802.11n.

Wi-Fi privacy separation: If turned on, connected devices cannot communicate with each other.

⚠ Devices connected to this Jetpack use data from your data plan. Performance may vary with the number of devices.

Save Changes

Turn ON/OFF Wi-Fi Options

Jetpack

The Jetpack section allows you to change the Jetpack Admin Password, select device preferences, check current software version and check for updates, backup your Jetpack settings, and set GPS preferences. The Jetpack Settings Jetpack section contains the following menu options:

- **Jetpack Admin Password** (See [Jetpack Admin Password](#) on page 62.)
- **Preferences** (See [Preferences](#) on page 64.)
- **Software Update** (See [Software Update](#) on page 65.)
- **Backup and Restore** (See [Backup and Restore](#) on page 66.)
- **GPS** (See [GPS](#) on page 68.)

The screenshot shows the Verizon Jetpack Settings interface. At the top, there's a red header with the Verizon logo and status icons for signal strength, Verizon 4G, battery level, and a 'Sign Out' button. A left sidebar contains navigation options: My Jetpack Home, Data Usage, Connected Devices (with a notification badge), Jetpack Settings (highlighted), Messages, Parental Controls, and About Jetpack. The main content area is titled 'Jetpack Settings' and has three tabs: 'Wi-Fi', 'Jetpack' (selected), and 'Advanced'. Under the 'Jetpack' tab, there are sub-sections: 'Jetpack Admin Password' (selected), 'Preferences', 'Software Update', 'Backup and Restore', and 'GPS'. The 'Jetpack Admin Password' section includes an information icon and text: 'The Jetpack Admin Password is used to sign in to this web-based management system.' Below this is a toggle for 'Display the Jetpack Admin Password' which is currently turned 'ON'. A note explains: 'If on, the Jetpack Admin Password can be read on the LCD display. Otherwise ***** is displayed.' The 'Change Jetpack Admin Password' section prompts the user to 'Enter and confirm the new Admin Password, and set or change the security question used for verification if you forget the Admin password.' It contains four input fields: 'Current Jetpack Admin password:', 'New Admin password:', 'Confirm new Admin password:', and 'Select security question:' (with a dropdown menu showing 'What is your date of birth?...'). An 'Answer security question:' field is also present. A red 'Save Changes' button is at the bottom right. The footer includes the Novatel Wireless logo, copyright information for 2014, and the MiFi Powered logo.


Jetpack Settings - Jetpack Admin Password

Jetpack Admin Password

The Jetpack Admin Password page allows you to display, hide and/or change the Admin Password.

Display or Hide the Admin Password

Slide the **ON/OFF** button to **ON** to display the Jetpack Admin Password on the device or **OFF** to hide the Jetpack Admin Password on the device.

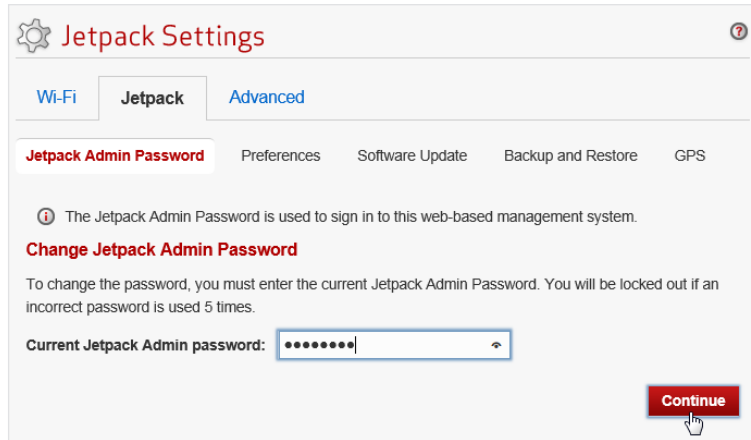

Change Jetpack Admin Password

Change the Admin Password

To change your Admin Password:

- ① Type your current password in the **Current Admin Password** field. Select **Continue** to display the **Change Jetpack Admin Password** screen.
- ② Type your new password in the **New Admin Password** field.
- ③ Type your new password a second time in the **Confirm new Admin Password** field.
- ④ Select a security question from the dropdown menu options.
- ⑤ Type the answer to the selected security question in the **Answer security question** field.

- Click **Save Changes** to save any changes made to your password.

The screenshot shows the Verizon Jetpack Settings interface. The top navigation bar includes the Verizon logo, signal strength, Verizon 4G LTE, battery level, and a 'Sign Out' button. The left sidebar contains menu items: My Jetpack Home, Data Usage, Connected Devices (with a notification badge), Jetpack Settings (highlighted), Messages, Parental Controls, and About Jetpack. The main content area is titled 'Jetpack Settings' and has three tabs: 'Wi-Fi', 'Jetpack', and 'Advanced'. Under the 'Jetpack' tab, there are sub-sections: 'Jetpack Admin Password', 'Preferences', 'Software Update', 'Backup and Restore', and 'GPS'. A note states: 'The Jetpack Admin Password is used to sign in to this web-based management system.' Below this is a toggle for 'Display the Jetpack Admin Password', which is currently turned 'ON'. The 'Change Jetpack Admin Password' section includes instructions: 'Enter and confirm the new Admin Password, and set or change the security question used for verification if you forget the Admin password.' It features three password input fields: 'Current Jetpack Admin password:', 'New Admin password:', and 'Confirm new Admin password:'. A note specifies 'Password must be at least 6 characters.' There are three security question options: 'What is your date of birth? (mm/dd/yyyy)', 'What is your mother's maiden name?', and 'What is the name of the street you grew up on?'. A red 'Save Changes' button is located at the bottom right of the form area. The footer contains the Novatel Wireless logo, the MiFi Powered logo, and a copyright notice: 'Copyright ©2014, Novatel Wireless, Inc. All rights reserved. Novatel Wireless, MiFi 6620L and MiFi are either trademarks or registered trademarks of Novatel Wireless, Inc.'

Save Changes to Jetpack Admin Password

Preferences

The Preferences page contains the following options:

- **Allow Settings Changes** — Turn on to allow settings to be changed from the Jetpack display.
- **Universal Charging** — Use this feature to charge your cellphone or similar device.
- **Device Preferences** — Allows you to set the behaviour of the Jetpack.
- **Notifications** — Allows you to turn ON/OFF listed notifications.
- **User Preferences** — Allows you to customize the date, time, distance and number formats.

The screenshot displays the Verizon Jetpack Settings interface, specifically the Preferences section. The top navigation bar includes the Verizon logo, signal strength, Verizon 4G LTE, battery level, and a Sign Out button. The left sidebar contains navigation options: My Jetpack Home, Data Usage, Connected Devices (with a notification badge), Jetpack Settings (selected), Messages, Parental Controls, and About Jetpack. The main content area is titled 'Jetpack Settings' and has tabs for Wi-Fi, Jetpack, and Advanced. Under the Jetpack tab, there are sub-sections: Jetpack Admin Password, Preferences (selected), Software Update, Backup and Restore, and GPS. The 'Allow Settings Changes' section has a toggle switch set to 'ON'. The 'Universal Charging' section features an illustration of a USB cable connected to a device and a dropdown menu set to '25%'. Below this, the 'Current status' is 'Available', with a note that possible states include 'Available', 'Not available (low battery)', and 'Charging'. The 'Device Preferences' section includes: 'Micro USB connection' set to 'Charge + tether + Wi-Fi', 'Prompt on USB connection' checked, 'Turn off display' set to 'After 30 seconds', 'Sleep' set to 'After 10 minutes', and 'Shutdown' set to 'After 2 hours'. Each setting has a brief description of its function. At the bottom right, there is a red 'Save Changes' button. The footer contains the Novatel Wireless logo, copyright information for 2014, and the MiFi Powered logo.

Jetpack Settings - Jetpack Preferences

Software Update

The Software Update page contains the following sections:

- **Current software version**— Displays information for the current software version, date of last check for updates and the number of updates currently available.
- **Checked for update** — Displays the date of the last software update.
- **Update available** — Displays the software update history.

The screenshot displays the Verizon Jetpack Settings interface. The top navigation bar includes the Verizon logo, signal strength, Verizon 4G LTE, and a 'Sign Out' button. The left sidebar contains menu items: My Jetpack Home, Data Usage, Connected Devices (with a notification badge), Jetpack Settings (selected), Messages, Parental Controls, and About Jetpack. The main content area is titled 'Jetpack Settings' and has tabs for 'Wi-Fi', 'Jetpack', and 'Advanced'. Under the 'Jetpack' tab, there are sub-sections: 'Jetpack Admin Password', 'Preferences', 'Software Update' (highlighted), 'Backup and Restore', and 'GPS'. The 'Software Update' section is titled 'Current Software' and lists the following information:

Current software version:	1.3 (L1.152.6.1 M9x25BEN-2.24.2 1 [2014-07-29 12:17:11])
Checked for update:	Never
Update available:	No

Below this, the 'Update History' section shows 'Never updated'. At the bottom of the page, there is a Novatel Wireless logo and a 'MiFi Powered' logo. A copyright notice at the very bottom reads: 'Copyright ©2014. Novatel Wireless, Inc. All rights reserved. Novatel Wireless, MiFi 6620L and MiFi are either trademarks or registered trademarks of Novatel Wireless, Inc.'

Jetpack Settings - Software Update

Backup and Restore

The Backup and Restore page contains the following sections:


- **Backup** — Allows you to save your Jetpack settings to your computer. You must enter your Admin Password in the **Admin Password** field and click **Download** to save settings to your computer.
- **Restore** — Allows you to upload a previously saved backup file from your computer to your Jetpack. Click **Browse** and select a file, then enter the Admin Password in effect when the backup file was saved in the **Admin Password** field and click **Restore Now**.
- **Restore to Factory Defaults** — Allows you to restore all settings on your Jetpack to the factory default values. Click **Restore Factory Defaults** to restore all such settings. If prompted for a password, use the default Admin Password which is **admin**.
- **Restart Jetpack** — Use to restart your Jetpack.
- **Shutdown Jetpack** — Use to shutdown your Jetpack.

The screenshot shows the Verizon Wireless Jetpack Settings interface. The top navigation bar includes the Verizon logo, signal strength, Verizon 4G LTE, battery level, and a 'Sign Out' button. The left sidebar contains navigation options: My Jetpack Home, Data Usage, Connected Devices (with a notification badge), Jetpack Settings (highlighted), Messages, Parental Controls, and About Jetpack. The main content area is titled 'Jetpack Settings' and has tabs for 'Wi-Fi', 'Jetpack', and 'Advanced'. Under the 'Jetpack' tab, there are sub-sections: 'Jetpack Admin Password', 'Preferences', 'Software Update', 'Backup and Restore' (highlighted), and 'GPS'. The 'Backup and Restore' section contains an information icon and text: 'Back up your Jetpack settings and preferences to your computer. Please note that the backup file will only work with this particular Jetpack.' Below this are two sections: 'Backup' and 'Restore'. The 'Backup' section has a 'Jetpack Admin Password' field and a 'Download' button. The 'Restore' section has a 'Jetpack Admin Password' field, a 'Select a file:' field with a 'Browse' button, and a 'Restore Now' button. At the bottom of the main content area are buttons for 'Restore to Factory Defaults', 'Restart Jetpack', and 'Shutdown Jetpack'. The footer includes the Novatel Wireless logo, copyright information for 2014, and the MiFi Powered logo.

Jetpack Settings - Jetpack Backup and Restore

To save your Jetpack settings to your computer:


- 1 Enter your Admin Password in the Admin Password field.
- 2 Click **Download** to save your current Jetpack settings to a designated location on your computer.

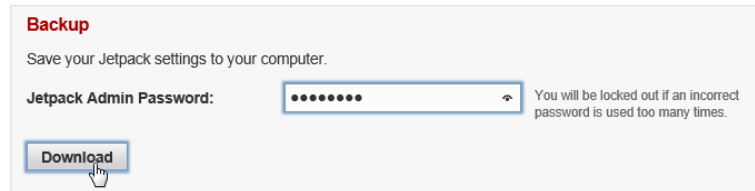

Download Current Jetpack Settings

To restore a previous version of your Jetpack settings to your Jetpack device:


- 1 Click **Browse** to navigate to the desired settings backup file saved on your computer.
- 2 Enter the Admin Password in effect when the backup file was saved in the Admin Password field.
- 3 Click **Restore Now**.

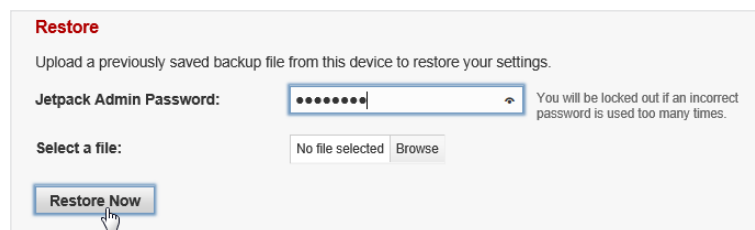

Restore Previous Jetpack Settings

To restore all settings on your Jetpack to factory default settings:

- 1 Click **Restore Factory Defaults**.
- 2 If prompted for a password, enter the default Admin Password **admin**.

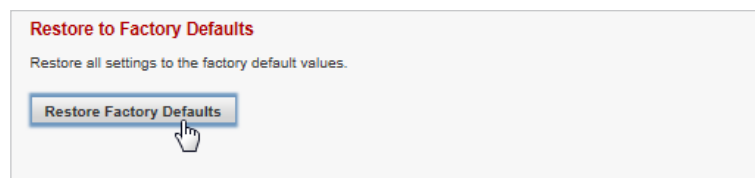


Restore Factory Defaults

GPS

The GPS page contains the following sections:


- **GPS ON/OFF** — Use this control to turn ON/OFF the GPS feature.
- **Turn off** — Allows you to set when the GPS receiver will turn off, once it is on.
- **GPS over Wi-Fi (NMEA)** — Allows you to download and install the GPS over Wi-Fi driver for your computing platform.

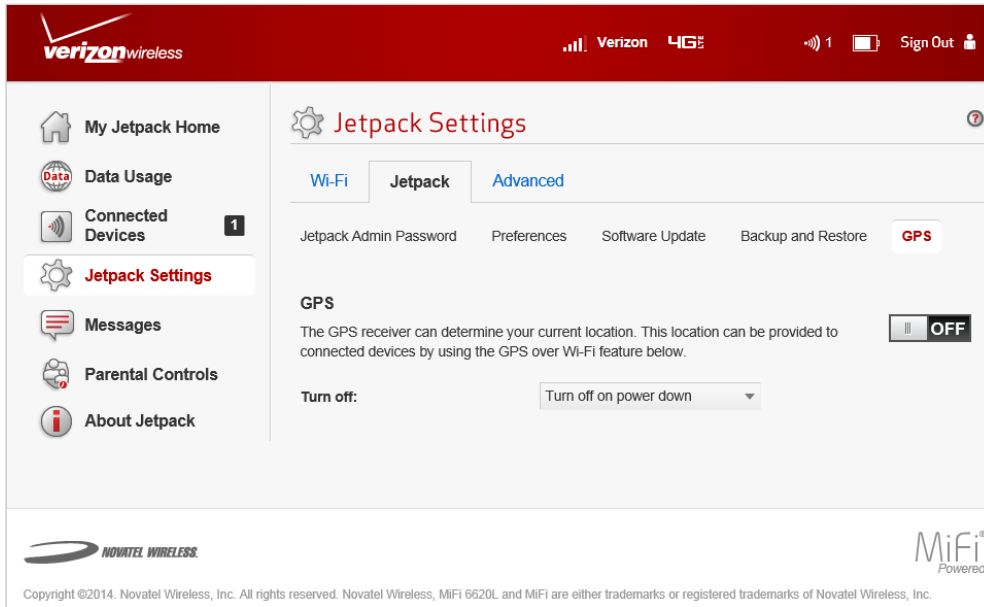

Jetpack Settings - Jetpack GPS

To turn GPS ON:

- 1 Slide the ON/OFF button to **ON**.
- 2 Select the desired turn off option from the drop down menu. The choices are **Turn off on power down** or **Always on**.

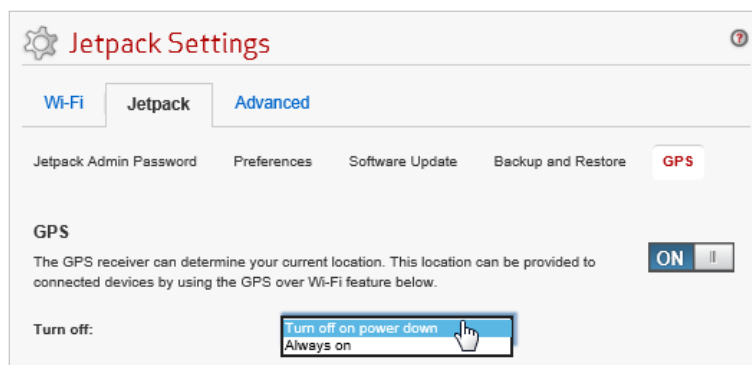

Jetpack Settings - Jetpack GPS Turn ON

To activate GPS over Wi-Fi (NMEA):

- 1 Click **GPS over Wi-Fi (NMEA)**.
- 2 Click the **Turn ON GPS over Wi-Fi** checkbox.
- 3 Click **Download GPS over Wi-Fi Drivers** and select the appropriate driver from the list of available drivers. Save the driver to the desired location on your computer.
- 4 Open the driver .exe file and follow the installation instructions.

Click **Save Changes** to finalize and accept the new GPS settings.

Jetpack Settings

Wi-Fi | **Jetpack** | Advanced

Jetpack Admin Password | Preferences | Software Update | Backup and Restore | **GPS**

GPS

The GPS receiver can determine your current location. This location can be provided to connected devices by using the GPS over Wi-Fi feature below. **ON** ||

Turn off: Turn off on power down

Current Location

Acquired

Map

Map data ©2014 Google Terms of Use Report a map error

Latitude:	32.89518881	Altitude:	308 ft
Longitude:	-117.20175927	Accuracy:	30 ft

GPS over Wi-Fi (NMEA)

GPS data is provided by the Jetpack in the form of a National Marine Electronics Association (NMEA) text stream. This GPS stream can be used by many location-oriented computer programs.

Turn ON GPS over Wi-Fi: Installing GPS over Wi-Fi drivers on each computer is required.

Port number: 11010 Normally, the default value should be used

Download GPS over Wi-Fi Drivers


Save Changes

Jetpack Settings - Jetpack GPS download GPS over Wi-Fi Drivers

Advanced

The Advanced section allows you to change the Jetpack advanced settings. The Advanced page provides network, manual DNS, SIM, firewall, MAC filter and LAN settings, as well as options for configuring port filtering and forwarding applications.

IMPORTANT! Changing the Jetpack's Advanced settings can adversely affect stability, performance and security of the Jetpack.

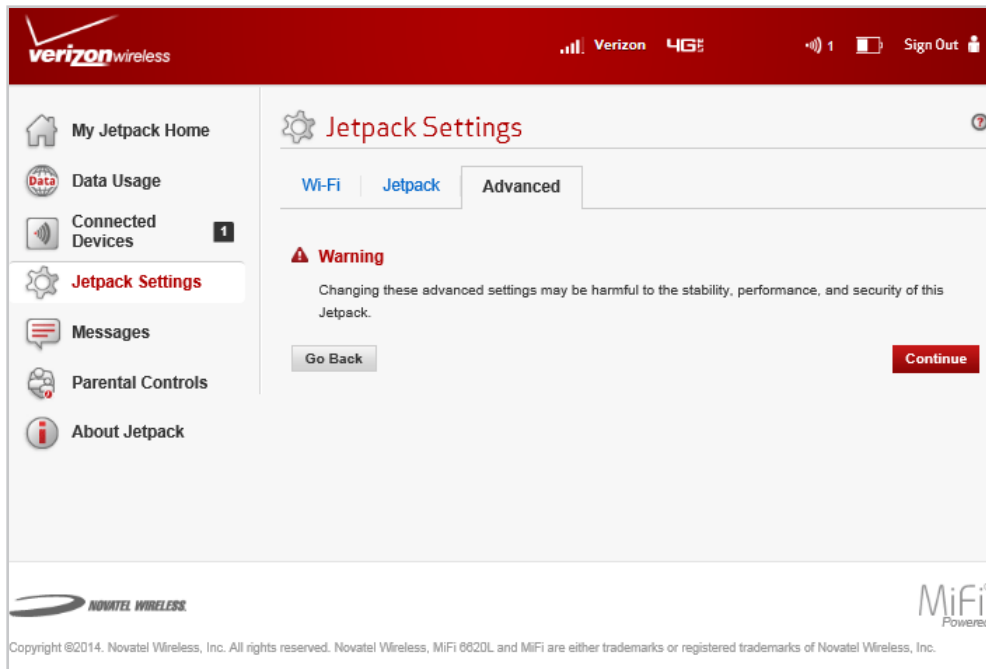


Jetpack Settings - Advanced Settings Warning

Click **Continue** on the Advanced page to access Advanced page options.

The Advanced page contains the following menu options:

- **Networks** (See [Networks](#) on page 72.)
- **Manual DNS** (See [Manual DNS](#) on page 74.)
- **SIM** (See [SIM](#) on page 75.)
- **Firewall** (See [Firewall](#) on page 76.)
- **MAC Filter** (See [MAC Filter](#) on page 77.)
- **LAN** (See [LAN](#) on page 78.)
- **Port Filtering** (See [Port Filtering](#) on page 79.)
- **Port Forwarding** (See [Port Forwarding](#) on page 82.)

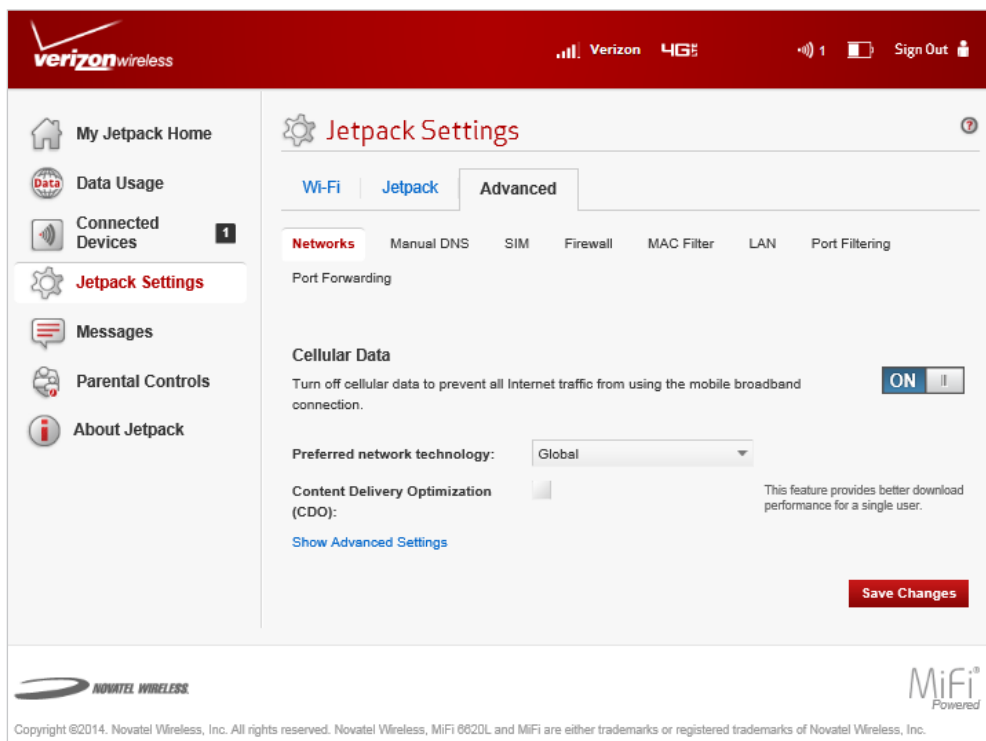

Jetpack Settings Advanced - Networks

Networks

The Networks menu contains the following sections:

- **Cellular Data** — Allows you to turn off cellular data to prevent all internet traffic from using the Jetpack mobile broadband connection.
- **Preferred network technology** — Allows you to select the network technologies which will be used. The choices are Global, LTE only, CDMA only, and LTE/UMTS/GSM.
- **Content Delivery Optimization (CDO)** — Provides better download performance for a single user.
- **Show Advanced Settings** — Click to display or change the following:
 - » **4G LTE APN** — Displays the network carrier APN
 - » **GSM/UMTS/HSPA APN** — Use only when a non-Verizon SIM is inserted.
- **Save Changes** — Use to activate and save new settings.

The screenshot displays the Verizon Jetpack Settings interface. The top navigation bar includes the Verizon logo, signal strength, carrier name (Verizon), network type (4G LTE), battery level, and a 'Sign Out' option. The left sidebar contains navigation links: My Jetpack Home, Data Usage, Connected Devices (with a notification badge), Jetpack Settings (highlighted), Messages, Parental Controls, and About Jetpack. The main content area is titled 'Jetpack Settings' and has tabs for 'Wi-Fi', 'Jetpack', and 'Advanced'. Under the 'Advanced' tab, there are sub-tabs for 'Networks', 'Manual DNS', 'SIM', 'Firewall', 'MAC Filter', 'LAN', and 'Port Filtering'. The 'Cellular Data' section features a toggle switch currently set to 'ON'. Below it, 'Preferred network technology' is set to 'Global'. 'Content Delivery Optimization (CDO)' is disabled. The '4G LTE APN' is set to 'VZWINTERNET', and the 'GSM/UMTS/HSPA APN' field is empty. A 'Save Changes' button is located at the bottom right of the settings area. The footer includes the Novatel Wireless logo and MiFi Powered branding.


Jetpack Settings Advanced Networks - Cellular Data ON

To turn off cellular data and prevent all internet traffic from using the Jetpack mobile broadband connection:

- 1 Slide the Cellular Data ON/OFF button to **OFF**.
- 2 Click **Confirm** on the Confirm warning pop-up window.

NOTE All internet connections will be immediately terminated when you click **Confirm**.

- 3 Click **Save Changes** to accept and finalize the new Advanced Networks settings.

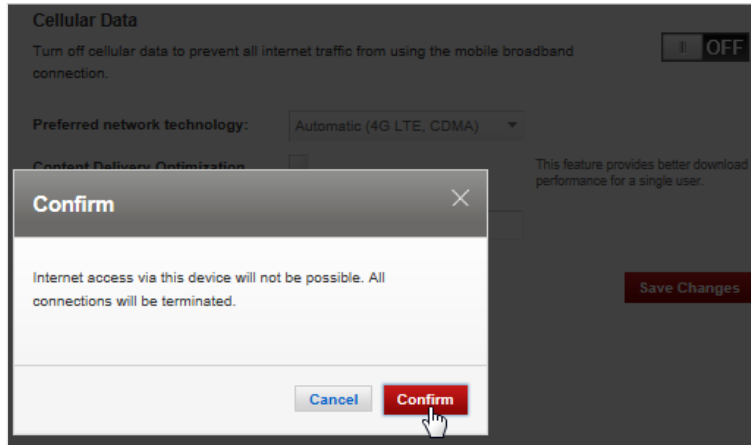

Turn Cellular Data OFF Confirmation

To change your preferred network technology:

- 1 Select the desired network technology from the dropdown menu. Choose from Global, LTE only, CDMA only, and LTE/UMTS/GSM.
- 2 Click **Save Changes** to accept and finalize the revised preferred network setting.

To turn on Content Delivery Optimization for better download performance for a single user:


- 1 Click the Content Delivery Optimization checkbox.
- 2 Click **Save Changes** to accept and finalize the revised CDO setting.

To display or change the Networks Advanced Settings:

- 1 Click **Show Advanced Settings**. The 4G LTE APN displays the pre-configured APN and should not be changed unless you have a corporate account with your own APN.
- 2 If you are using a non-Verizon SIM, enter the APN in the **GSM/UMTS/HSPA APN** field.

Manual DNS

The Jetpack automatically selects a Domain Name Server (DNS). The Manual DNS menu allows you to manually select up to two DNS IP addresses.

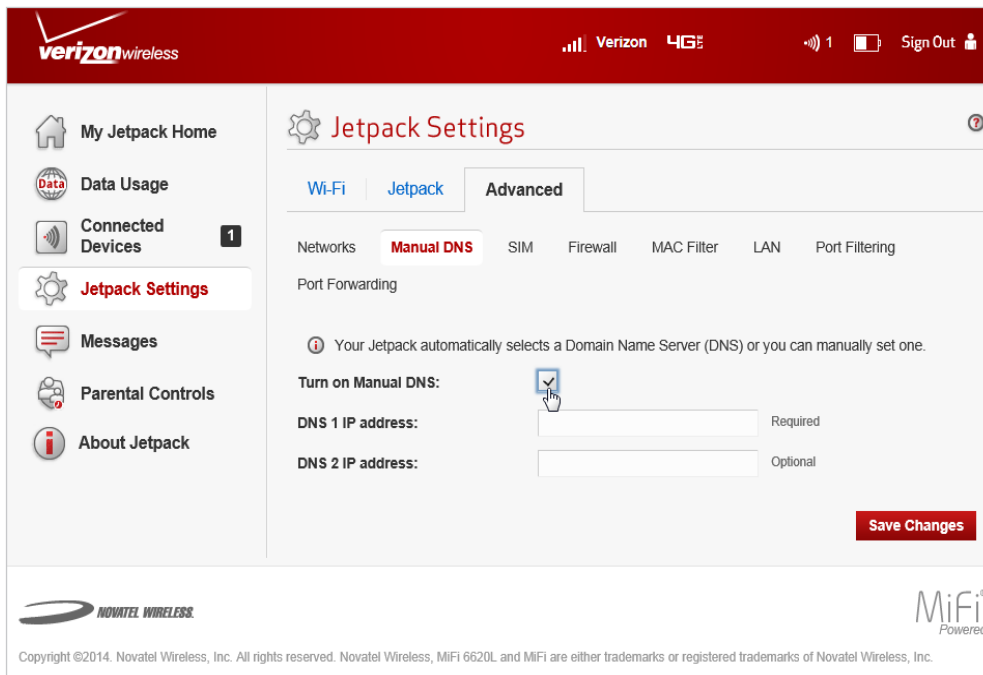

Jetpack Settings Advanced - Manual DNS

To manually select a Domain Name Server:

- 1 Click the box next to **Enable manual DNS**.
- 2 Enter the IP address for the first DNS in the **DNS 1 IP address** field.
- 3 Enter the IP address for the second DNS in the **DNS 2 IP address** field, if applicable.
- 4 Click **Save Changes**.

SIM

The SIM menu gives you settings and information about the Jetpack's Subscriber Identity Module (SIM) card. The SIM card inside your Jetpack can be locked with a PIN code for additional security. If locked, the PIN code must be entered before the Jetpack can connect to the Internet. The SIM menu takes you to the SIM page. The SIM menu has the following options:

- **SIM PIN Lock feature** — Indicates whether or not the PIN lock feature is in use. If ON, the PIN lock has been turned on, and the SIM PIN must be entered in order to connect to the mobile network. If OFF, the PIN lock feature is not turned on, and the SIM PIN is not required.
- **SIM status** — Indicates the current status of the SIM card. Possible values include:
 - **Ready** — This is the normal state. The SIM PIN is not used.
 - **PIN Locked** — The SIM PIN must be entered before you can use the mobile network.
 - **PUK Locked** — The PUK for the SIM must be entered in order to continue. The PUK can be obtained from your service provider.
 - **Unlocked** — The SIM PIN is needed, but has already been entered.
 - **No SIM** — No SIM was detected. If you do have a SIM, check that it is inserted correctly.
 - **SIM Error** — A SIM was detected, but it did not respond as expected, and cannot be used.
- **Desired action** — Allows you to turn the PIN lock feature ON/OFF.
- **Enter current PIN** — Type the desired PIN in the **Enter current PIN** field. The default PIN is 1111.
- **Save Changes** — Use to activate and save new settings.

The screenshot displays the Verizon Wireless Jetpack Settings interface. The top navigation bar includes the Verizon logo, signal strength, Verizon 4G LTE, battery level, and a 'Sign Out' button. The left sidebar contains navigation options: My Jetpack Home, Data Usage, Connected Devices (with a notification badge), Jetpack Settings (selected), Messages, Parental Controls, and About Jetpack. The main content area is titled 'Jetpack Settings' and has tabs for Wi-Fi, Jetpack, and Advanced (selected). Under the 'Advanced' tab, there are sub-tabs for Networks, Manual DNS, SIM (selected), Firewall, MAC Filter, LAN, and Port Filtering. The SIM settings section includes a 'SIM PIN Lock feature' set to 'Off', a 'SIM Status' of 'Ready', and a 'Desired Action' button labeled 'Turn on PIN lock'. Below this is an 'Enter current PIN' field with a placeholder 'Default PIN is 1111'. A red warning message states: '3 attempts remain until your SIM is permanently locked.' A red triangle icon and text below the warning state: 'Entering an incorrect PIN too often will permanently lock your SIM and you will be unable to use the Jetpack. You will need to contact Verizon customer support to unlock the SIM.' A 'Save Changes' button is located at the bottom right of the settings area. The footer contains the Novatel Wireless logo and MiFi Powered logo, along with a copyright notice for 2014.

Jetpack Settings Advanced - SIM

IMPORTANT! Entering an incorrect PIN will lock the SIM. **The default PIN is 1111.**

Firewall

The Jetpack firewall determines which Internet traffic is allowed. The Firewall menu contains the following sections:

- **VPN Passthrough** — Turns ON/OFF the VPN feature and allows or disallows connected devices to establish a VPN tunnel.
 - If **ON**, this feature allows VPN clients to connect through the Jetpack to remote VPN Servers. Normally, this option should be turned on.
 - If **OFF**, VPN clients are not allowed to connect.
- **IPv6 Transparent Mode** — Allows connected devices to be accessible from the Internet.
- **DMZ (IPv4)** — Allows the connected device specified as the DMZ IP address to receive all traffic which would otherwise be blocked by the firewall.
 - **DMZ (checkbox)** — Use the checkbox to turn ON/OFF the DMZ feature.
 - **DMZ IP Address** — Enter the IP address of the connected device you wish to become the DMZ device.
- **Save Changes** — Use to activate and save new settings.

The screenshot shows the Verizon Jetpack Settings interface. At the top, there is a red header with the Verizon logo and signal strength indicators. Below the header, a navigation menu on the left includes options like My Jetpack Home, Data Usage, Connected Devices, Jetpack Settings (highlighted), Messages, Parental Controls, and About Jetpack. The main content area is titled 'Jetpack Settings' and has tabs for Wi-Fi, Jetpack, and Advanced. Under the Advanced tab, there are sub-tabs for Networks, Manual DNS, SIM, Firewall (selected), MAC Filter, LAN, and Port Filtering. The Firewall section contains three main settings: 'VPN Passthrough' with a toggle set to 'ON', 'IPv6 Transparent Mode' with a toggle set to 'OFF', and 'DMZ (IPv4)' which includes a checkbox (unchecked) and a 'Destination IP address' input field. A 'Save Changes' button is located at the bottom right of the settings area. The footer of the page includes the Novatel Wireless logo and copyright information.

Jetpack Settings Advanced - Firewall

MAC Filter

The MAC Filter allows you to specify which devices can access the Jetpack Wi-Fi network.

ON/OFF — Turns the MAC Filter ON/OFF. Before turning on, ensure that the Allowed Devices list is not empty. When turning on, any Connected Device which is not in the Allowed Devices list will immediately be disconnected.

- **Refresh** — Use to refresh the screen and delete any unsaved changes.
- **Add Device** — Use to add a new device to the devices list.
- **Save Changes** — Use to activate and save new settings.

The screenshot shows the Verizon Jetpack Settings Advanced - MAC Filter page. The page has a red header with the Verizon logo and signal strength indicators. The left sidebar contains navigation options: My Jetpack Home, Data Usage, Connected Devices (with a notification badge), Jetpack Settings (selected), Messages, Parental Controls, and About Jetpack. The main content area is titled 'Jetpack Settings' and has tabs for Wi-Fi, Jetpack, and Advanced. Under the Advanced tab, there are sub-tabs for Networks, Manual DNS, SIM, Firewall, MAC Filter (selected), LAN, and Port Filtering. The MAC Filter section has a toggle switch set to OFF and a description: 'If turned on, only specified devices can access the primary Wi-Fi network.' Below this is a table with the following data:

Type	Name	MAC Address	Status	Blocked	MAC Address Filter
	device_1	00:00:00:00:00:00	Your device	<input type="checkbox"/>	<input checked="" type="checkbox"/>
	Unknown	00:00:00:00:00:00	Offline	<input checked="" type="checkbox"/>	<input type="checkbox"/>
	Unknown	00:00:00:00:00:00	Offline	<input type="checkbox"/>	<input checked="" type="checkbox"/>

At the bottom of the table are 'Refresh' and 'Add Device' buttons. Below the table is a 'Save Changes' button. The footer contains the Novatel Wireless logo and copyright information: 'Copyright ©2014. Novatel Wireless, Inc. All rights reserved. Novatel Wireless, MiFi 6620L and MiFi are either trademarks or registered trademarks of Novatel Wireless, Inc.' and the 'MiFi Powered' logo.

Jetpack Settings Advanced - MAC Filter


To add a device to the device list:

- 1 Click **Add Device** and enter the device name in the Name field.
- 2 Select the device type from the **Type** dropdown menu.
- 3 Enter the MAC Address in the **MAC Address** field.
- 4 Mark the **Blocked** and/or **MAC Address Filter** check box as required.
- 5 Click **Save Changes** to activate and save the settings.

LAN

The LAN page gives you settings and information about the Jetpack's network. The LAN menu contains the following sections:

- **IPv4**
 - **IP address** — The IP address for the Jetpack.
 - **Subnet mask** — The subnet mask network setting for the Jetpack. The default value 255.255.255.0 is standard for small (class "C") networks. If you change the LAN IP Address, ensure you use the correct Subnet Mask for the IP address range containing the LAN IP address.
 - **MAC address** — The Media Access Controller (MAC) or physical address for the Jetpack.
 - **Turn On DHCP server** — The **Turn On DHCP Server** checkbox enables or disables the DHCP Server feature. Normally this should be left turned on.
 - **Start DHCP address range at** — The start range of IP addresses reserved for use by the Jetpack's DHCP server table.
 - **DHCP address range** — The current range of IP addresses reserved for use by Jetpack's DHCP server table. If a device with a static IP address wants to connect to MiFi 6620L's network, the static IP should be outside of the DHCP address range. Most devices do not have a static IP.
 - **DHCP lease time** — Use to determine how often connected devices must renew the IP address assigned to them by the DHCP server. Normally this is left at the default value, but if you have special requirements you can change the value.
- **IPv6**
 - **Enable IPv6** — The **Enable IPv6** checkbox turns ON/OFF the IPv6 feature.
 - **Link-Local address** — Displays the local address when IPv6 is turned on.
- **Save Changes** — Use to activate and save new settings.

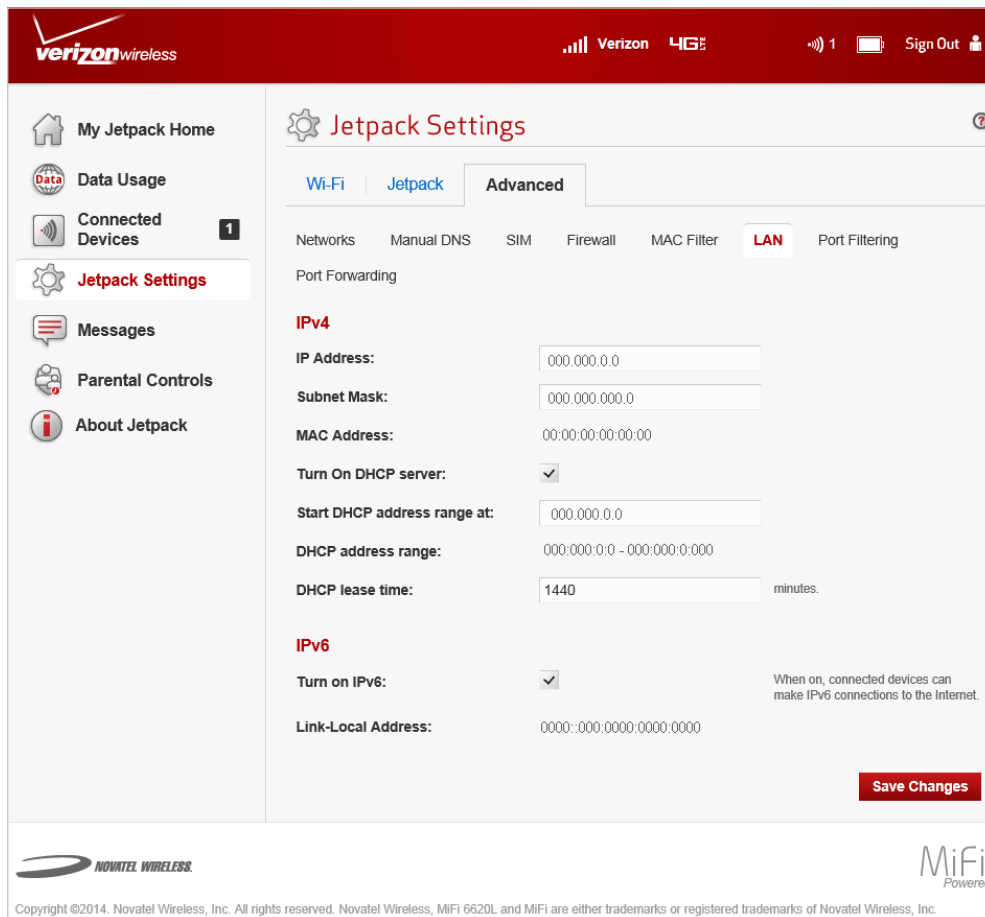

Jetpack Settings Advanced - LAN


Port Filtering

Port Filtering allows you to block outgoing Internet connections and permit only allowed applications to access the Internet. You can also customize a list of allowed applications which permits only certain programs to connect to the Internet.

Slide the **ON/OFF** button to **ON** to turn on Port Filtering. When the feature is **turned on** you must select a port filtering application in the **Applications** list to allow that application to connect to the Internet. For example, if you select VPN in the Applications list but do not select HTTP, you can connect to a VPN server but you cannot connect to a web page using your Internet browser.

The Port Filtering menu contains the following sections:

- **Applications** — Turn on each port filtering application that needs to be able to access the Internet by checking the box next to one or more applications. When port filtering is turned on, all other applications are blocked.
- **Custom Applications** — You can define your own applications, and then turn them ON/OFF as needed. To define an application, you need to know the outgoing ports used by the application.
 - **Add Custom Application** — Use to define your own applications, and then turn them on or off as needed.
- **Save Changes** — Use to activate and save new settings.

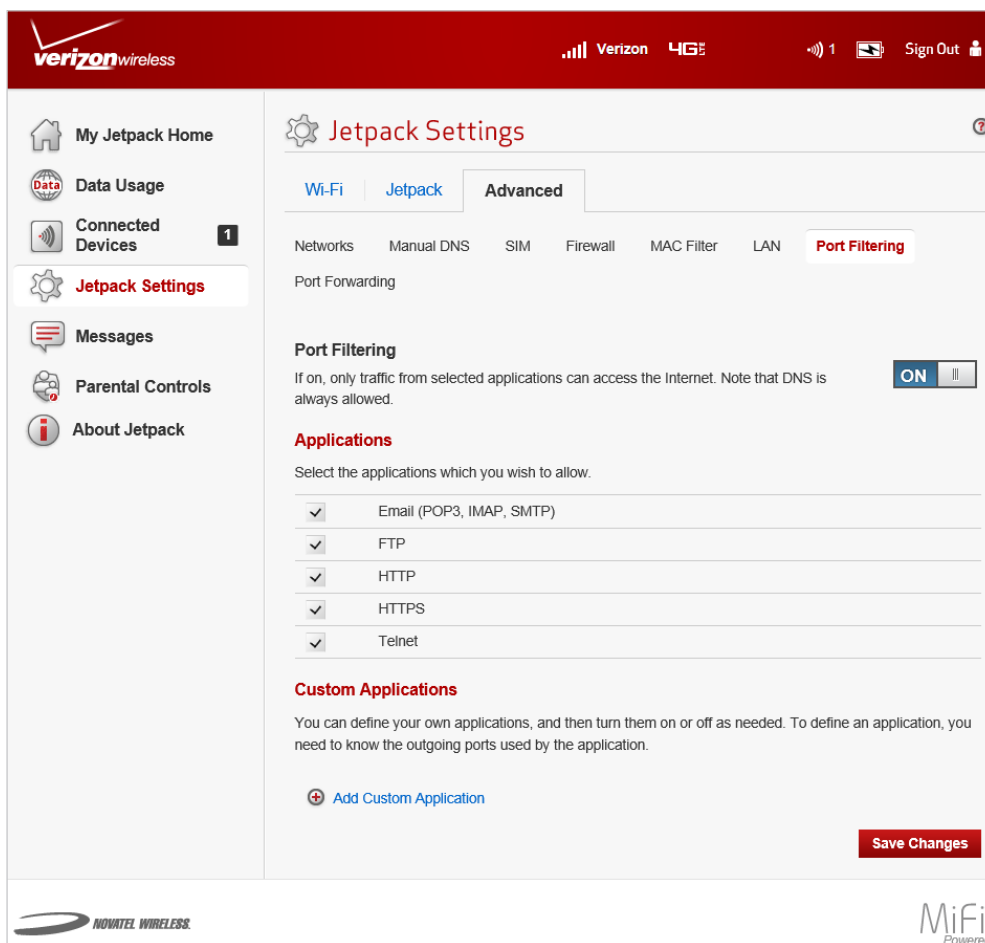


Jetpack Settings Advanced - Port Filtering

To select the applications you wish to allow:

- 1 Mark the checkbox to the left of the application. The choices are Email (POP3, IMAP, SMTP), FTP, HTTP, HTTPS, and Telnet.
- 2 Click **Add Custom Application** to add a new custom application to the list of allowed applications. You can define and turn on custom Port Filtering applications. You need to know details of the traffic used and generated by the applications you wish to define.

NOTE The **Add Custom Application** option is only available when port filtering is turned **ON**. You can add up to ten custom applications.

The Custom Port Filtering page uses check boxes to turn on port filtering for custom applications. Similar to the Applications list, you must turn on custom applications so they can connect to the Internet.

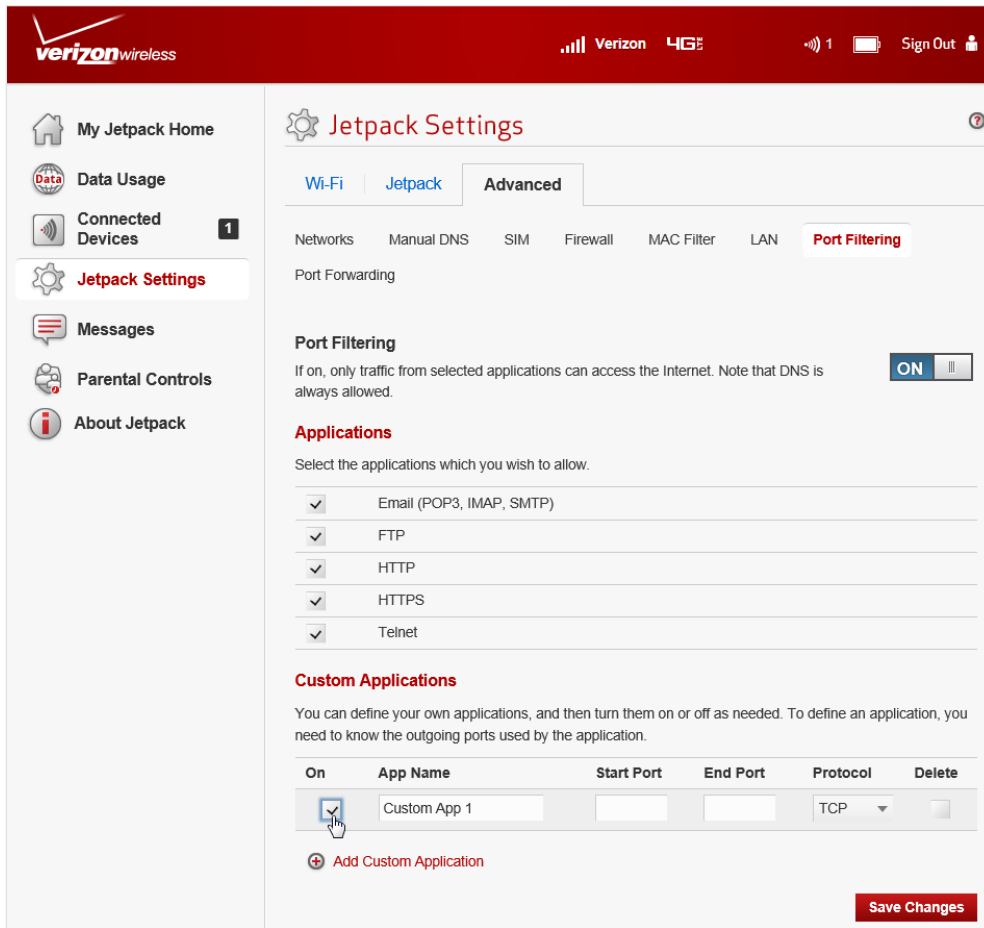

Jetpack Settings Advanced Port Filtering - Add Custom Application

- 3 Enter the beginning of the range of port numbers used by outgoing traffic for the custom application being added in the **Start Port** field.
- 4 Enter the end of the range of port numbers in the **End Port** field. If the port is a single port instead of a range, type the same value for both the **Start Port** and the **End Port**.
- 5 Select the protocol (TCP, UDP, or both) used by each port range from the **Protocol** dropdown menu.
- 6 Click **Save Changes** to activate and save any changes made to the custom applications.
- 7 Select the **Delete** checkbox next to any custom application you wish to delete and click **Save Changes**.

NOTE Click on the **Port Filtering** menu tab again to remove deleted custom applications from view on the screen.

Port Forwarding

Port Forwarding allows incoming traffic from the Internet to be forwarded to a particular computer or device on your Wi-Fi network. Normally, the built-in firewall blocks incoming traffic from the Internet. Use Port Forwarding to allow Internet users to access any server you are running on your computer, such as a Web, FTP, or E-mail server. For some online games, Port Forwarding must be used in order for the games to function correctly. The Port Forwarding menu contains the following sections:

- **ON/OFF** — Slide the ON/OFF button to ON to activate Port Forwarding.
- **Default Applications** — The IP address for the selected application. Choose from DNS, FTP, HTTP, POP3, SMTP, SNMP Telnet and TFTP.
- **Custom Applications**
 - **Add Custom Application** — Allows you to define your own applications. Once defined, these applications can be turned ON/OFF in the same way as pre-defined applications.
 - **Save Changes** — Use to activate and save new settings.

verizon wireless

Verizon 4G LTE

Sign Out

My Jetpack Home

Data Usage

Connected Devices 1

Jetpack Settings

Messages

Parental Controls

About Jetpack

Jetpack Settings

Wi-Fi Jetpack **Advanced**

Networks Manual DNS SIM Firewall MAC Filter LAN Port Filtering

Port Forwarding

Port Forwarding

Port forwarding sends specific incoming traffic to a connected device. The connected device is specified using its IP address. **ON**

Default Applications

Application	IP Address
<input checked="" type="checkbox"/> DNS	<input type="text"/>
<input checked="" type="checkbox"/> FTP	<input type="text"/>
<input type="checkbox"/> HTTP	<input type="text"/>
<input checked="" type="checkbox"/> POP3	<input type="text"/>
<input type="checkbox"/> SMTP	<input type="text"/>
<input checked="" type="checkbox"/> SNMP	<input type="text"/>
<input type="checkbox"/> Telnet	<input type="text"/>
<input type="checkbox"/> TFTP	<input type="text"/>

Custom Applications

You can define your own applications, and then turn them on or off as needed. To define an application, you need to know the incoming ports used by the application.

On	App Name	IP Address	Start Port	End Port	Protocol	Delete
<input checked="" type="checkbox"/>	Custom App 1	<input type="text"/>	<input type="text"/>	<input type="text"/>	TCP	<input type="checkbox"/>

[Add a Custom Application](#)

Save Changes

NOVATEL WIRELESS

MiFi[®] Powered

Copyright ©2014. Novatel Wireless, Inc. All rights reserved. Novatel Wireless, MiFi 6620L and MiFi are either trademarks or registered trademarks of Novatel Wireless, Inc.

Jetpack Settings Advanced - Port Forwarding

Universal Charging

Universal Charging allows you to charge your phone or other device using your Jetpack. You can also set battery charging limits, check current charging availability, and customize your device preferences.

On the Jetpack Display

To charge your phone or other device using your Jetpack:


- 1 On the Home screen, scroll to the Universal Charging icon and press the select button to display an animation showing how to connect and charge a phone or other device using the Universal Charging port.
- 2 Select **More** to display charging status.
- 3 Select **Exit** to return to the Home screen.




Universal Charging Option



Instruction Animation

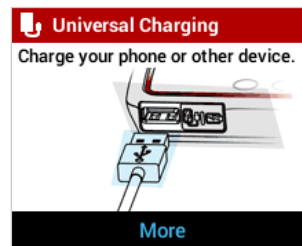

Instruction Animation

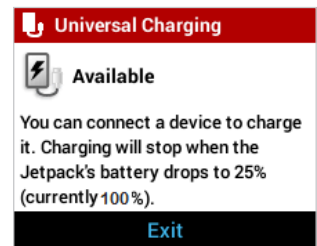

Current Charging Availability

On the Jetpack Admin Website

The Jetpack Settings Jetpack Preferences page provides many options to customize the behaviour of your Jetpack. (See [Preferences](#) on page 64.)


Wi-Fi Protected Setup (WPS)

WPS is a system that allows Wi-Fi devices to connect to a Wi-Fi network without having to manually enter the network key, and is accessible through the Jetpack display.


On the Jetpack Display

To start Push Button WPS:


- 1 On the Home screen, scroll to the WPS icon and press the select button to display WPS Method options.
- 2 Navigate to the Start Push Button option and press the select button. WPS starts and you have 2 minutes to press the WPS button on the Wi-Fi device you want to connect to your Jetpack to complete automatic setup.
- 3 To exit the Push Button WPS option and return to the Home screen, navigate to Exit and press the select button.

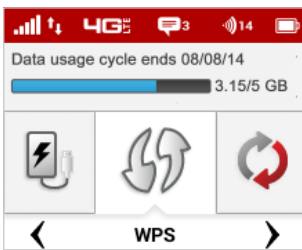


WPS Option

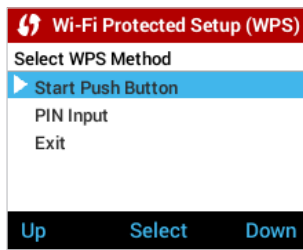

Start Push Button Method

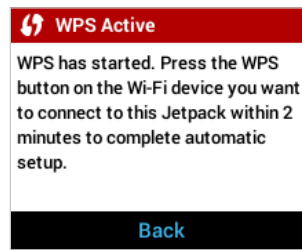


Push Button WPS Started

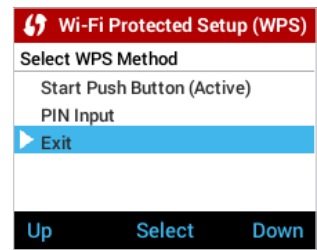


Exit WPS Setup

To start PIN Input WPS:


- 1 On the Home screen, scroll to the WPS icon and press the select button to display WPS Method options.
- 2 Navigate to the PIN Input option and press the select button. Follow the instructions on the screen to enter a PIN and connect the selected Wi-Fi device to your Jetpack.
- 3 To exit the PIN Input WPS option and return to the Home screen, navigate to Exit and press the select button.

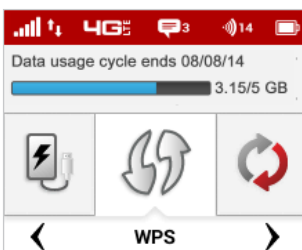


WPS Option

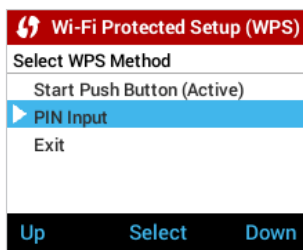

Select PIN Input Method

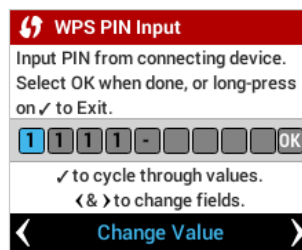

Input PIN

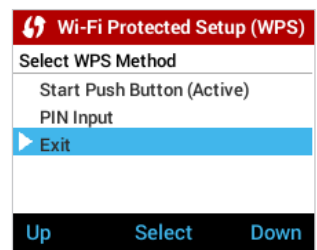

Exit WPS Setup

On the Jetpack Admin Website

To turn on the WPS system on your Jetpack:

- 1 Select **Jetpack Settings > Wi-Fi Options**.
- 2 Mark the **WPS** checkbox, then click **Save Changes**.

The screenshot shows the Verizon Jetpack Admin Website interface. The top navigation bar includes the Verizon logo, signal strength, Verizon 4G LTE, battery level, and a 'Sign Out' button. The left sidebar contains navigation options: My Jetpack Home, Data Usage, Connected Devices (with a notification badge), Jetpack Settings (highlighted), Messages, Parental Controls, and About Jetpack. The main content area is titled 'Jetpack Settings' and has tabs for 'Wi-Fi', 'Jetpack', and 'Advanced'. A warning message states: 'Changes made to these Wi-Fi settings may require you to reconnect your Wi-Fi devices to this Jetpack using the new settings.' The 'Wi-Fi' section has an 'ON' toggle. Below this, various settings are listed with dropdown menus and checkboxes. The 'WPS' checkbox is checked. Other settings include Wi-Fi name (SSID), Security (WPA2 Personal PSK (AES)), Wi-Fi password (Key), Max Wi-Fi connections (15), Band (2.4 GHz), 2.4 GHz Band Settings (802.11 Mode: 802.11g + 802.11n, Channel: Automatic), 5 GHz Band Settings (Bandwidth: 20/40 MHz, 802.11 Mode: 802.11a + 802.11n, Channel: Automatic), Display the Wi-Fi name on Jetpack screen (checked), Display the Wi-Fi password on Jetpack screen (checked), Broadcast Wi-Fi name (SSID) (checked), Wi-Fi Multimedia (WMM) (checked), and Wi-Fi privacy separation (unchecked). A 'Save Changes' button is located at the bottom right of the settings area. The footer includes the Novatel Wireless logo and MiFi Powered logo, along with a copyright notice for 2014.

Jetpack Settings Wi-Fi - Turn ON WPS


Software Update

Software Update allows you to view the current software version and when the last check was made for updates, lists available updates, and provides an update history. You can also download and install a new update using your Jetpack device.

On the Jetpack Display

To check for a Software update:

- 1 On the Home screen, scroll to the Software Update icon and press the select button to display the current Software Version and last check for an update. Press the select button to move to the Software Update page.
- 2 Select **Yes**, then press the select button to check for an update. If an update is available, you can choose to download and install the update using your Jetpack device.
- 3 Press/hold the select button to return to the Home screen.

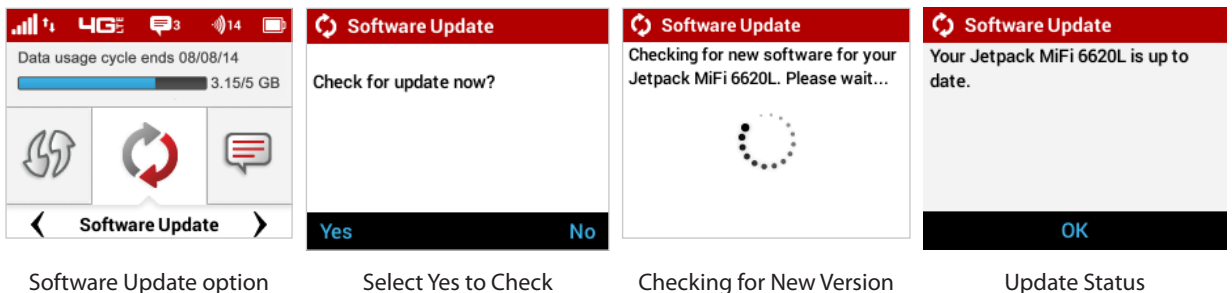

On the Jetpack Admin Website

The Software Update page displays the current software version, and when a check is made for updates lists available updates and provides an update history. (See Software Update on page 65.)


Messages

Messages displays the number of unopened Verizon system messages sent to your Jetpack, and allows you to read and retain or delete each message.


On the Jetpack Display

To display unread messages:


- 1 On the Home screen, scroll to the Messages icon and press the select button to open the first unread message.
- 2 To delete the message, press the select button. To retain the message, use the right scroll button to move to the next unread message.
- 3 When **No More Messages** displays, press the select button to exit and return to the Home screen.

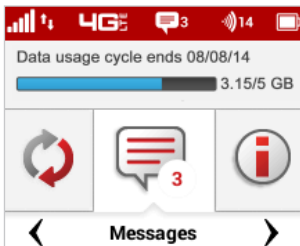


Select Messages

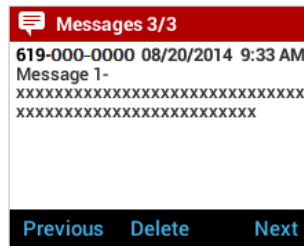

Scroll Right to Next Message

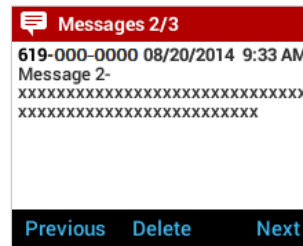


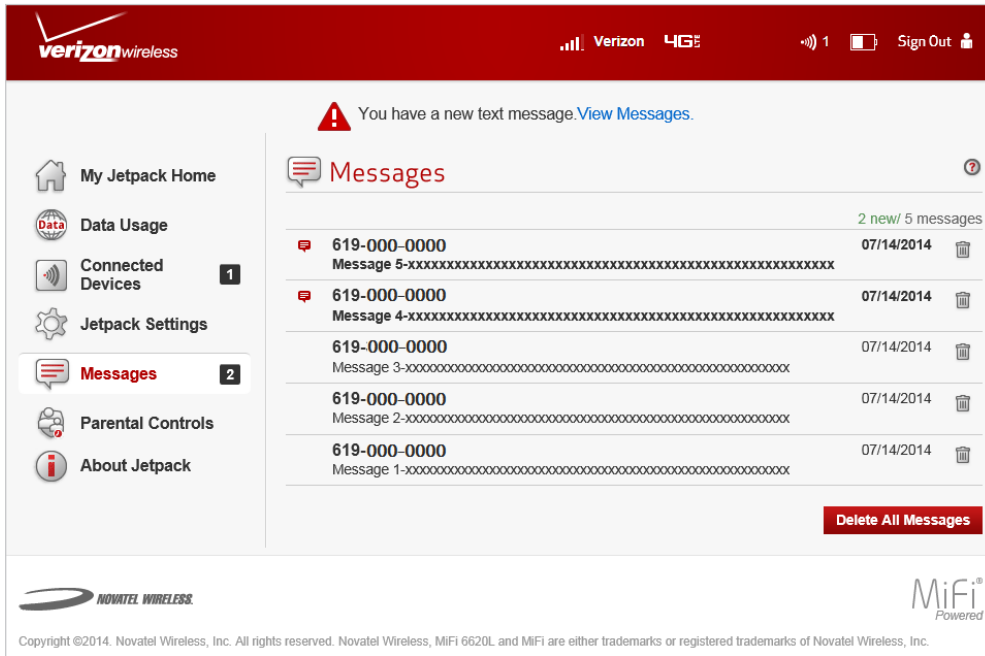
Press Select to Delete

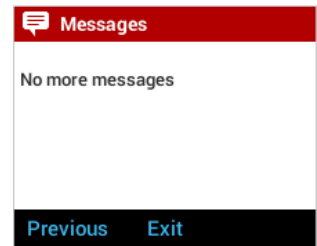

Press Select Button to Exit


On the Jetpack Admin Website


The Jetpack Messages page displays all existing Verizon system messages, and allows you to delete messages individually or all messages at one time. Unread messages are marked with a red message icon .



Jetpack Messages


To delete existing messages:

- 1 To delete one message at a time, click the garbage can icon  for each message you want to delete.

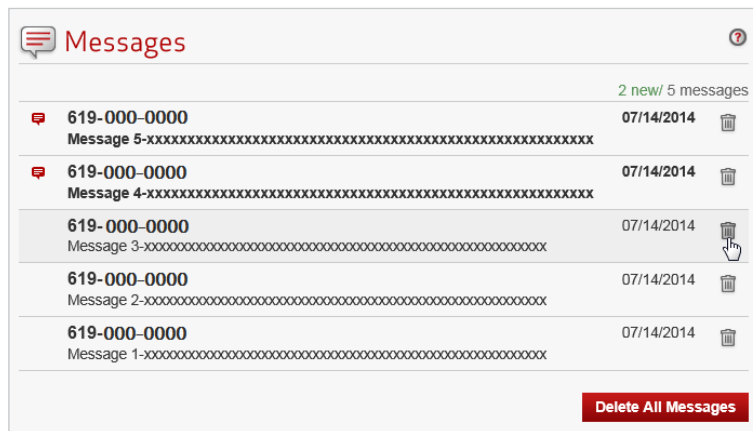

Jetpack Messages - Delete

- 2 To delete all messages at one time, click **Delete All Messages** at the bottom of the page.

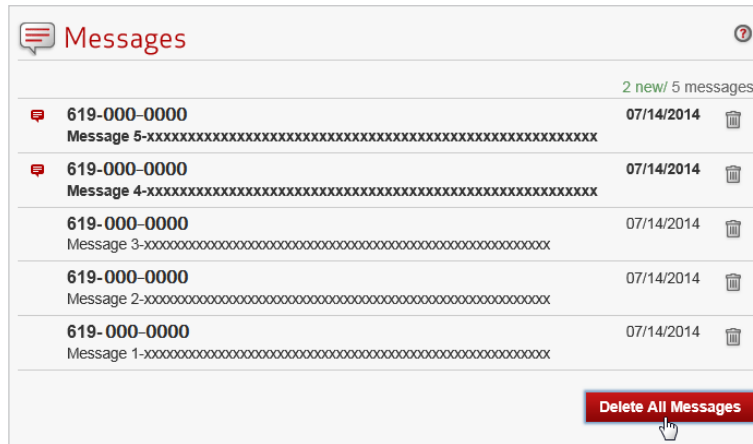


The screenshot shows the Jetpack Messages interface. At the top left, there is a 'Messages' header with a speech bubble icon. To the right of the header, it says '2 new/ 5 messages'. Below the header is a list of five messages, each with a red envelope icon, a phone number '619-000-0000', a date '07/14/2014', and a trash icon. The messages are labeled 'Message 5', 'Message 4', 'Message 3', 'Message 2', and 'Message 1' from top to bottom. At the bottom right of the message list, there is a red button with white text that says 'Delete All Messages'. A mouse cursor is pointing at the button.

Jetpack Messages - Delete All

Parental Controls

Parental Controls options are available on the Jetpack Admin website, and allow you to block or allow access to specified sites. The block/allow function can be applied to all devices or specified devices only. The Parental Controls page includes the following sections:

- **Summary** (See [Summary](#) on page 90.)
- **Site List** (See [Site List](#) on page 90.)
- **Device List** (See [Device List](#) on page 93.)

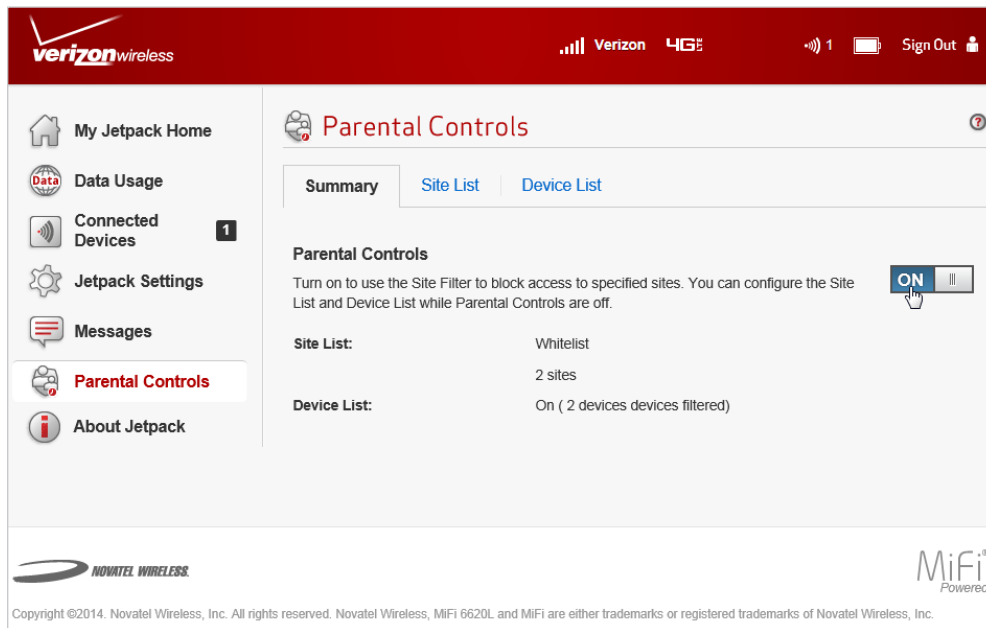

Jetpack Parental Controls - Summary

Summary

The Parental Controls Summary section allows you to turn the Site List **ON/OFF**, and displays Site List and Device List status information

To turn on the Site Filter and block access to specified sites, slide the **ON/OFF** button to **ON**.


Site List

The Parental Controls Site List section allows you to block access to a list of sites, or allow access only to specified sites.

To block access to a list of sites:

- 1 Select the **Block List** button to display a list of currently blocked sites.
- 2 Click **Add Website** to display a new field where you can enter the domain name of an additional site to block. Repeat until you have entered all sites you want to block.


- 3 Click **Save Changes** to update and save the revised Block List.

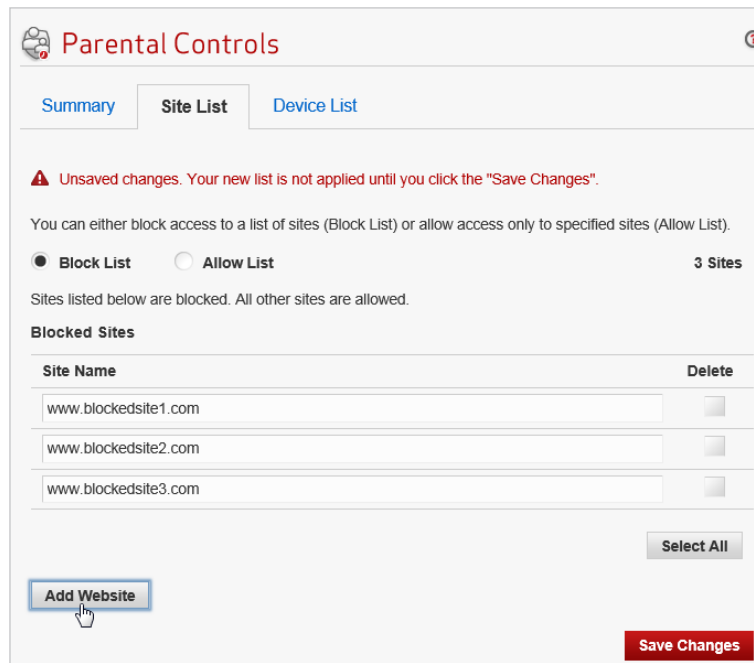

Jetpack Parental Controls Site List - Block List Add

To delete a site from the Blocked List:

- 1 Select the **Block List** button to display the current list of blocked sites.
- 2 Select the **Delete** checkbox for the site you want to delete. To delete all blocked sites, click **Select All**.
- 3 Click **Save Changes** to delete the selected sites and save the revised Block List.

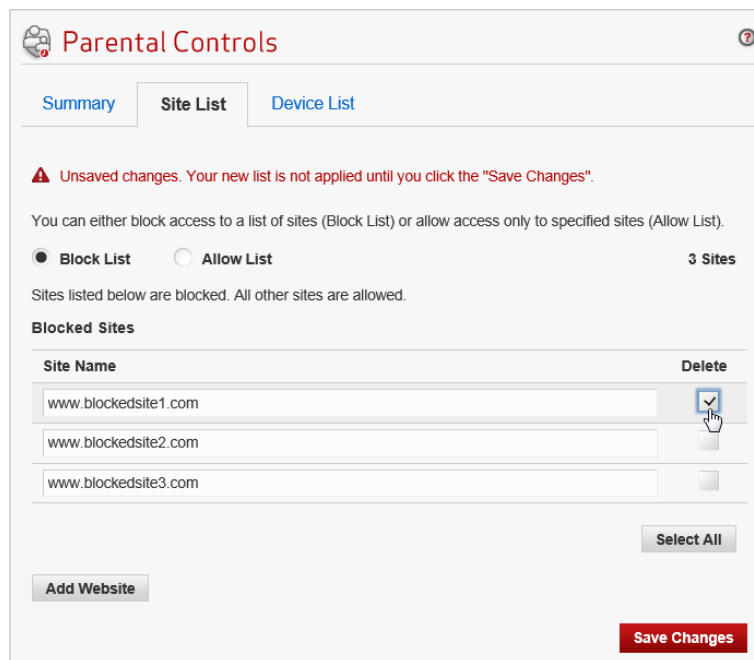

Jetpack Parental Controls Site List - Block List Delete

To allow access to a specified site:

- 1 Select the **Allow List** button to display the current list of allowed sites.
- 2 Click **Add Website** to display a new field where you can enter the domain name of an additional site to allow. Repeat until you have entered all sites you want to allow.
- 3 Click **Save Changes** to update and save the revised Allow List.

The screenshot shows the 'Parental Controls' interface with the 'Site List' tab selected. A warning message states: 'Unsaved changes. Your new list is not applied until you click the "Save Changes".' Below this, there are radio buttons for 'Block List' and 'Allow List', with 'Allow List' selected. A '2 Sites' indicator is present. A table titled 'Allowed Sites' contains two entries: 'www.allowsite1.com' and 'www.allowsite2.com', each with a 'Delete' checkbox. At the bottom, there is an 'Add Website' button (highlighted with a mouse cursor), a 'Select All' button, and a red 'Save Changes' button.

Jetpack Parental Controls Site List - Allow List Add

To delete a site from the Allow List:

- 1 Select the **Allow List** button to display the current list of allowed sites.
- 2 Select the **Delete** checkbox for the site you want to delete. To delete all blocked sites, click **Select All**.
- 3 Click **Save Changes** to delete the selected sites and save the revised Allow List.


The screenshot shows the 'Parental Controls' interface with the 'Site List' tab selected. A warning message states: 'Unsaved changes. Your new list is not applied until you click the "Save Changes".' Below this, there are radio buttons for 'Block List' and 'Allow List', with 'Allow List' selected. A '2 Sites' indicator is present. A table titled 'Allowed Sites' contains two entries: 'www.allowsite1.com' and 'www.allowsite2.com', each with a 'Delete' checkbox that is checked. At the bottom, there is a disabled 'Add Website' button, a 'Select All' button (highlighted with a mouse cursor), and a red 'Save Changes' button.

Jetpack Parental Controls Site List - Allow List Delete


Device List

The Parental Controls Device List section allows you to turn the Device List ON/OFF and identify which devices will use the Site Filter.

- If the Device List is turned ON, only devices listed and selected will use the Site Filter.

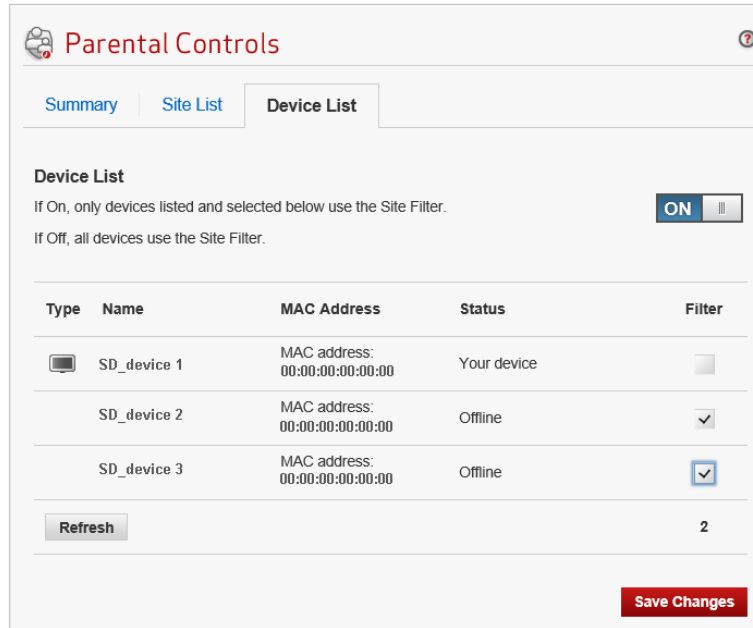


The screenshot shows the 'Parental Controls' interface with the 'Device List' tab selected. A toggle switch is set to 'ON'. Below the toggle, there is a table with columns: Type, Name, MAC Address, Status, and Filter. Three devices are listed: SD_device 1 (Your device), SD_device 2 (Offline), and SD_device 3 (Offline). The Filter column shows checkboxes: unchecked for SD_device 1, checked for SD_device 2, and checked for SD_device 3. A 'Refresh' button is at the bottom left, and a 'Save Changes' button is at the bottom right. A count of '2' is shown at the bottom right of the table area.


Type	Name	MAC Address	Status	Filter
	SD_device 1	MAC address: 00:00:00:00:00:00	Your device	<input type="checkbox"/>
	SD_device 2	MAC address: 00:00:00:00:00:00	Offline	<input checked="" type="checkbox"/>
	SD_device 3	MAC address: 00:00:00:00:00:00	Offline	<input checked="" type="checkbox"/>

Jetpack Parental Controls Device List - ON

- If the Device List is turned OFF, all devices will use the Site Filter.

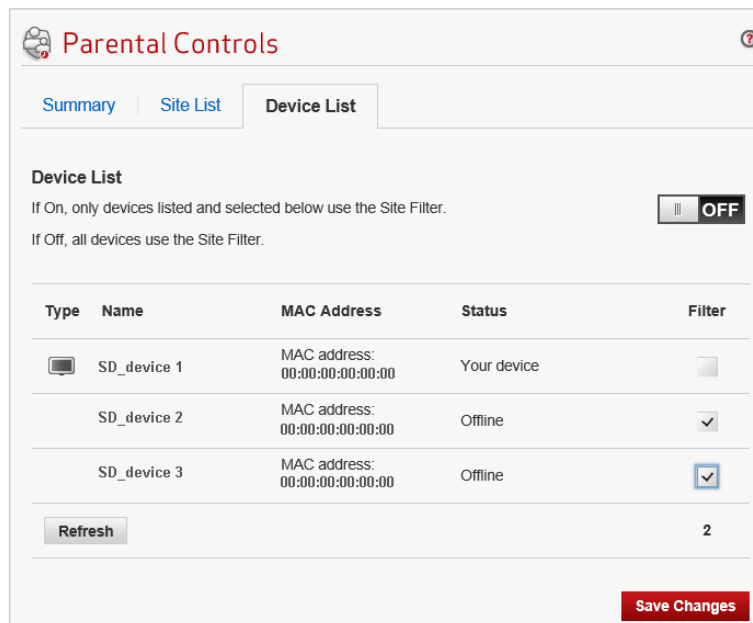

The screenshot shows the 'Parental Controls' interface with the 'Device List' tab selected. A toggle switch is set to 'OFF'. Below the toggle, there is a table with columns: Type, Name, MAC Address, Status, and Filter. Three devices are listed: SD_device 1 (Your device), SD_device 2 (Offline), and SD_device 3 (Offline). The Filter column shows checkboxes: unchecked for SD_device 1, checked for SD_device 2, and checked for SD_device 3. A 'Refresh' button is at the bottom left, and a 'Save Changes' button is at the bottom right. A count of '2' is shown at the bottom right of the table area.

Type	Name	MAC Address	Status	Filter
	SD_device 1	MAC address: 00:00:00:00:00:00	Your device	<input type="checkbox"/>
	SD_device 2	MAC address: 00:00:00:00:00:00	Offline	<input checked="" type="checkbox"/>
	SD_device 3	MAC address: 00:00:00:00:00:00	Offline	<input checked="" type="checkbox"/>


Jetpack Parental Controls Device List - OFF

About Jetpack

About Jetpack displays information about your Jetpack, including Internet and roaming status, model and version, wireless and IMEI number, and battery charge level.

On the Jetpack Display


- 1 On the Home screen, navigate to the About Jetpack icon and press the select button to open the Internet Status screen and display status information, including connection, network, technology, signal SNR and roaming.
- 2 Press the select button to navigate to the Jetpack Info screen and display model number, version, wireless number, IMEI, and battery level.
- 3 Press the select button to exit the Jetpack Info screen and return to the Home screen.

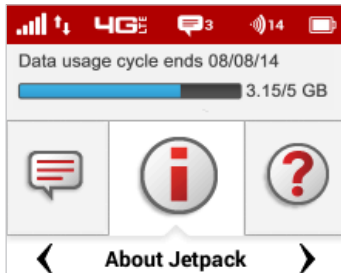

About Jetpack Option



Internet Connection Status

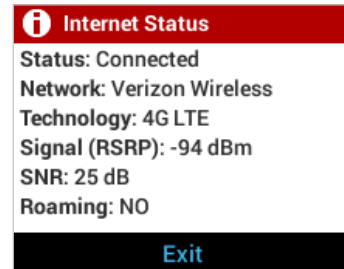

Jetpack Details

On the Jetpack Admin website

The About Jetpack page allows you to view detailed information about Jetpack internet status, device specific information, diagnostics, troubleshooting and support. The About page contains the following menu options:

- **Internet Status** (See [Internet Status](#) on page 95.)
- **Jetpack Info** (See [Jetpack Info](#) on page 97.)
- **Diagnostics** (See [Diagnostics](#) on page 98.)
- **Logs** (See [Logs](#) on page 103.)
- **Jetpack Support** (See [Jetpack Support](#) on page 105.)

Internet Status

The Internet Status page shows Jetpack settings and status and contains the following sections:

- **Internet Status** (See [Internet Status](#) on page 96.)
- **IPv4** (See [IPv4](#) on page 96.)
- **IPv6** (See [IPv6](#) on page 96.)

The screenshot shows the Verizon Jetpack Admin website interface. The top navigation bar includes the Verizon logo, signal strength, Verizon 4G LTE, and a 'Sign Out' button. The left sidebar contains menu items: My Jetpack Home, Data Usage, Connected Devices (with a '1' notification), Jetpack Settings, Messages, Parental Controls, and 'About Jetpack' (highlighted in red). The main content area is titled 'About Jetpack' and has a sub-menu with 'Internet Status' selected. The 'Internet Status' section displays the following information:

Status:	Connected
Network name:	Verizon
Technology:	LTE
Time connected:	00:00:36:51
Received:	2.73 MB
Transmitted:	375.06 KB

Below this, the IPv4 and IPv6 sections are shown with their respective IP addresses:

IPv4	
IP Address:	00:000:00:000
Mask:	000:000:000:000
Gateway:	00:000:00:000
DNS:	000:000:000:000
IPv6	
IP Address:	0000:0000:0000:0000:0000:0000:0000:0000

At the bottom of the page, there is a footer with the Novatel Wireless logo and the text 'MiFi Powered'. Copyright information for 2014 is also present.

About Jetpack - Internet Status

Internet Status

The Internet Status section has the following options:

- **Status** — The status of the Internet connection, usually **Connected** or **Disconnected**.
- **Network name** — The name of the network to which this Jetpack is currently connected.
- **Technology** — The type of technology used to connect to the Internet.
- **Time connected** — How long the Jetpack has been connected to the network.
- **Transmitted** — The amount of data sent to the network.
- **Received** — The amount of data received from the network.

IPv4

The IPv4 section has the following options:

- **IP Address** — The IP address for the Jetpack.
- **Mask** — The subnet mask network setting for the Jetpack. The default value 255.255.255.0 is standard for small (class "C") networks. If you change the LAN IP Address, ensure you use the correct Subnet Mask for the IP address range containing the LAN IP address.
- **Gateway** — The address of the server used to access the Internet.
- **DNS** — The address of the Domain Name Server (DNS).

IPv6


The IPv6 section has the following option:

- **IP address** — The IP address for the Jetpack.

Jetpack Info

The Jetpack Info page contains detailed information about the Jetpack. The Jetpack Info page contains the following sections:

- **Manufacturer** — The manufacturer of the Jetpack.
- **Model** — The model number or name of the Jetpack.
- **My Jetpack version** — The current Jetpack version.
 - **MiFi OS version** — The Jetpack operating system (OS), including its components, version.
 - **Modem FW version** — The current modem firmware version.
 - **Wi-Fi FW version** — The current Wi-Fi firmware version.
 - **Web UI version** — The web user interface version.
 - **Display UI version** — The current user interface version.
 - **PRI version** — The configuration version currently applied to the Jetpack.

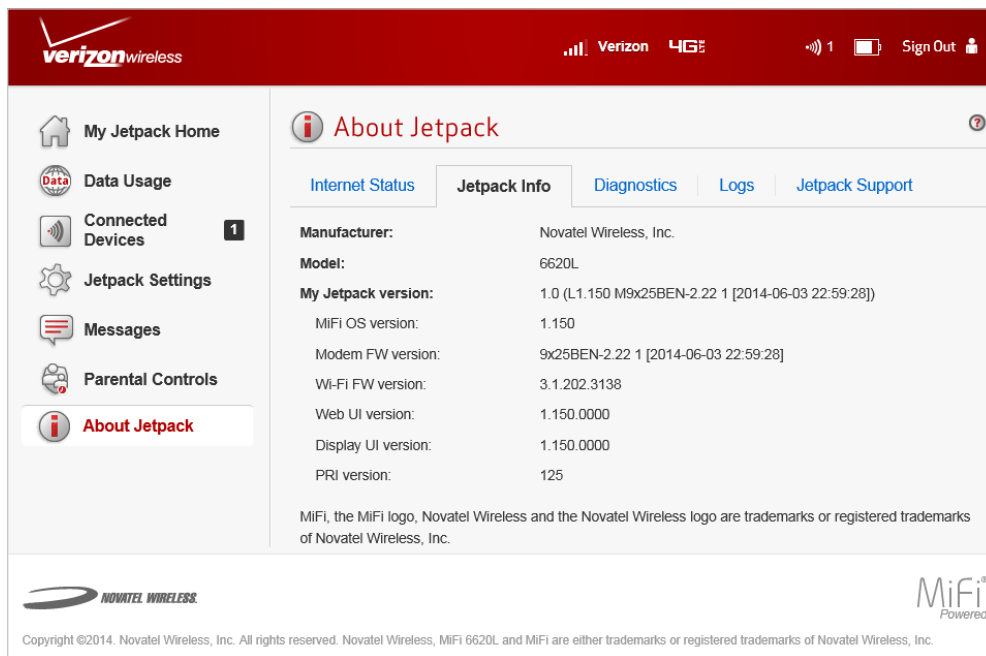

The screenshot displays the Verizon Wireless Jetpack management interface. The top navigation bar includes the Verizon logo, signal strength, Verizon 4G LTE, battery level, and a 'Sign Out' button. The left sidebar contains navigation options: My Jetpack Home, Data Usage, Connected Devices (with a notification badge), Jetpack Settings, Messages, and Parental Controls. The main content area is titled 'About Jetpack' and features tabs for Internet Status, Jetpack Info (selected), Diagnostics, Logs, and Jetpack Support. The 'Jetpack Info' tab displays the following details:

Manufacturer:	Novatel Wireless, Inc.
Model:	6620L
My Jetpack version:	1.0 (L1.150 M9x25BEN-2.22 1 [2014-06-03 22:59:28])
MiFi OS version:	1.150
Modem FW version:	9x25BEN-2.22 1 [2014-06-03 22:59:28]
Wi-Fi FW version:	3.1.202.3138
Web UI version:	1.150.0000
Display UI version:	1.150.0000
PRI version:	125

Below the table, a disclaimer states: 'MiFi, the MiFi logo, Novatel Wireless and the Novatel Wireless logo are trademarks or registered trademarks of Novatel Wireless, Inc.'

The footer of the page includes the Novatel Wireless logo, the MiFi Powered logo, and a copyright notice: 'Copyright ©2014. Novatel Wireless, Inc. All rights reserved. Novatel Wireless, MiFi 6620L and MiFi are either trademarks or registered trademarks of Novatel Wireless, Inc.'

About Jetpack - Internet Status

Diagnostics

The Diagnostics page shows information about the Jetpack firmware and other system-level information. You can also view the system log. This page is used mostly for troubleshooting and is not required for normal operation. The Diagnostics page contains the following sections:

- **Modem** (See [Modem](#) on page 99.)
- **4G LTE Network** (See [4G LTE Network](#) on page 100.)
- **GSM/UMTS/HSPA Network** (See [4G LTE Network](#) on page 100.)
- **3G Network (eHRPD/EVDO/1xRTT)** (See [GSM/UMTS/HSPA Network](#) on page 100.)
- **Field Test** (See [Field Test](#) on page 102.)


The screenshot displays the Verizon Jetpack Diagnostics page. The top navigation bar includes the Verizon logo, signal strength indicators, and a 'Sign Out' button. The left sidebar contains navigation options: My Jetpack Home, Data Usage, Connected Devices (with a notification badge), Jetpack Settings, Messages, Parental Controls, and About Jetpack (highlighted). The main content area is titled 'About Jetpack' and includes tabs for Internet Status, Jetpack Info, Diagnostics (selected), Logs, and Jetpack Support. A disclaimer states: 'This detailed information is used only for troubleshooting and technical support.' The page is organized into sections: **Modem** (listing Phone number, IMEI, IMEISV, MEID, FW version, SIM status, ICCID, MIN, ESN, Home SID, ERI version, and PRL version), **4G LTE Network** (listing Status, Network operator, Signal strength, SNR, Band, and Roaming), **GSM/UMTS/HSPA Network**, and **3G Network (eHRPD/EVDO/1XRTT)**. A 'Field Test' button is located at the bottom of the diagnostics section. The footer includes the Novatel Wireless logo and copyright information, along with the 'MiFi Powered' logo.

About Jetpack - Diagnostics

Modem

The Modem section has the following options:

- **Phone number (MDN)** — The Phone Number or Mobile Directory Number (MDN) is used by the mobile data network to identify this particular data service.
- **MEID** — The Mobile Equipment Identifier (MEID) is used by the mobile data network to identify this particular modem.
- **IMEI** — The International Mobile Equipment Identity (IMEI) number for the Jetpack.
- **IMEISV** — The International Mobile Equipment Identity (IMEI) combined with an approval number for the Jetpack.
- **FW version** — The modem firmware version.
- **SIM status** — Status of the SIM card. If the SIM card is missing, or this field indicates some form of SIM error, the Jetpack will not be able to connect to the mobile network.
- **ICCID** — The ID number assigned to the SIM Card.
- **MIN (MSID)** — The Mobile Identification Number (MIN) or Mobile Station ID (MSID) is the number associated with the home service provider and the wireless phone number.
- **ESN** — The Electronic Serial Number, which is either blank or a pseudo-ESN which is not guaranteed to be unique for devices that use an MEID.
- **Home SID** — System identifier for the home network.
- **ERI version** — The Enhanced Roaming Indicator version that is currently installed.
- **PRL version** — The version of the Preferred Roaming List (PRL), which tells the modem which non-home carrier towers should provide roaming coverage.

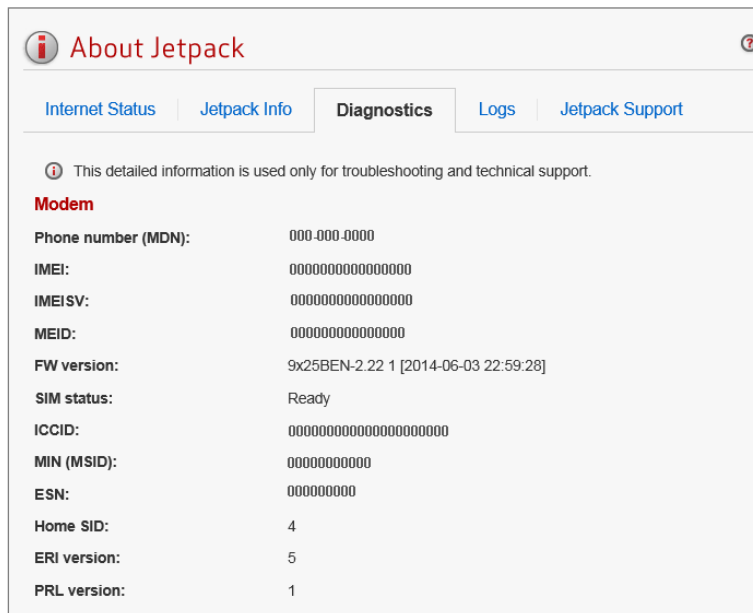

The screenshot shows the 'About Jetpack' interface with the 'Diagnostics' tab selected. A note indicates that the information is for troubleshooting. Below is a table of modem-related data:

Modem	
Phone number (MDN):	000-000-0000
IMEI:	0000000000000000
IMEISV:	0000000000000000
MEID:	0000000000000000
FW version:	9x25BEN-2.22 1 [2014-06-03 22:59:28]
SIM status:	Ready
ICCID:	00000000000000000000
MIN (MSID):	0000000000
ESN:	00000000
Home SID:	4
ERI version:	5
PRL version:	1

About Jetpack Diagnostics - Modem

4G LTE Network

The 4G LTE Network section has the following options:

- **Status** — Status of the network (Disabled, Not available, or Available).
- **Network operator** — The vendor that currently provides wireless access.
- **Signal strength** — Indicates the signal strength for LTE.
- **SNR** — A measure of signal quality; the higher the number the better the signal.

4G LTE Network	
Status:	Available
Network operator:	Verizon
Signal strength (RSRP):	-86 dBm
SNR:	28
Band:	4
Roaming:	None

About Jetpack Diagnostics - 4G LTE Network

GSM/UMTS/HSPA Network

The GSM/UMTS/HSPA Network section has the following options:

- **Status** — Status of the network (Disabled, Not available, or Available).
- **Network operator** — The vendor that currently provides wireless access.
- **Technology** — The current technology in use for the GSM/WCDMA/HSPA network. Possible values, from slowest to fastest are GPRS, EDGE, UMTS, HSDPA, HSUPA, HSPA+, and HSPA+ DC.
- **PLMN ID** — The name and/or ID of the Public Land Mobile Network.
- **Cell ID** — .The value identifies the cell tower currently in use.
- **RSSI** — Indicates the RSSI for the GSM/UMTS/HSPA signal. RSSI is a measure of signal strength in decibels, relative to one milliwatt.
- **Roaming** — Indicates if the current connection is a roaming connection.

GSM/UMTS/HSPA Network	
Status:	Not Available
Network operator:	
Technology:	
PLMN ID:	
Cell ID:	
RSSI:	
Roaming:	

About Jetpack Diagnostics - GSM/UMTS/HSPA Network

3G Network (eHRPD/EVDO/1xRTT)

The 3G Network (eHRPD/EVDO/1xRTT) section has the following options:

- **Status** — Status of the network (Disabled, Not available, or Available).
- **Network operator** — The vendor that currently provides wireless access.
- **RSSI (1x)** — Indicates the RSSI for the 1xRTT signal.
- **RSSI (EVDO)** — Indicates the signal strength for the EVDO/eHRPD signal.
- **Technology** — The type of technology used to connect to the Internet.
- **Ec/Io** — A measure of how clean the signal is, and is a type of signal-to-noise ratio.
- **SID** — System identifier for the network.
- **Roaming** — Indicates if the current connection is a roaming connection.



About Jetpack Diagnostics - 3G Network

Field Test

Click on **Field Test** to provide a list of low-level network parameters which can be helpful for technical support staff when they troubleshoot network connectivity issues.

```
Diagnosics
=====
Diagnostic Data
=====


NAM:
Mobile Directory Number (MDN): 8588771678
IMSI_S: 311480058397973
Mobile Network Code (MNC): 480
Mobile Country Code (MCC): 311
Primary CDMA Channel A: 283
Secondary CDMA Channel A: 691
Primary CDMA Channel B: 384
Secondary CDMA Channel B: 777
Access Overload Class (ACCOLC): 9
Register On Home SID: Enabled
Register On Foreign SID: Enabled
Register On Foreign NID: Enabled
MIP Mode: MIP preferred
MIP Registration Retries: 2
MIP Registration Retries Timeout: 3
Reverse Tunneling: 0
DNS Primary: N/A
DNS Secondary: N/A
Supplemental Channel Request Message (SCRM): 1
Network ID (NID): 0
Error Rate: [0]:65535 [1]:65535
RSSI: [0]:66 [1]:125
Ec/Io: [0]:63 [1]:5
latitude: 0
longitude: 0
Tx Power (EVDO): 0
Rx Power 0 (EVDO): 0
Rx Power 1 (EVDO): 0
Packet Zone ID: 0
Call State: Connected
Dormant State: Active
MAC Index: N/A
Subnet Mask: 255.255.255.252
Color Code: 0
UATI024: 00000000 00000000 00000000 00000000
PN Offset: N/A
```

About Jetpack Diagnostics - Field Test

Logs

The Logs page allows you to turn logs ON/OFF, and to delete system logs.

NOTE Logs record various operations and are used for troubleshooting and are not needed for normal Jetpack operation.

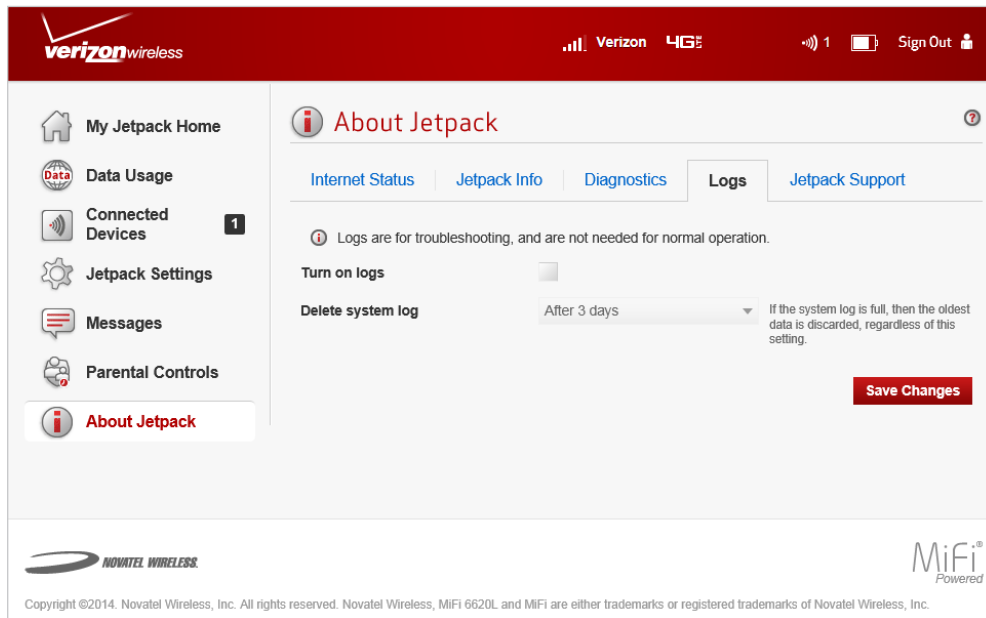


About Jetpack Diagnostics - Field Test

Turn on Logs


To turn on system logs:

- 1 Select the checkbox next to **Turn on logs**.

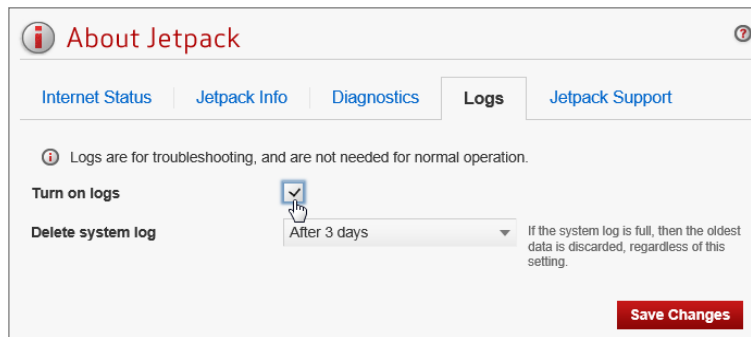

About Jetpack Logs - Turn On

- 2 Click **Save Changes**.

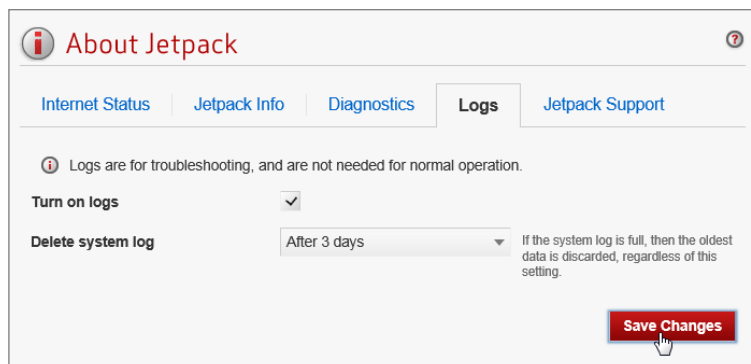


About Jetpack Logs - Save Changes

Turn Off Logs


To turn off system logs:

- 1 Deselect the checkbox next to **Turn on logs**.

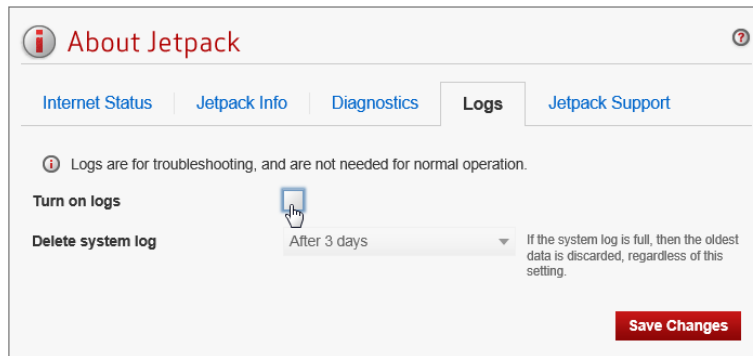

About Jetpack Logs - Turn Off

- 2 Click **Save Changes**.

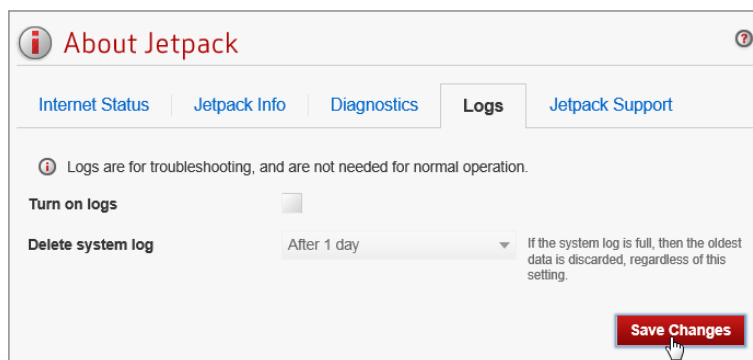


About Jetpack Logs - Save Changes

Delete System Log


To delete a system log:

- 1 Select the checkbox next to **Turn on logs**.

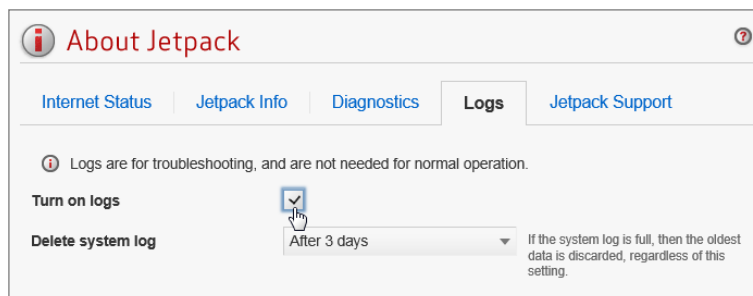

About Jetpack Logs - Turn On

- 2 Select the appropriate time period for the deletion of system logs from the dropdown menu next to **Delete system log**. The choices are after 1 - 4 days. If the system log is full, then the oldest data is discarded, regardless of this setting.

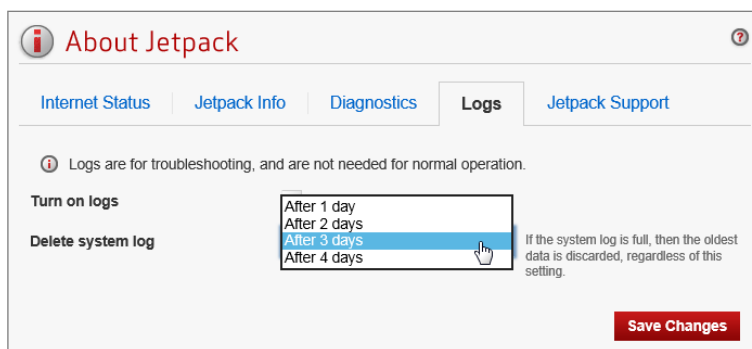


About Jetpack Logs - Set Delete System Log

- 3 Click **Save Changes**.

Jetpack Support

Click on **Jetpack Support** to link directly to the Quick Links, Self Support, and Customer Care sections of the web interface. The Jetpack Support page contains the following sections:

- **Quick Links** (See [My Account & Tools](#) on page 38.)
- **Self-Service Support** (See [Help & Support](#) on page 44.)
- **Customer Care** (To contact Verizon Customer Care, call **(800) 922-0204**.)

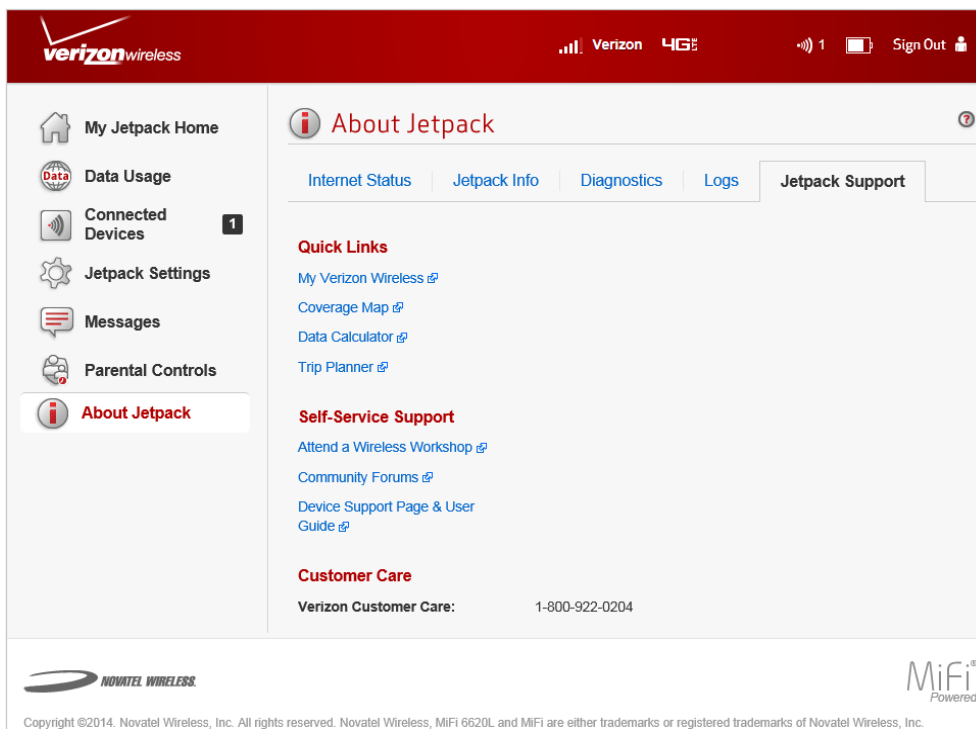

About Jetpack - Jetpack Support


Help

Help displays directions for connecting to the Jetpack Admin website and accessing Advanced Features, WPS, and Unlock SIM. The Tips option provides device usage information.

On the Jetpack Display

To display Help options:

- 1 On the Home screen, navigate to the Help icon and press the select button to open the Help screen options. Help options include **Jetpack Admin website**, **Advanced Features**, **Wi-Fi Protected Setup (WPS)** **Unlock SIM**, and **Tips**.
- 2 Use the up/down scroll buttons to highlight the desired Help option, then press the select button to display option choices and information.
- 3 Use the down scroll button to highlight Exit or Back, and press the select button to return to the Help options.

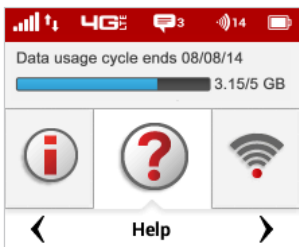


Help Option




Select Jetpack Admin Website



Jetpack Admin Website Info

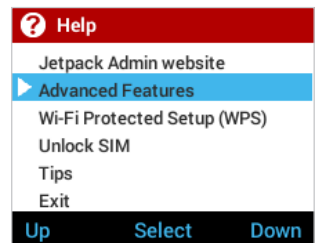


Select Advanced Features

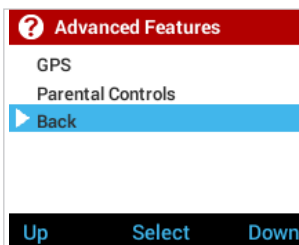


Return to Help Options



Select WPS

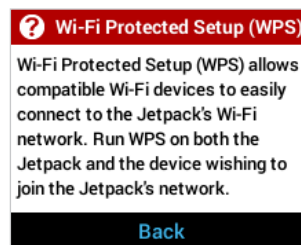

WPS Info

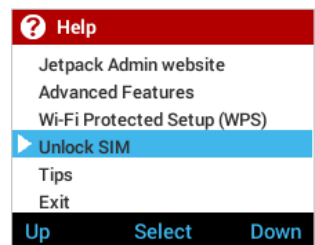


Unlock SIM



Unlock SIM Info



Select TIPS

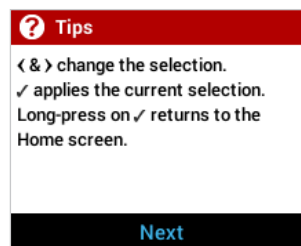

Tips Info



Return to Home page

- 4 Use the right/down scroll button to highlight Exit and return to the Home screen.

4

Troubleshooting

Overview
Common Problems and Solutions
Technical Support

Overview

When properly installed, the Jetpack is a highly reliable product. Most problems are caused by one of these issues:

- System resources required by the Jetpack are being used by other devices.
- Network coverage is unavailable due to coverage area, an account problem, or a network problem.

The following tips can help solve many common problems encountered while using the Jetpack.

First Steps

- Make sure you are using the Jetpack in the correct geographic region.
- Ensure that your wireless coverage extends to your current location.
- Ensure you have an active subscription plan.
- Restarting your computer and your Jetpack can resolve many issues.

IMPORTANT Before contacting support, be sure to restart both your computer and your MiFi 6620L, and ensure that your SIM card is inserted correctly.

Common Problems and Solutions

The following are some common problems and solutions.


My Jetpack just powered off without my pressing the power button. Why?

This may occur under any of the following circumstances.

- Pressing the Master Reset button
- Jetpack automatically restarting after configuration changes
- Switching profiles
- Restoring the configuration settings
- Battery depletion

To restore battery power, follow these steps.

- ① Manually press and hold the power button to turn it back on.
- ② If the battery is depleted, charge the Jetpack with the wall charger.

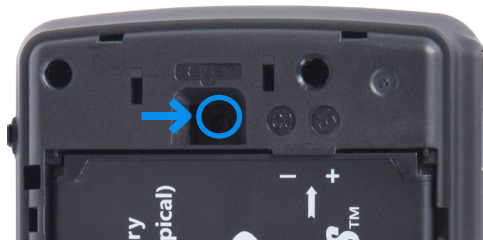

How do I reset the Jetpack back to factory settings?

The master reset button is in a small hole located on the bottom of the Jetpack, underneath the battery cover. This button returns the Jetpack to factory settings, including re-setting the Wi-Fi Name (SSID) and Wi-Fi Password. To reset the Jetpack, follow these steps.

- ① Place one end of an unfolded paper clip into the master reset button hole.
- ② Press the reset button with the unfolded paper clip until the display shows "MiFi Powering Off" (about five to six seconds), then your Jetpack will restart.

WARNING! The "Reset to Factory Defaults" operation overwrites ALL existing settings. If the Wi-Fi settings change, you will lose this connection, and need to reconnect using the new settings.

How do I reset the Access Point and Router settings back to factory settings?

To reset the access point and router settings, follow these steps.

- 1 Connect to Jetpack Settings by connecting your computer to the MiFi wireless network and going to <http://my.jetpack> or <http://192.168.1.1> in your browser.
- 2 Connect to the Jetpack Backup and Restore page. The Backup and Restore page has a **Restore to Factory Defaults** button. This button resets all Access Point and Router settings to their factory default values. All existing settings are lost. (See Backup and Restore on page 66).

No service is available.



- Reorient your device. If you are inside a building or near a structure that may be blocking the signal, change the position or location of the device. For example, try moving your device close to a window.
- You are outside your coverage area, or there may be a problem with your account. Check with your network operator.

The Jetpack has no power or the device screen does not display when the power button is pressed.

- Make sure the battery is properly seated in the device.
- Make sure the battery is fully charged. Plug in the AC charger for at least 3 hours.



I forgot my Wi-Fi Password.

- Select **Wi-Fi Name/Password** to display your Wi-Fi Name (SSID) and Wi-Fi Password.

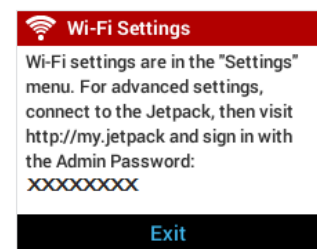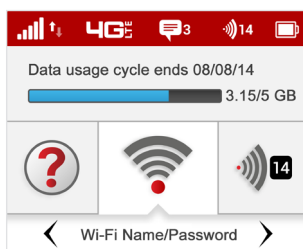

I forgot my Jetpack Admin website Password.

- Select **Help > Jetpack Admin website** to display the Jetpack Admin website URL and Admin Password.

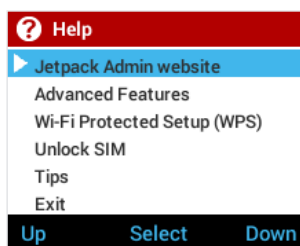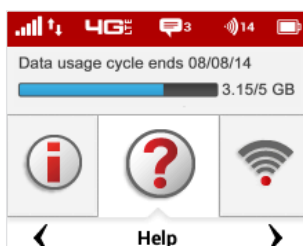

I cannot connect to my Jetpack.

- Make sure the Network Signal Strength indicator displays at least one bar and that the type of network is displayed on the device Home page.
- Make sure your Windows Wi-Fi adapter/Mac AirPort is turned on. (Refer to your computer's Help if you need assistance.)

① Open your wireless network connection list:

Windows: Right-click icon and select **View Available Networks**.

Mac: Pull down list from AirPort icon.

② Windows: Click **Connect**.

Mac: Select the network name.

When your device is connected to the network, the Connected Devices icon in the status bar will show a connected device.

I see the network name but cannot connect to my Jetpack.

- Go to **Wi-Fi Name/Password** to check that you are using the correct Wi-Fi password.

How do I disconnect from the network?

From the Jetpack device:

① To disconnect from the Wi-Fi network, select **Settings > Wi-Fi > Turn Off**.

From the Jetpack Admin network:

① Go to <http://my.jetpack> to open the My Jetpack Home page.

② Sign In using your Web Interface password.

③ Click **Sign Out**.

How can I find out how many users are connected to my Jetpack?

From the Jetpack device:

- Check the **Connected Devices** icon in the status panel on the Home page of your Jetpack. The number of connected devices is displayed to the right of the icon.

From the Jetpack Admin website:

- Check the **Connected Devices** icon in the status panel on the My Jetpack Home page of your Jetpack Admin website. The number of connected devices is displayed to the right of the icon. To get detailed information on connected and block devices, click **Connected Devices** on the navigation panel.

How can I get detailed information about the devices that are connected to my Jetpack?

- 1 Select **Connected Devices > Wi-Fi Devices** to display the type, name, and IP address of each device connected to the Jetpack Network.
- 2 Select **Connected Devices > USB Tethering** to display the type, name, and IP address of any device connected to the Jetpack via the Universal Charging port.
- 3 To display more detailed information for connected devices, go to <http://my.jetpack> to open the Home page, then Sign In using your Jetpack Admin Password. Select **Connected Devices** from the Navigation panel to display additional details for all currently connected and blocked devices.

How do I check the firmware version installed on my Jetpack?

- Select **Software Update** to display the current version installed. To check for new update, select **Software Update > Next > Yes**.

How do I check the battery level of my Jetpack?

- Check the battery icon on the status panel on the Home page of the Jetpack device.

How do I turn off my Jetpack?

- Press and hold the Power button until the display shows **MiFi**.

How can I tell that my Jetpack is still on after the device screen goes off?

- When the display is off (sleep mode) and the Jetpack is turned on, the blue Power indicator on the front panel of the Jetpack blinks.



Technical Support

IMPORTANT Before contacting support, be sure to re-start both your computer and the MiFi 6620L.

Technical Support

Contact your service provider for assistance. When calling, you may be asked for the wireless number of your Jetpack. To find your Jetpack's wireless number, go to **About Jetpack > Jetpack Info** on your device, or **<http://my.jetpack>** on the Web User Interface.

Product Specifications and Regulatory Information

Product Specifications
Regulatory Statements
Wireless Communications
Limited Warranty and Liability
Safety Hazards
Proper Battery Use and Disposal

Product Specifications

General

Name:	Verizon Jetpack® 4G LTE Mobile Hotspot
Model:	MiFi® 6620L
Approvals:	FCC (North America)
Weight:	130 g / 4.6 oz
Dimensions:	93.98 mm x 67.06 mm x 19.30 mm, 3.7 in x 2.64 in x 0.76 in
Wireless Network – Tri Mode:	LTE, CDMA, LTE/UMTS/GSM
Wireless Network – Wi-Fi Mode	802.11 a/b/g/n 2.4 GHz/5.0 GHz
Default SSID	MiFi6620L-XXXX
Battery	
• Size	4000 mAh
• Time required for full charge	3 hours (when not in use)
• Usage	Up to 20 hours
Chip Set:	QUALCOMM® MDM9625
Interface Type:	Type B USB Port for Micro USB, used by the wall charger Type A USB port, used by Universal Charging feature
Memory:	RAM = 128MB, LPDDR FLASH = 256MB, NAND

Technology/Bands

Technology:	LTE, CDMA 1X/EV-DO Rev 0/A, HSPA+, GPRS/EDGE
Band Designation:	LTE Category 4 CDMA 1x/EV-DO RA; 800/1900 MHz
Bands:	Domestic – B13 (700MHz), B4 (1700MHz) Quad band HSPA+, Quad band GPRS/EDGE
	LTE: B13 (700MHz)
	LTE: B4 (1700MHz)
	GSM/EDGE: B5/B8/B3/B2 (850/900/1800/1900MHz)
	UMTS/HSPA/HSPA+: B5/B8/B2/B1 (850/900/1900/2100MHz)

Environmental

Operating Temperature:	-10° C to 55° C (x°F to xx° F)
Storage Temperature:	-30° C to 70° C (x° F to xx° F)
Battery Charging	0° C to 40° C (x)
Relative Humidity	The device shall be fully operational up to a maximum of 93% relative humidity (non-condensing).
Drop:	<p>The device accessories (battery and charger) shall withstand drop from 1.5m onto hard surface (stone, concrete, metal) without mechanical, electrical, or functional damage, except for slight scratches or mars.</p> <p>The housing will withstand drop from 1.25m onto hard surface (stone, concrete, metal) without mechanical, electrical, or functional damage, except for slight scratches or mars</p>
Electrostatic Discharge	The device shall be able to withstand the following ESD: 8kV contact / 15kV air discharge.
Vibration Stability:	The device shall be able to withstand the following vibration profile: 10-2000Hz, 1.5G acceleration, 3 axes.

Regulatory Statements

Federal Communications Commission Notice (FCC – United States)

Electronic devices, including computers and wireless modems, generate RF energy incidental to their intended function and are therefore subject to FCC rules and regulations.

This equipment has been tested to, and found to be within the acceptable limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment.

This equipment generates radio frequency energy and is designed for use in accordance with the manufacturer's user manual. However, there is no guarantee that interference will not occur in any particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

This device complies with Part 15 of the Federal Communications Commission (FCC) Rules. Operation is subject to the following two conditions.

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

WARNING: DO NOT ATTEMPT TO SERVICE THE WIRELESS COMMUNICATION DEVICE YOURSELF. SUCH ACTION MAY VOID THE WARRANTY. THE Jetpack MODEM IS FACTORY TUNED. NO CUSTOMER CALIBRATION OR TUNING IS REQUIRED. CONTACT NOVATEL WIRELESS TECHNICAL SUPPORT FOR INFORMATION ABOUT SERVICING YOUR WIRELESS COMMUNICATION DEVICE.

FCC CAUTION: Any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

MODIFICATIONS: The FCC requires that you be notified that any changes or modifications made to this device that are not expressly approved by Novatel Wireless, Inc. may void your authority to operate the equipment.

NOTE: The Radio Frequency (RF) emitter installed in your modem must not be located or operated in conjunction with any other antenna or transmitter, unless specifically authorized by Novatel Wireless Technologies.

RF Exposure Content

FCC Equipment Authorization ID: PKRNVWMIFI6620

This device is authorized for use in mobile and portable applications.

This product has been evaluated for SAR and meets the FCC Guidelines for exposure to radio waves.

For better signal reception, coverage range and data throughput, do not place the router near any physical obstruction, including in a pocket or in close proximity of any object. For RF Safety, a mandatory minimum of 10 mm (1 cm) should be maintained between the device and any part of a human body when using the device. Increasing the separation between the device and the body will result in better reception and reduced exposure to radio energy.

Wireless Communications

IMPORTANT Due to the transmission and reception properties of wireless communications, data occasionally can be lost or delayed.

This can be due to the variation in radio signal strength that results from changes in the characteristics of the radio transmission path. Although data loss is rare, the environment where you operate the modem might adversely affect communications.

Variations in radio signal strength are referred to as fading. Fading is caused by several different factors including signal reflection, the ionosphere, and interference from other radio channels.

Novatel Wireless or its partners will not be held responsible for damages of any kind resulting from the delays or errors in data transmitted or received with the Jetpack device, or failure of the MiFi 6620L device to transmit or receive such data.

Limited Warranty and Liability

Novatel Wireless, Inc. warrants for the 12-month period immediately following receipt of the Product by Purchaser that the Product will be free from defects in material and workmanship under normal use. THESE WARRANTIES ARE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The exclusive remedy for a claim under this warranty shall be limited to the repair or replacement, at Novatel Wireless' option, of defective or non-conforming materials, parts or components. The foregoing warranties do not extend to (I) non conformities, defects or errors in the Products due to accident, abuse, misuse or negligent use of the Products or use in other than a normal and customary manner, environmental conditions not conforming to Novatel Wireless' specification, of failure to follow prescribed installation, operating and maintenance procedures, (II) defects, errors or nonconformities in the Product due to modifications, alterations, additions or changes not made in accordance with Novatel Wireless' specifications or authorized by Novatel Wireless, (III) normal wear and tear, (IV) damage caused by force of nature or act of any third person, (V) shipping damage, (VI) service or repair of Product by the purchaser without prior written consent from Novatel Wireless, (VII) products designated by Novatel Wireless as beta site test samples, experimental, developmental, reproduction, sample, incomplete or out of specification Products, or (VIII) returned products if the original identification marks have been removed or altered.

Safety Hazards

Do not operate the Jetpack in an environment that might be susceptible to radio interference resulting in danger, specifically:

Areas where prohibited by the law

Follow any special rules and regulations and obey all signs and notices. Always turn off the host device when instructed to do so, or when you suspect that it might cause interference or danger.

Where explosive atmospheres might be present

Do not operate your device in any area where a potentially explosive atmosphere might exist. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Be aware and comply with all signs and instructions.

Users are advised not to operate the device while at a refueling point or service station. Users are reminded to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. Potential locations can include gas stations, below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Near medical and life support equipment

Do not operate your device in any area where medical equipment, life support equipment, or near any equipment that might be susceptible to any form of radio interference. In such areas, the host communications device must be turned off. The device can transmit signals that could interfere with this equipment.

On an aircraft, either on the ground or airborne

In addition to FAA requirements, many airline regulations state that you must suspend wireless operations before boarding an airplane. Please ensure that the modem is turned off prior to boarding aircraft in order to comply with these regulations. The modem can transmit signals that could interfere with various onboard systems and controls.

While operating a vehicle

The driver or operator of any vehicle should not operate a wireless data device while in control of a vehicle. Doing so will detract from the driver or operator's control and operation of that vehicle. In some countries, operating such communications devices while in control of a vehicle is an offense.

Electrostatic discharge (ESD)

Electrical and electronic devices are sensitive to electrostatic discharge (ESD). Macintosh native connection software might attempt to reinitialize the device should a substantial electrostatic discharge reset the device. If the software is not operational after an ESD occurrence, then restart your computer.

Proper Battery Use and Disposal

IMPORTANT In event of a battery leak:

- Do not allow the liquid to come in contact with the skin or the eyes. If contact has been made, wash the affected area with large amounts of water and seek medical advice.
 - Seek medical advice immediately if a battery has been swallowed.
 - Communicate the appropriate steps to be taken if a hazard occurs. Due to the transmission and reception properties of wireless communications, data occasionally can be lost or delayed.
-

Please review the following guidelines for safe and responsible battery use.

- Do not disassemble or open, crush, bend or deform, puncture, or shred.
- Do not modify or remanufacture, attempt to insert a foreign object into the battery, immerse or expose to water or other liquids, or expose to fire, explosion, or other hazard.
- Only use the battery for the system for which it was specified.
- Only use the battery with a charging system that has been qualified with the system per this standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow a metallic or conductive object to contact the battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard. Use of an unqualified battery may present a risk of fire, explosion, leakage, or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the Jetpack or battery. If the Jetpack or the battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion, or other hazard.

Glossary

Glossary

- **1X** — The core CDMA2000 wireless air interface standard. The designation “1X”, meaning 1 times Radio Transmissio Technology, indicates the same radio frequency (RF) bandwidth as IS-95: a duplex pair of 1.25 MHz channels. The 1X standard supports packet data speeds of up to 153 kbit/s with real world data transmission averaging 80-100 kbit/s in most commercial applications.
- **3G** — Third Generation. 3G refers to the third generation of mobile telephony technology. 3G telecommunication networks support services that provide an information transfer rate of at least 200 kbit/s. However, many services advertised as 3G provide higher speed than the minimum technical requirements for a 3G service. 3G finds application in wireless voice telephony, mobile Internet access, fixed wireless Internet access, video calls and mobile TV.
- **4G LTE** — Fourth Generation Long Term Evolution. LTE is a standard for wireless data communications technology and an evolution of the GSM/UMTS standards. The goal of LTE is to increase the capacity and speed of wireless data networks using new DSP (digital signal processing) techniques and modulations that were developed around the turn of the millenium. A further goal is the redesign and simplification of the network architecture to an IP-based system with significantly reduced transfer latency compared to the 3G architecture. The LTE wireless interface is incompatible with 2G and 3G networks, so that it must be operated on a separate wireless spectrum.
- **802.11 (a, b, g, n)** — A set of WLAN communication standards in the 2.4, 3.6 and 5 GHz frequency bands.
- **bps** — Bits per second. The rate of data flow.
- **Broadband** — High-capacity high-speed transmission channel with a wider bandwidth than conventional modem lines. Broadband channels can carry video, voice, and data simultaneously.
- **CDMA** — Code Division Multiple Access. It is the underlying channel access method used by some mobile phone standards.
- **DHCP** — Dynamic Host Configuration Protocol. Software found in servers and routers that automatically assigns temporary IP addresses to clients logging into an IP network.
- **DHCP Server** — A server or service with a server that assigns IP addresses.
- **DNS** — Domain Name System. A system for converting host names and domain names into IP addresses on the Internet or on local networks that use the TCP/IP protocol.
- **EV-DO Rev 0** — CDMA EV-DO Rev. 0 is a leading-edge wireless technology with higher data rates and higher system capacity. It is a fully backward compatible standard and remains interoperable with deployed EV-DO networks and devices around the world. Rev 0 provides access to mobile devices with forward link speeds of up to 2.4 Mbit/s, and reverse link speeds up to 152 kbit/s. For more information, visit www.cdg.org.
- **EV-DO Rev A** — CDMA EV-DO Rev. A is a leading-edge wireless technology with higher data rates and higher system capacity. It is a fully backward compatible standard and remains interoperable with deployed EV-DO networks and devices around the world. Rev A provides access to mobile devices with forward link speed of up to 3.1 Mbit/s, and reverse link speeds up to 1.8 Mbit/s. The increased data rates on Rev. A's physical layer enable richer applications and services. For more information, visit www.cdg.org.

- **Firmware** — A computer program embedded in an electronic device. Firmware usually contains operating code for the device.
- **GB** — Gigabyte. A multiple of the unit byte for digital information storage. Usage depends on context. When referring to disk capacities it usually means 10^9 bytes. It also applies to data transmission quantities over telecommunication circuits.
- **Hotspot** — A Wi-Fi (802.11) access point or the area covered by an access point. Used for connecting to the Internet.
- **HTTP** — Hypertext Transfer Protocol. An application-level protocol for accessing the World Wide Web over the Internet.
- **IEEE** — Institute of Electrical and Electronics Engineers. An international technical/professional society that promotes standardization in technical disciplines.
- **IMEI** — International Mobile Equipment Identity. Used in LTE networks to identify the device. It is usually printed on the device and can often be retrieved using a USSD code.
- **IP** — Internet Protocol. The mechanism by which packets are routed between computers on a network.
- **IP Type** — The type of service provided over a network.
- **IP address** — Internet Protocol address. The address of a device attached to an IP network (TCP/IP network).
- **ISP** — Internet Service Provider. Also referred to as the service carrier, an ISP provides Internet connection service. (*See* Network Operator)
- **Kbps** — Kilobits per second. The rate of data flow.
- **LAN** — Local Area Network. A type of network that lets a group of computers, all in close proximity (such as inside an office building), communicate with one another. It does not use common carrier circuits though it can have gateways or bridges to other public or private networks.
- **MAC Address** — Media Access Control. A number that uniquely identifies each network hardware device. MAC addresses are 12-digit hexadecimal numbers. This is also known as the physical or hardware address.
- **Mbps** — Megabits per second. The rate of data flow.
- **MSID** — Mobile Station IDentifier. A number for a mobile phone that identifies that phone to the network. These numbers are carrier specific.
- **Network Operator** — The vendor who provides your wireless access. Known by different names in different regions, some examples are: wireless provider, network provider, and service provider.
- **Network Technology** — The technology on which a particular network provider's system is built; such as CDMA or EVDO.
- **Port** — A virtual data connection used by programs to exchange data. It is the endpoint in a logical connection. The port is specified by the port number.
- **Port Forwarding** — A process that allows remote devices to connect to a specific computer within a private LAN.

- **Port Number** — A 16-bit number used by the TCP and UDP protocols to direct traffic on a TCP/IP host. Certain port numbers are standard for common applications.
- **PRL** — Preferred Roaming List. A list that your wireless phone or device uses to determine which networks to connect with when you are roaming. (Network operator specific).
- **Protocol** — A standard that enables connection, communication, and data transfer between computing endpoints.
- **Proxy** — A firewall mechanism that replaces the IP address of a host on the internal (protected) network with its own IP address for all traffic passing through it.
- **Router** — A device that directs traffic from one network to another.
- **SIM** — Subscriber Identification Module. Found in LTE and GSM network technology, the SIM is a card containing identification information for the subscriber and their account. The SIM card can be moved to different devices.
- **SSID** — Service Set Identifier. The name assigned to a Wi-Fi network.
- **TCP/IP** — Transmission Control Protocol/Internet Protocol. The set of communications protocols used for the Internet and other similar networks.
- **USB** — Universal Serial Bus. A connection type for computing device peripherals such as a printer, mobile modem, etc. USB connectors may be used for data transfer or charging.
- **USB Port Types** — The USB ports on computers and hubs have a rectangular Type A socket, and peripheral devices have a cable with a Type A plug. Peripherals that do not have an attached cable have a square Type B socket on the device and a separate cable with a Type A and Type B plug. Ports and connectors are available in different sizes (for example, standard, mini, and micro).
- **VPN** — Virtual Private Network. A secure private network that runs over the public Internet. Commonly used to connect to an office network from elsewhere.
- **WCDMA** — Wideband Code Division Multiple Access. An air interface standard found in 3G mobile telecommunications networks. The most-commonly used member of the UMTS family.
- **WWAN** — Wireless Wide Area Network. A public network that extends beyond architectural, geographical, or political boundaries (unlike a LAN, which is usually a private network located within a room, building, or other limited area).
- **Wi-Fi** — Wireless Fidelity. Any system that uses the 802.11 standard developed and released in 1997 by the IEEE.
- **Wi-Fi Client** — A wireless device that connects to the Internet via Wi-Fi.
- **WPA/WPA2** — Wi-Fi Protected Access. A security protocol for wireless 802.11 networks from the Wi-Fi Alliance.